


SMART-STAT, SMART-BATT, RCT/S-MLT remote systems:

Important: New or fully charged batteries are essential for proper operation of the multi-function transmitter. The transmitter operates on 2 AAA-size 1.5V batteries. Use alkaline batteries for longer battery life and maximum operational performance.

Insert 2 AAA-size 1.5V batteries into the battery compartment on the back of the transmitter.

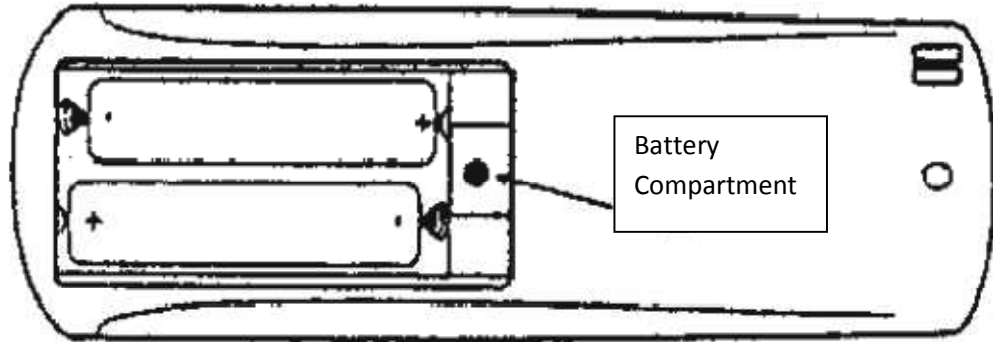

When the batteries are correctly inserted, the display screen will show numbers again.

NOTE: If the transmitter is activated from a very cold condition it may be necessary to allow the transmitter to stabilize to room temperature (could take up to 15 minutes) before accurate room temperatures are displayed on the screen.

NOTE: LCD screen is equipped with a "backlite" for easier viewing of LCD screen. Backlite illuminates when a function button is depressed. After 5 seconds elapses, LCD screen will return to its normal state.

SMART-BATT ONLY:

Receiver Batteries

The batteries must be replaced at least once every season, or as needed. It is recommended to replace at the beginning of the burn season with 4AA alkaline batteries.

RC300:

Remove battery cover from the back of the remote by sliding it down and install 3 AAA batteries.



When the batteries are correctly inserted, the display screen will show numbers again.

RC200:

Remove battery cover from the back of the remote by sliding it down and install A23 battery.



When the batteries are correctly inserted, the display screen will show numbers again.

RC100:


Insert the two CR2032 batteries (supplied) into the circular slots with the positive side of batteries facing up.



When the batteries are correctly inserted, the remote will turn the appliance on/off again.

Simplifyre Electric Fireplace series remote transmitters:

Remove battery cover from the back of the remote by sliding it down and install A23 battery.

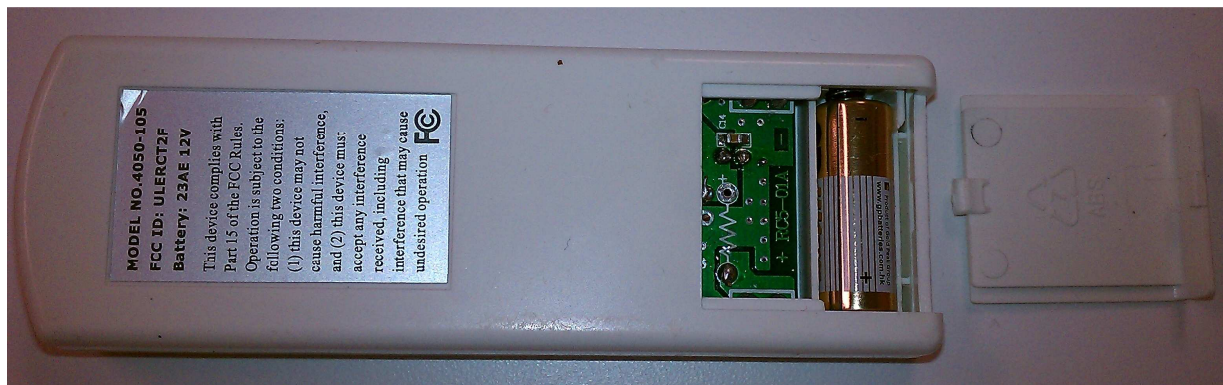

When the batteries are correctly inserted, the remote will turn the appliance on/off again.