



IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.



Stocked at Depot

ITEM	DESCRIPTION	COMMENTS	PART NUMBER	
	Electric Log Assy	No longer available	4030-055	
1	240VAC Heater Assy	No longer available	SRV4030-539EV	
2	Upper Glass Retainer	No longer available	4030-218	
3	Lenticular Lens	No longer available	4030-840	
4	Acrylic Panel	No longer available	4038-810	
5	Grate Assembly	No longer available	4030-896	
6	Rock Retainer	No longer available	4030-219	
7	Light Tray Assembly	No longer available	SRV-020	
7.1	Flame Element Kit	No longer available	4030-200	
7.2	Halogen Light	No longer available	33961	
7.3	Motor w/Vinyl Cover Assy	No longer available	4030-883	
8	31 in. Door Track	No longer available	4030-225	
9	Screen & Rod Assy	No longer available	4030-050	
10	Door Pivot Clip		SRV31527	
	Ember Bed	No longer available	4030-913	
	Reflective Flame Decal	No longer available	4021-190	
	Refractory Assy			
	Refractory Side LH	No longer available	4030-831	
	Refractory Side RH	No longer available	4030-832	
	Installation Manual		4030-240	