

A New Stove or Insert
In **3** Easy Steps



1 Choose your
Stove or Insert*

2 Select your
Accessories**

3 Purchase your
Venting & Hearth Pad

*For insert, see WINS18 minimum existing firebox opening requirements.
**Surround required for insert

Accessories

Blower Kit



The optional blower kit will distribute all of the heated air available from the WS18 and WS22 wood stoves.

Blower is standard on the WINS18 insert.

Outside Air Kit



The required outside air kit for mobile and manufactured housing is easily connected to your 4" flexible vent.

WINS18 Standard Surround



The surround for the Eco-Choice wood insert will cover most fireplace openings with easy connections. 43"W x 31"H

WINS18 Large Surround



The larger surround will cover an even larger fireplace opening with quick connections. 51"W x 34"H

WINS18 Surround Trim



Accent your surround with your choice of black or satin nickel trim.

WINS18 Mantel Deflector



For mantels 21-1/2" to 26" above the WINS18 insert, a deflector can be used to achieve approved clearances.

Hearth Pad



Hearth pads are designed to protect existing flooring and must be used when installing a stove onto combustible flooring.



Value & Dependability The Eco-Choice Advantage

Heatilator® Eco-Choice™ wood stoves and inserts combine dependability and value from a brand you know and trust for hearth products. Featuring simple technology that's easy to operate and maintain, Heatilator Eco-Choice stoves and inserts provide clean and efficient heat. With a simple design plus quality you can see and feel, these wood appliances will deliver warmth and comfort in any room.

Save money while being green

Reduce your heating bills and live green by utilizing renewable fuels. Wood stoves and inserts are EPA-certified and clean-burning.

Easy to use and maintain

Eco-Choice wood stoves and inserts feature a wide door opening with single-lever operation and an air wash system to keep the glass clean. The secondary wood combustion system gives you cleaner burns and less maintenance.

It's a Heatilator

Manufactured in the USA, by the world's leading hearth company since 1927—known for value and dependability.



WS18
wood-burning stove

- 49,600 Peak BTU/hr¹
- 1,130-2,060 sq ft heating capacity²
- 80.4% efficient⁵
- Mobile home approved

WS18 Specifications	
Width	25"
Height	29"
Depth	26-1/2"
Weight	320 lbs
Max. Burn Time (On Low) ³	8 hrs
Firebox Capacity	2.0 cu ft
Max Log Length	18"
Emissions	2.6 grams/hr

WS18 Clearances - Straight Back Against Wall	
Back Wall to Stove	8.25" (Sing. Wall Pipe) 7" (Dble. Wall Pipe)
Side Wall to Stove	11.5" (Sing. Wall Pipe) 9.5" (Dble. Wall Pipe)

WS18 Clearances - Corner Installation	
Walls to Stove	3.5" (Sing. Wall Pipe) 3" (Dble. Wall Pipe)



WS22
wood-burning stove

- 63,800 Peak BTU/hr¹
- 1,580-2,780 sq ft heating capacity²
- 80.9% efficient⁵
- Mobile home approved

WS22 Specifications	
Width	26"
Height	34"
Depth	30-3/4"
Weight	410 lbs
Max. Burn Time (On Low) ³	12 hrs
Firebox Capacity	2.7 cu ft
Max Log Length	22"
Emissions	2.7 grams/hr


WS22 Clearances - Straight Back Against Wall	
Back Wall to Stove	8.25" (Sing. Wall Pipe) 7" (Dble. Wall Pipe)
Side Wall to Stove	11" (Sing. Wall Pipe) 9" (Dble. Wall Pipe)

WS22 Clearances - Corner Installation	
Walls to Stove	3.5" (Sing. Wall Pipe) 3" (Dble. Wall Pipe)



WINS18
wood-burning insert

- 49,600 Peak BTU/hr¹
- 1,130-2,060 sq ft heating capacity²
- 80.4% efficient⁵
- Mobile home approved

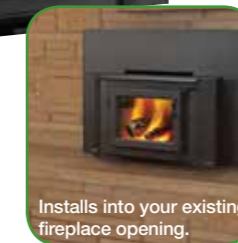

Installs into your existing fireplace opening.

WINS18 Specifications	
Min. Firebox Opening - Front Width	24-1/2"
Min. Firebox Opening - Back Width	24-1/2"
Min. Firebox Opening - Height	21-1/2"
Min. Firebox Opening - Depth	16"
Weight	337 lbs
Max. Burn Time (On Low) ³	8 hrs
Firebox Capacity	2.0 cu ft
Max Log Length	18"
Emissions	2.6 grams/hr

WINS18 Clearances	
Center of insert to side wall	29 3/8"
Top of hearth to bottom of mantel	42"
Top of hearth to combustible fascia or trim	34"
Center of insert to combustible fascia or side trim	22-7/8"
Hearth depth from fireplace face	21-3/4"



heatilatorecochoice.com

youtube.com/heatilatorecochoice

Your Heatilator Eco-Choice dealer is:

Limited Warranty⁴

Heatilator Eco-Choice provides a 5 year warranty on the most important aspects: firebox and heat exchanger.

¹ BTUs: 1st hour output uses high burn efficiency number. BTUs will vary depending on the type of fuel used and the moisture content of the fuel.

² Heating capacity (in square feet) is a guideline only and may differ slightly due to climate, building construction and condition, amount and quality of insulation, location of the heater, and air movement in the room. To learn more about Heating Capacity visit www.fireplaces.com/en/Resources/Shopping-Tools/Truth-About-Heating-Capacity

³ Actual burn times will vary based on how the appliance is operated, load size, moisture content and type of wood used, and installation.

⁴ For complete warranty details, see your Heatilator Eco-Choice dealer.

⁵ Weighted average LHV (Low Heating Value) efficiency.

Refer to installation manual for detailed specifications on installing this product. Heatilator Eco-Choice reserves the right to update units periodically. The flame and ember appearance may vary based on the type of fuel burned and the venting configuration used.

Stove and insert surfaces get extremely HOT and can cause severe burns if touched. Keep a safe distance away. To learn more visit: www.fireplaces.com/fireplacesafety