



PP60 PELLET STOVE

Recommended Repair Procedures

ALARM CODE

REPAIR PROCEDURE

1 FLASH: EMPTY HOPPER.....	(PAGE 5)
2 FLASHES: EXHAUST PROBE FAIL.....	(PAGE 8)
3 FLASHES: AMBIENT PROBE ALARM.....	(PAGE 7)
4 FLASHES: MISSED IGNITION.....	(PAGE 6)
8 FLASHES: EXHAUST OVER TEMPERATURE.....	(PAGE 3)

SYMPTOM


NOT FEEDING PELLETS:.....	(PAGE 11)
NOT LIGHTING THE FUEL:.....	(PAGE 9)
LAZY OR SOOTY FLAMES:.....	(PAGE 4)
NO POWER:.....	(PAGE 12)
CONVECTION BLOWER NOT COMING ON:.....	(PAGE 2)
EXHAUST BLOWER NOT COMING ON:.....	(PAGE 10)
UNIT IS NOT SENSING TEMP IN THE ROOM:.....	(PAGE 7)

REFER TO THE OWNERS MANUAL FOR INFORMATION ON MAKING ADJUSTMENTS TO THE UNIT OR FOR THE PROCEDURES FOR REPLACING PARTS.

WARNING!
ALWAYS UNPLUG THE STOVE BEFORE CLEANING, REPLACING COMPONENTS, RESETTING SNAP DISCS AND CHECKING WIRE CONNECTIONS.

CONVECTION BLOWER TROUBLE-SHOOTING


HOME

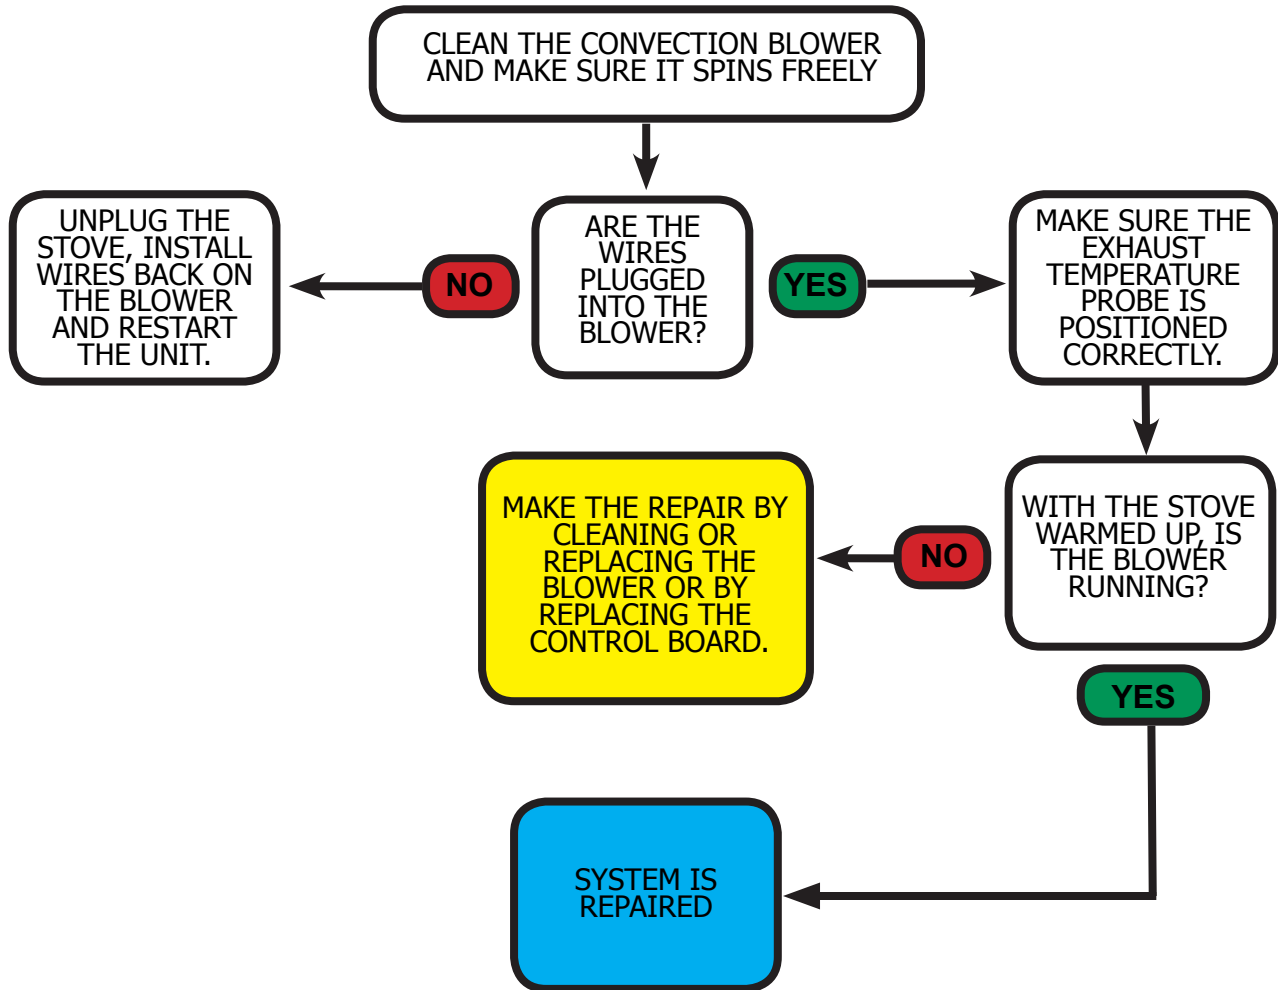

HOME

8 FLASHES: EXHAUST OVER TEMPERATURE


HOME

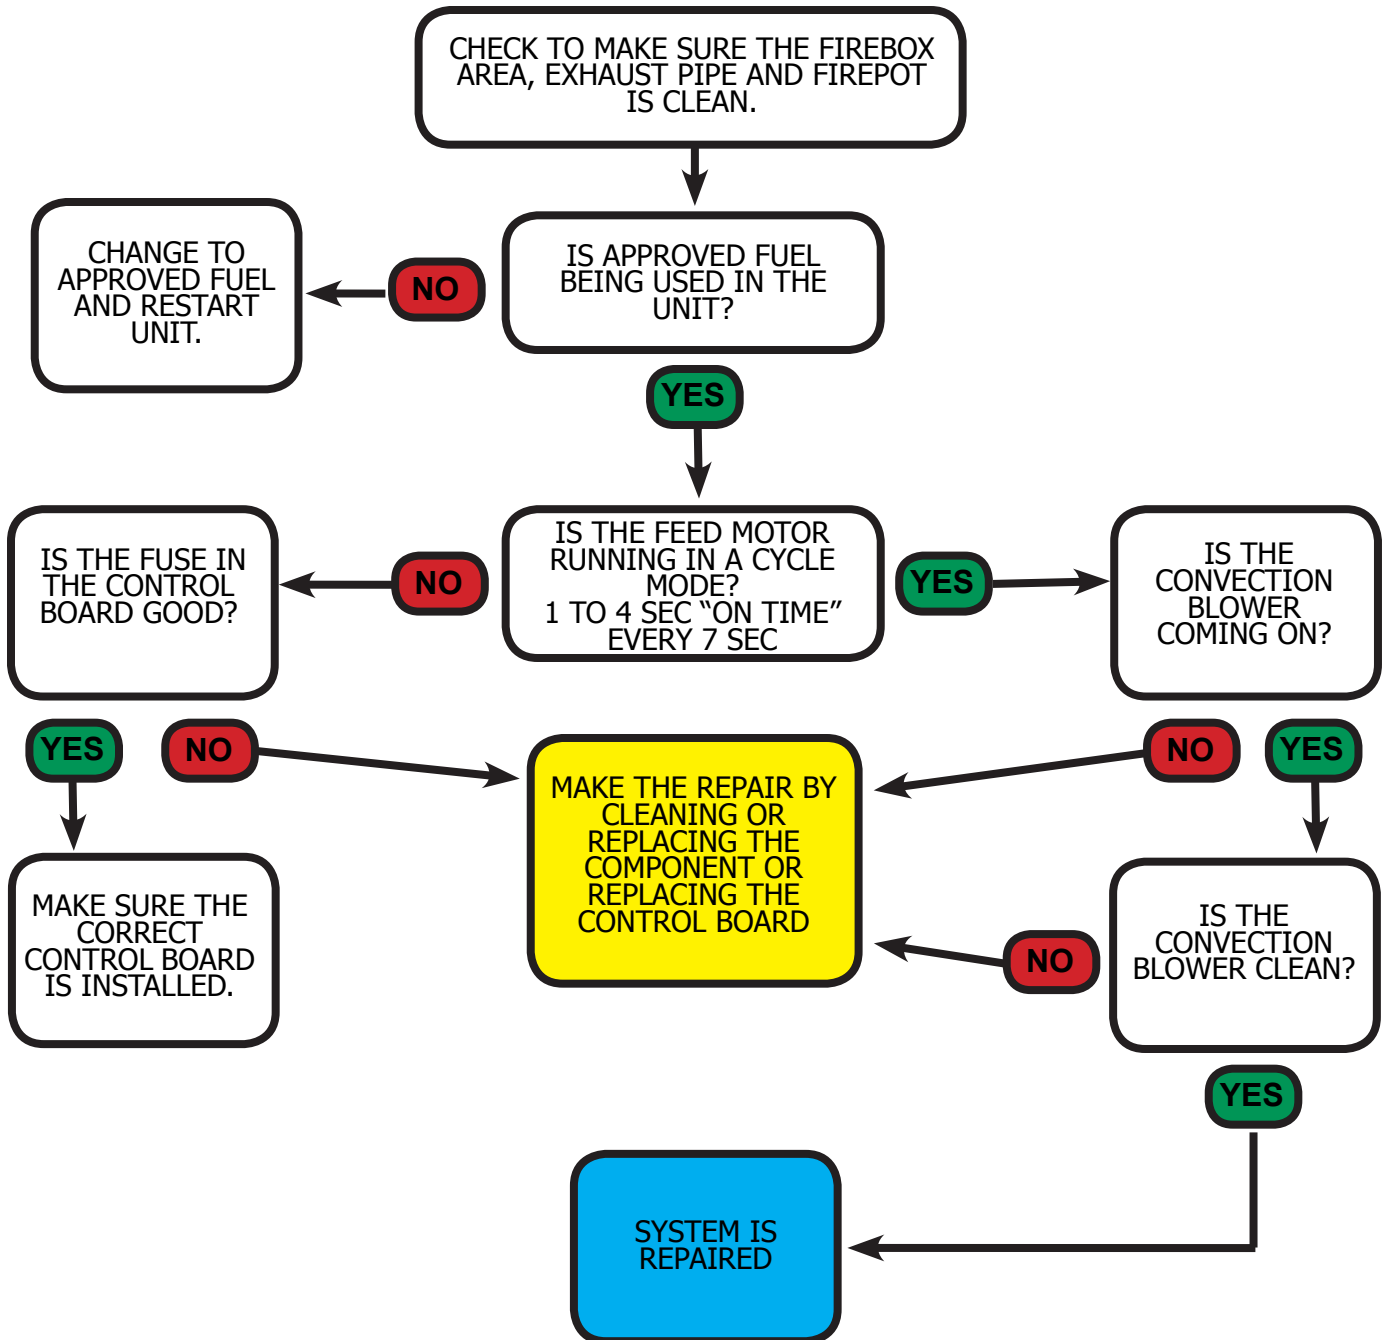

HOME

HOME

LAZY OR SOOTY FLAMES

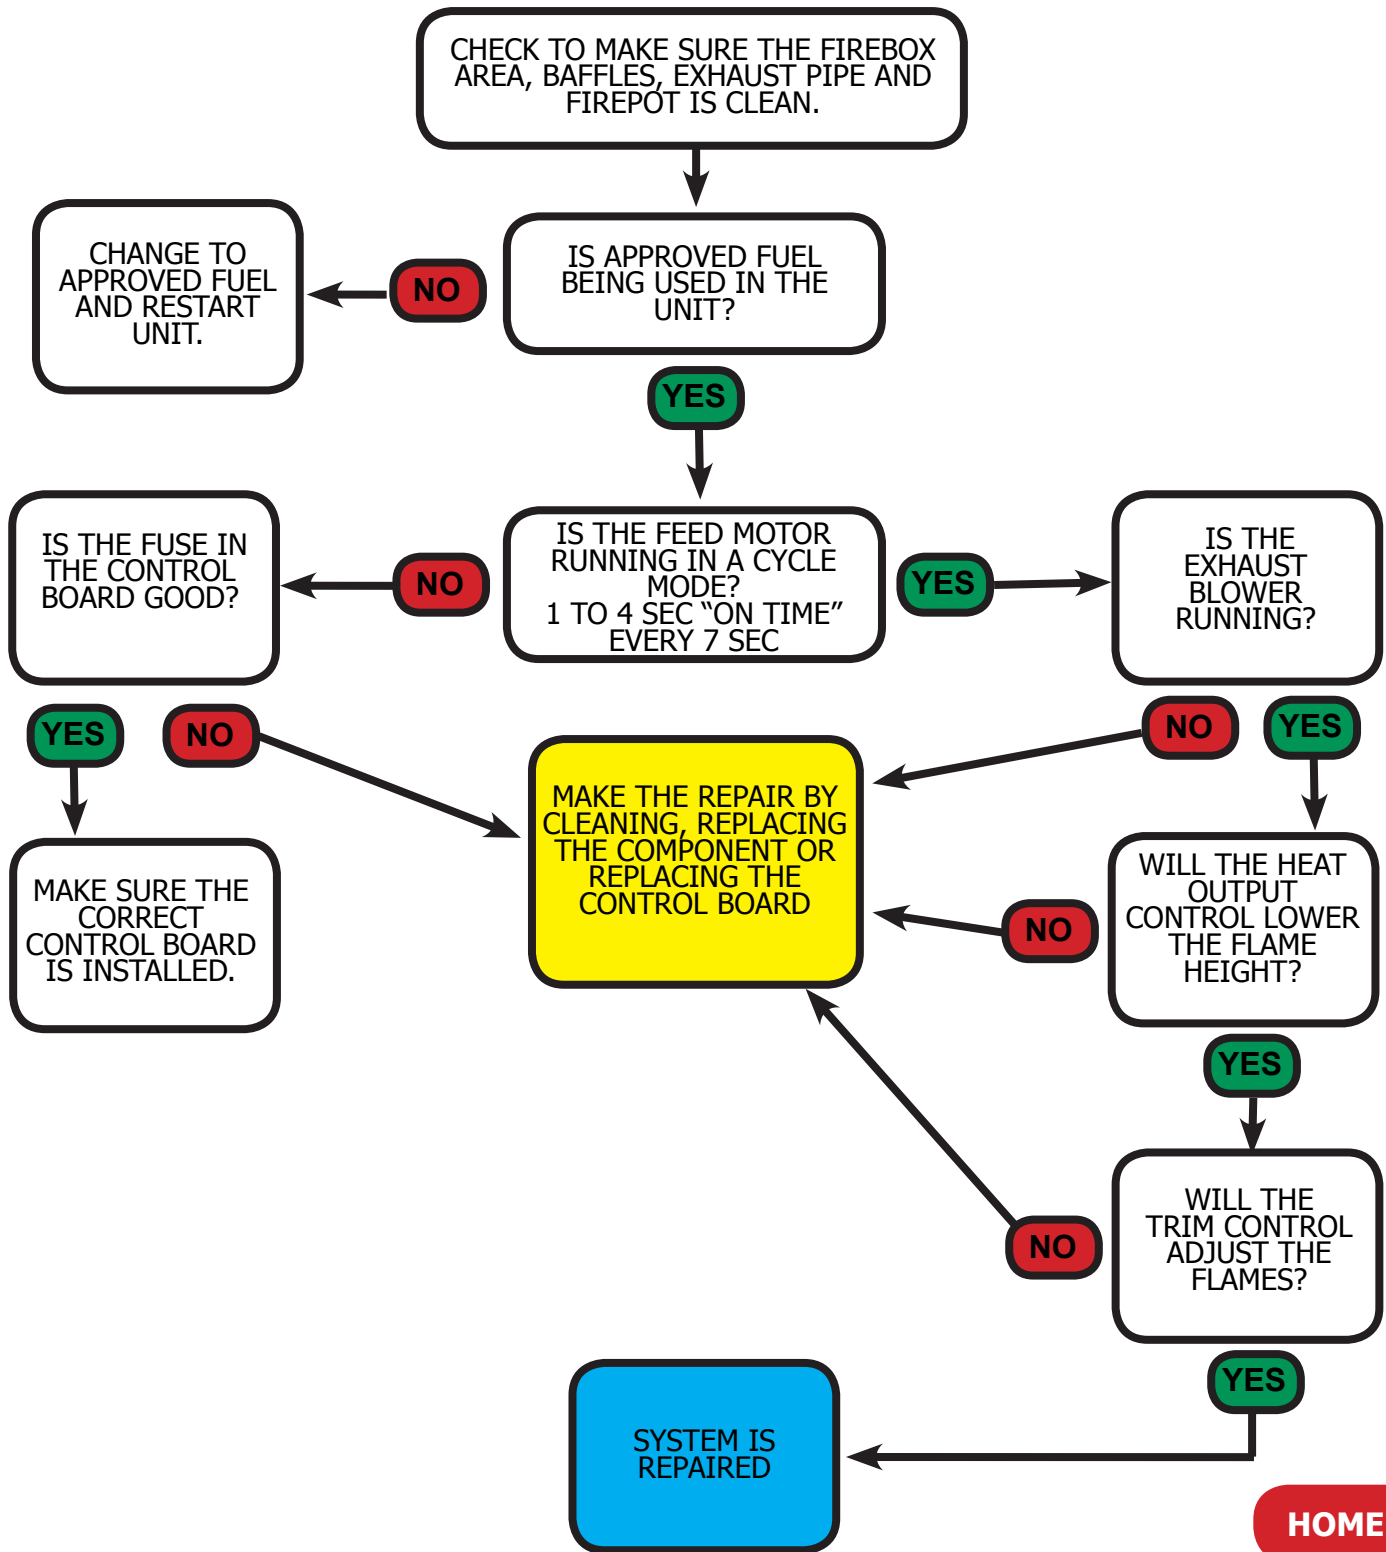


HOME

PP60 TROUBLE SHOOTING MANUAL

1 FLASH: EMPTY HOPPER


HOME

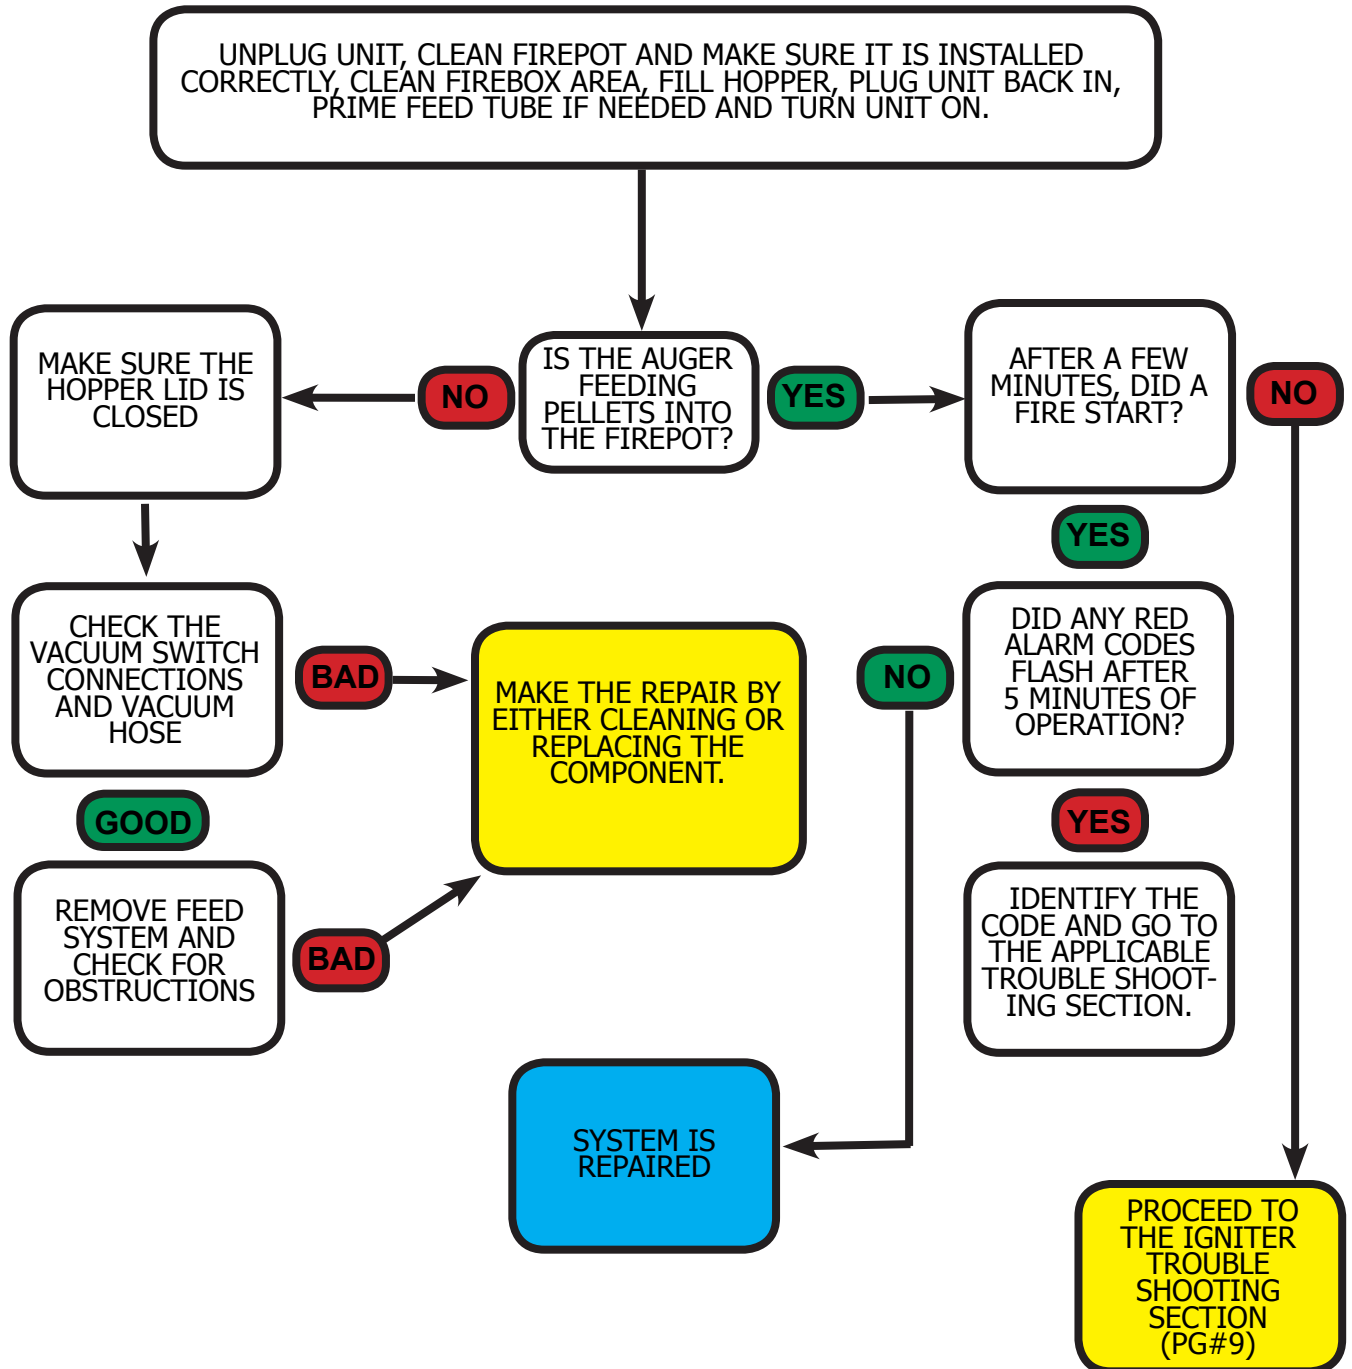

HOME

4 FLASHES: MISSED IGNITION

HOME

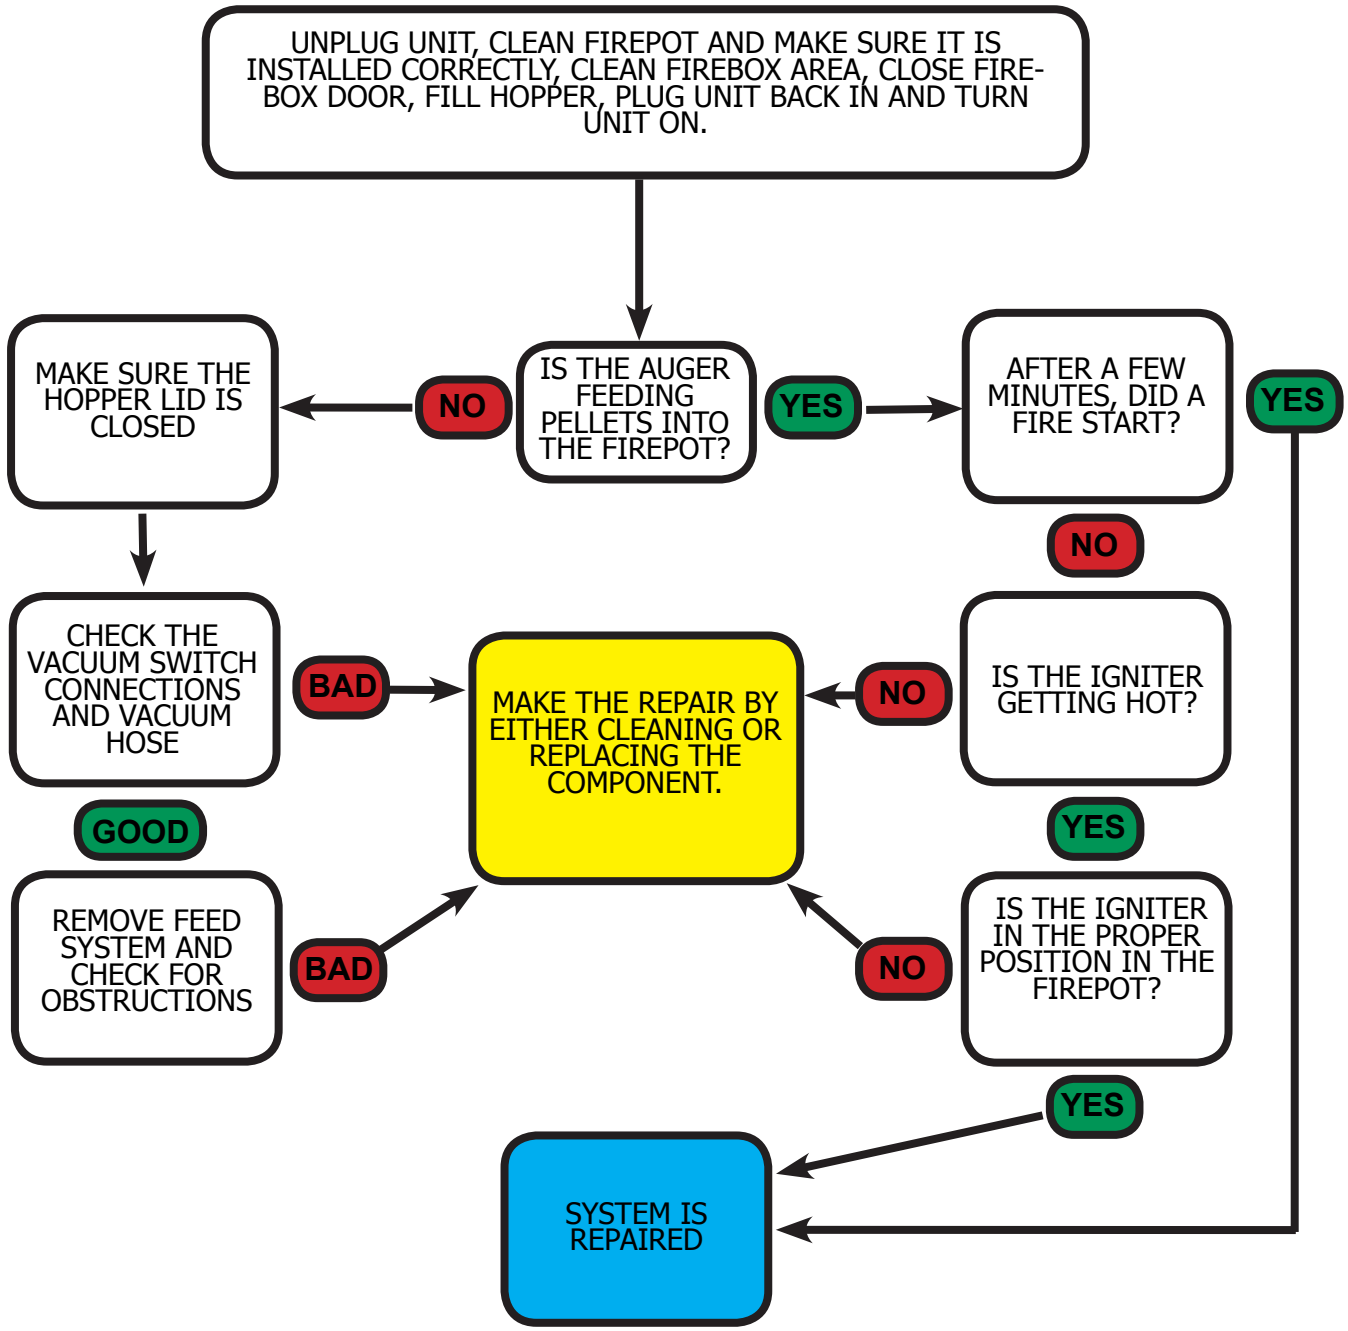


HOME

3 FLASHES: AMBIENT PROBE ALARM

HOME


TECH TIP:
THE PROBE WILL SENSE TEMPERATURE IN THE ROOM. IF THE UNIT IS CYCLING TOO MUCH, MOVE THE PROBE FARTHER AWAY FROM THE STOVE.

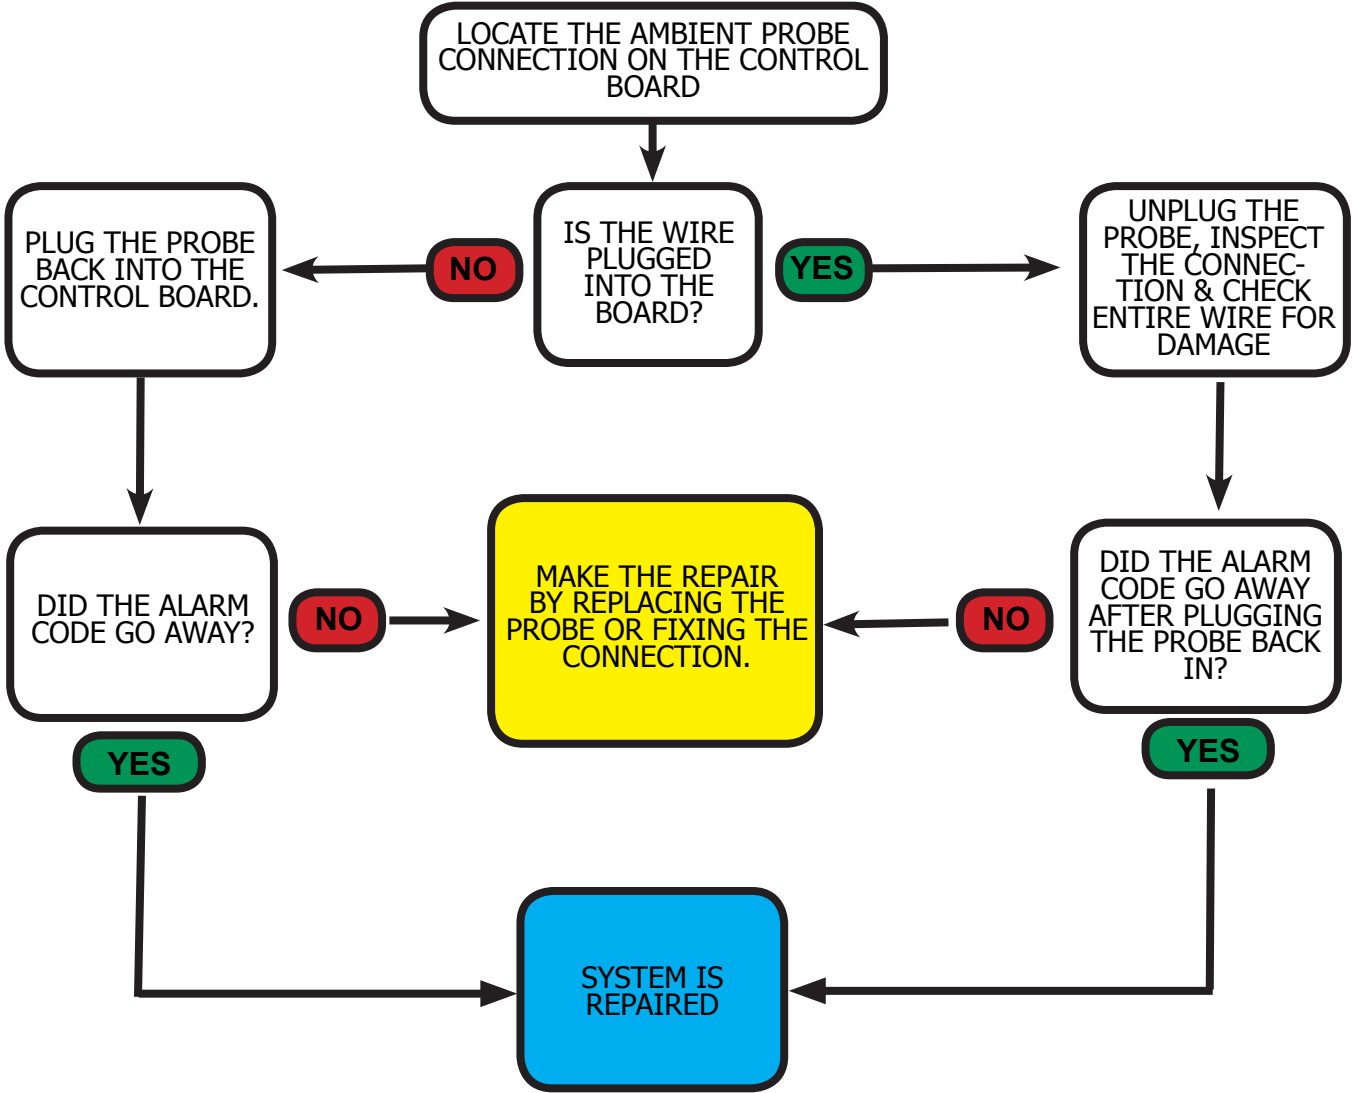

HOME

2 FLASHES: EXHAUST PROBE FAIL


HOME

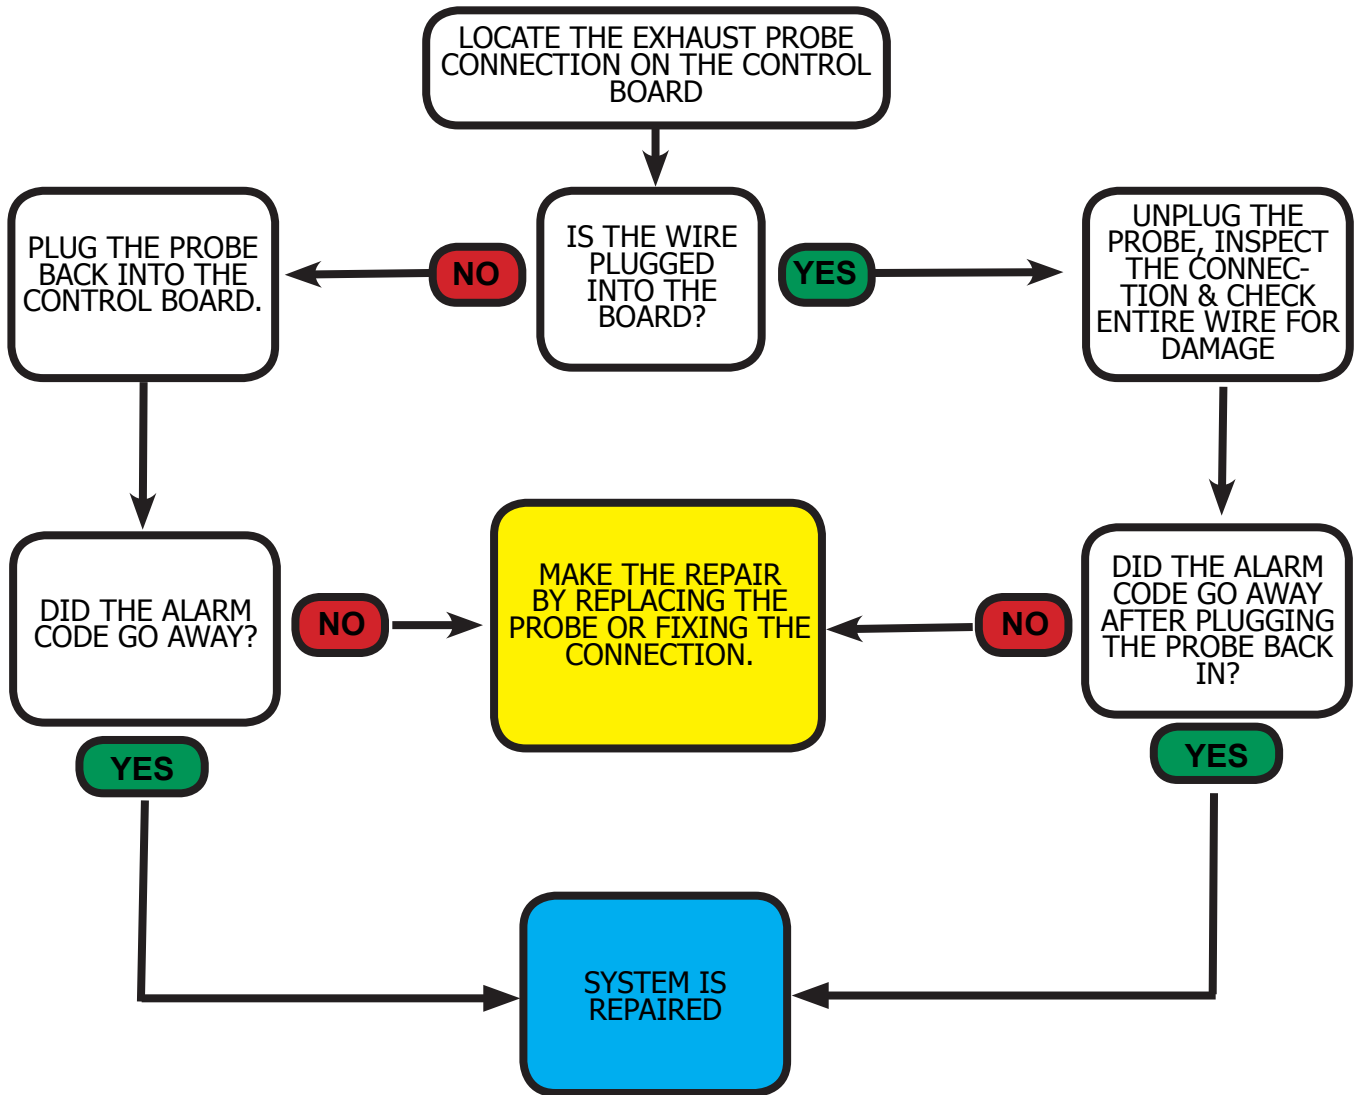

HOME

NOT LIGHTING THE FUEL


HOME

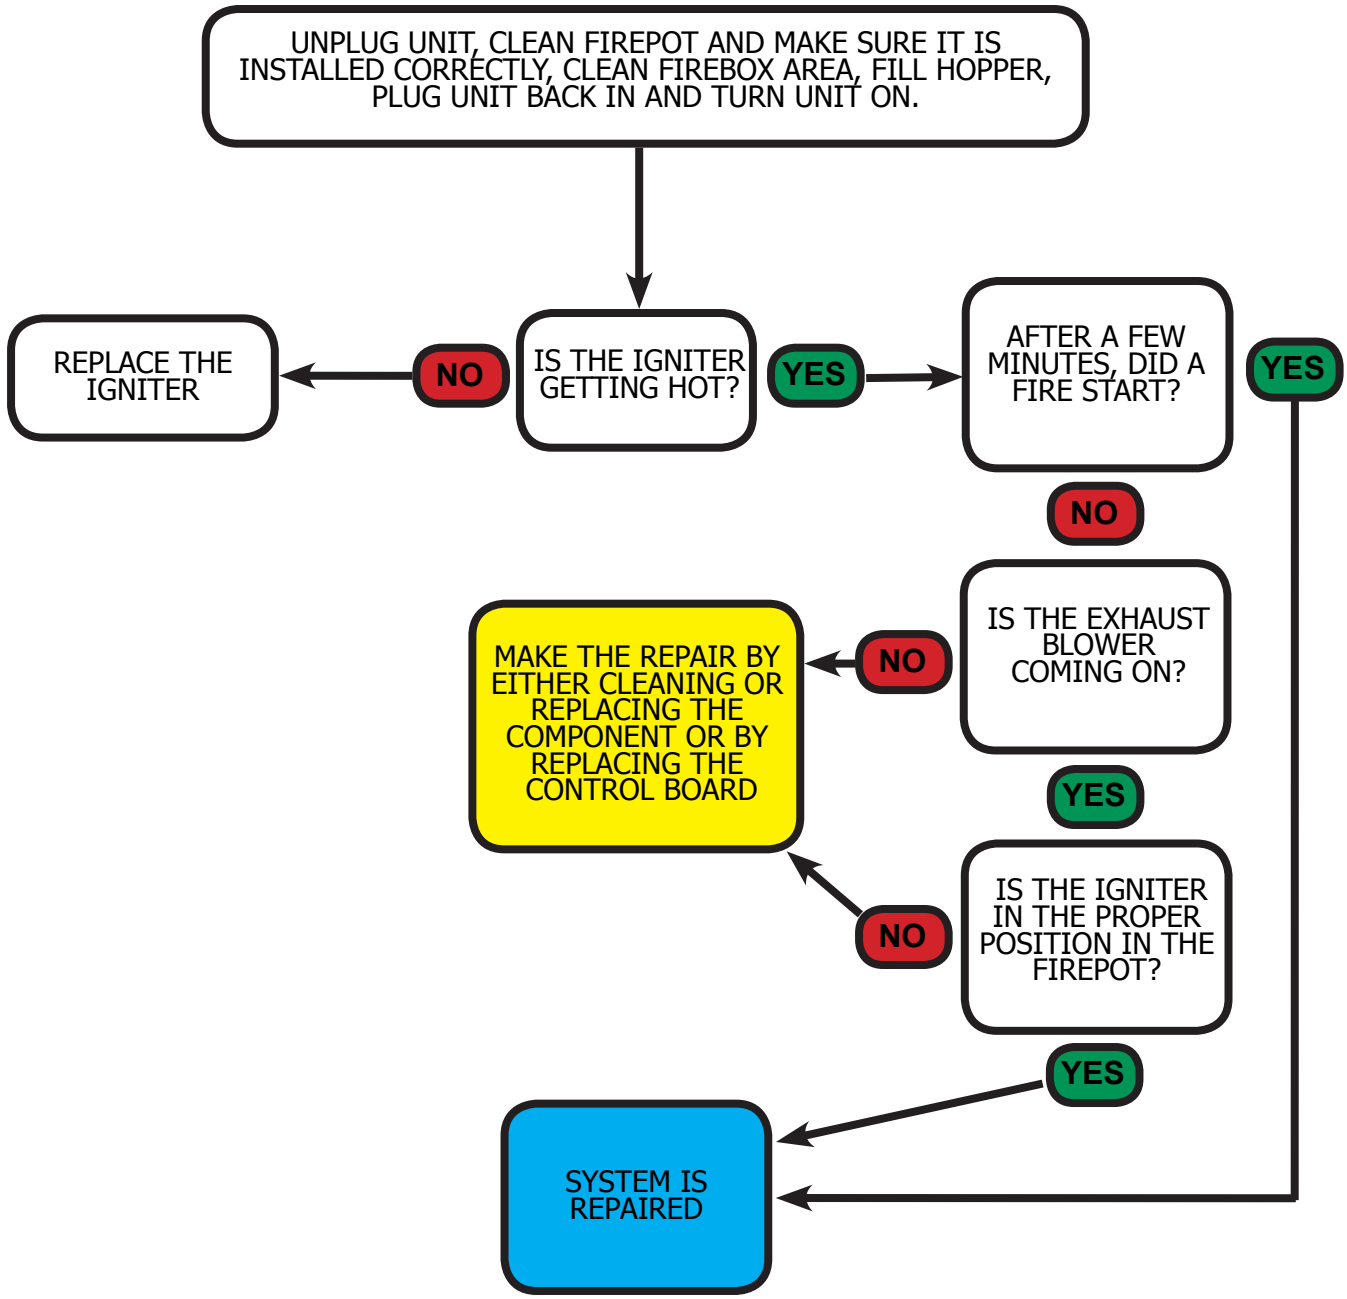

HOME

EXHAUST BLOWER NOT COMING ON


HOME

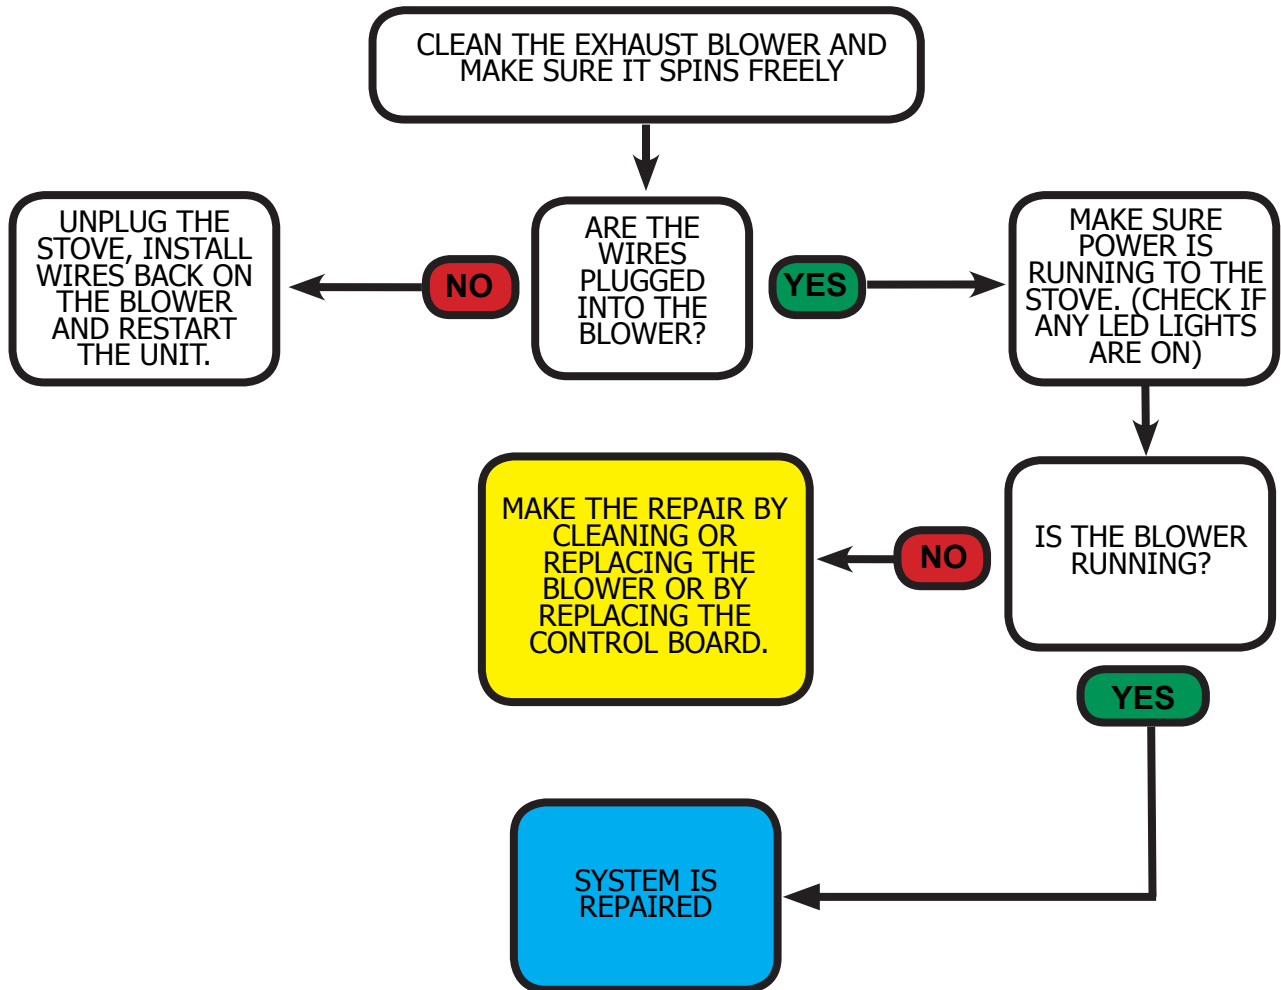

HOME

NOT FEEDING PELLETS


HOME

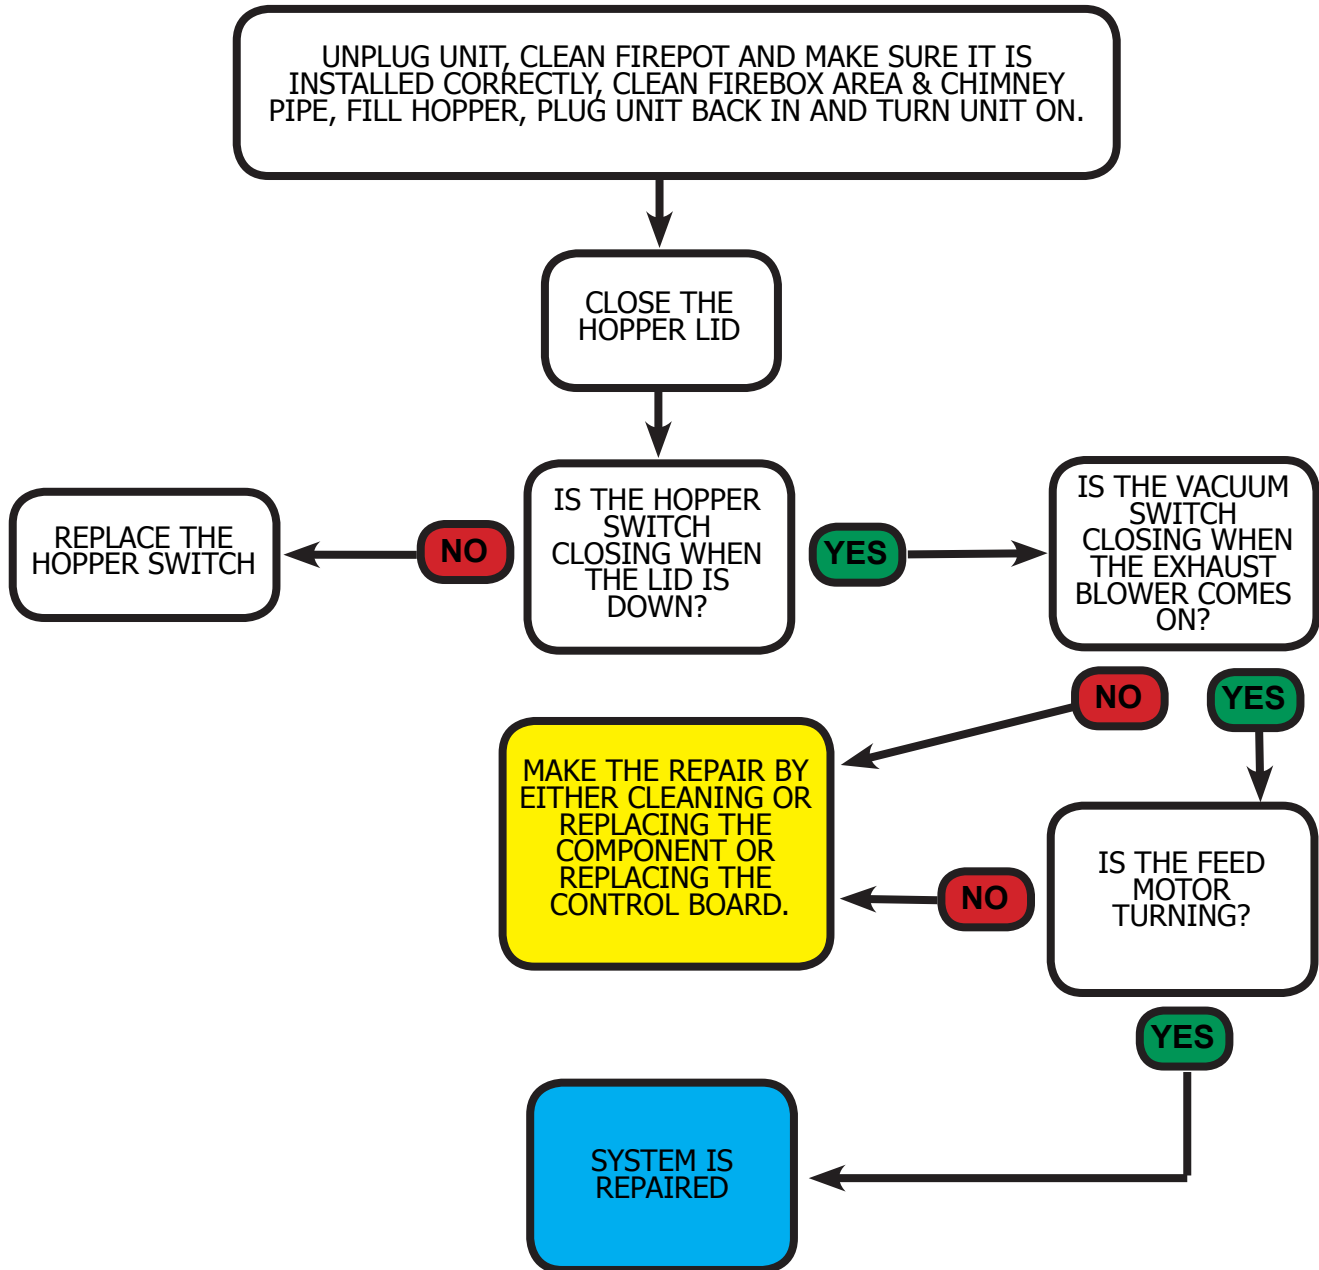

HOME

NO POWER

HOME

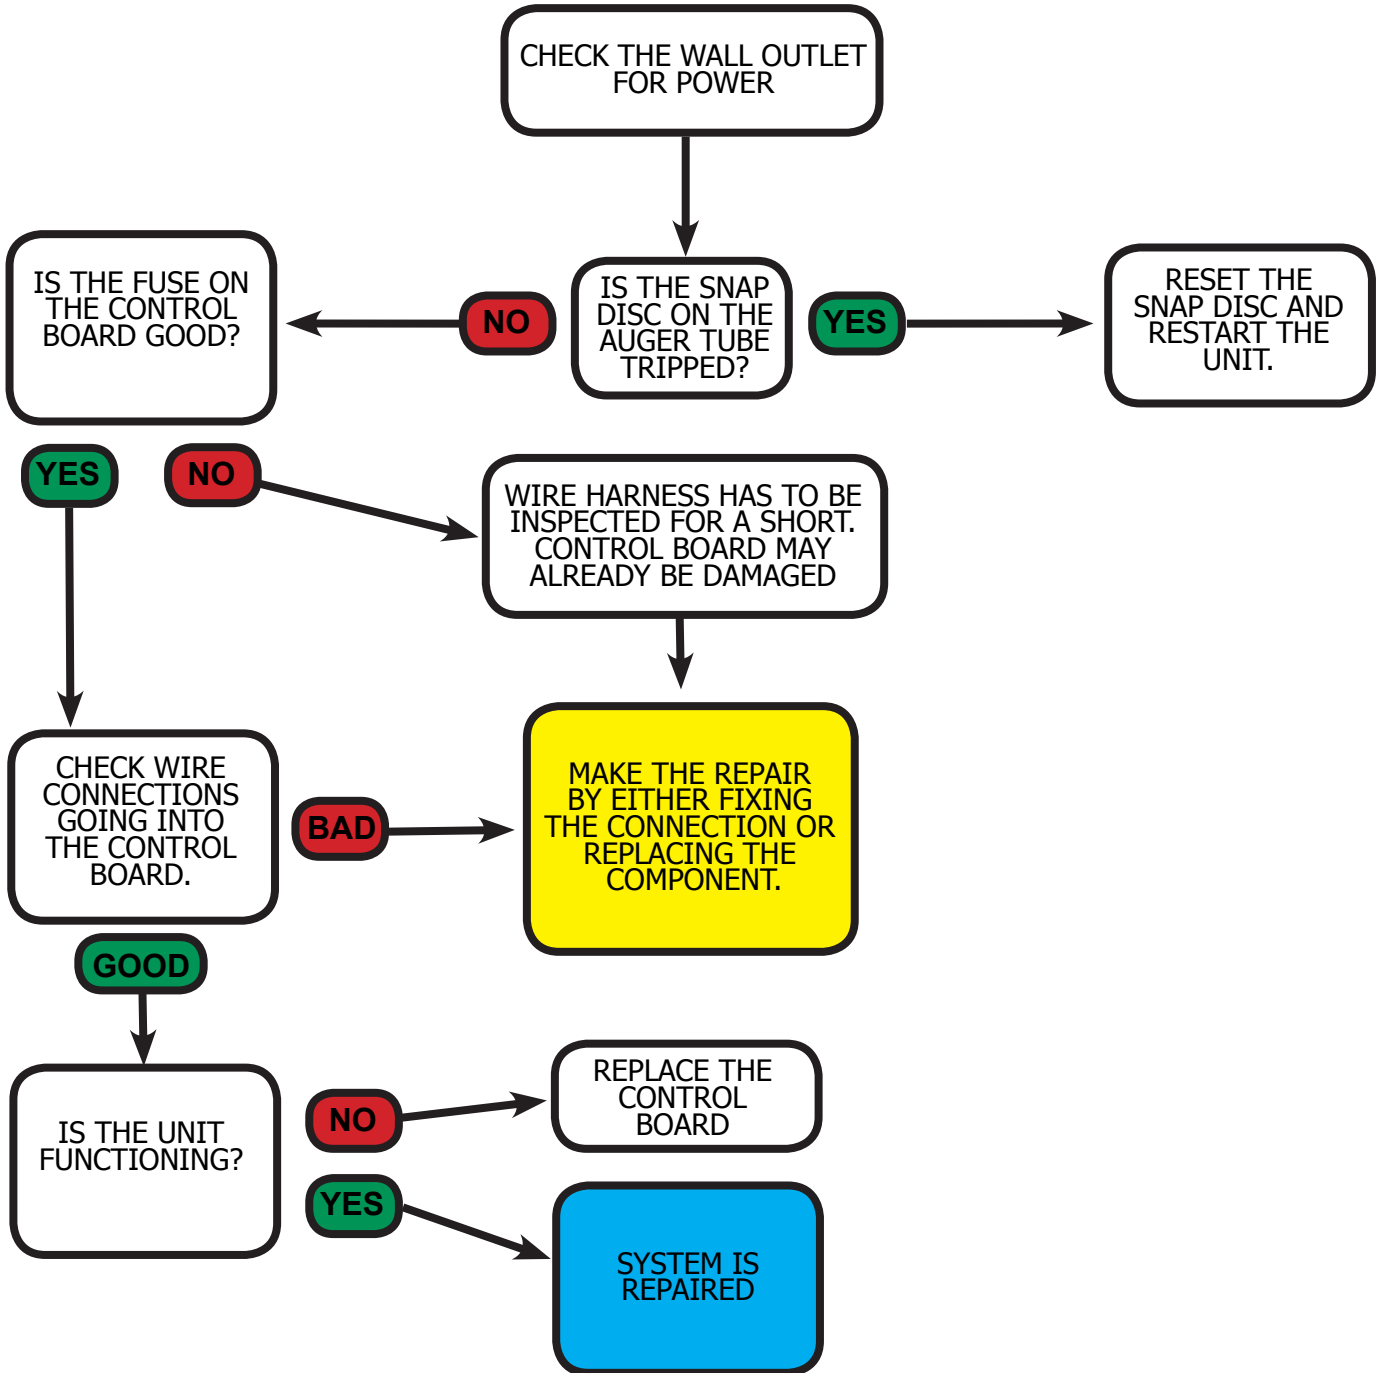

HOME