



WH-STAT WALL THERMOSTAT KIT

- Installation and Operation Instructions -

CHECK CONTENTS OF SHIPPING CARTON

Compare contents of carton in Figure 1 with the actual parts received. If any parts are missing or damaged, contact your dealer before beginning installation. **DO NOT** install a damaged Wall Thermostat Kit.

 	<p>WARNING</p> <p>Shock Hazard. Explosion Risk. Do NOT wire 110V-120V to valve. Do NOT wire 110V-120V to wall switch.</p>
--	--

NOTE: For installing and selecting the proper thermostat location, refer to instruction manual provided in this kit.

INSTALLING ELECTRICAL WIRING FROM WALL THERMOSTAT TO FIREPLACE:

1. Run low voltage 2- conductor wire from the wall thermostat into the base of the fireplace (behind grille). Find the male and female connectors provided and attach them to the ends of this wire.
2. Find the red and brown pigtail wires labeled "THERMOSTAT", "REMOTE", or "WALL SWITCH", located in the base pan of the fireplace.

OPERATING PROCEDURES

1. Follow the lighting instructions section in the fireplace instruction manual. Be certain that the pilot light is on and the gas control valve is in the "ON" position.
2. Set the wall thermostat to the desired setting.

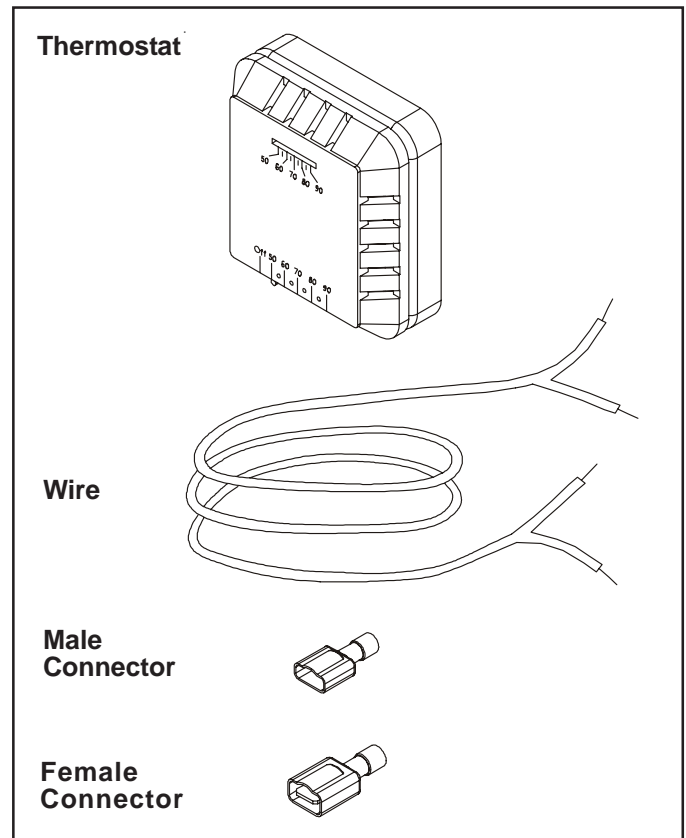


Figure 1

REPLACEMENT PARTS AND CUSTOMER SERVICE

Replacement parts and customer service may be obtained through your dealer.