

Crescent II Door

- Installation Instructions -



Leave this manual with party responsible for use and operation.

⚠ WARNING



HOT SURFACES!

Glass and other surfaces are hot during operation AND cool down.

Hot glass will cause burns.

- Do not touch glass until it is cooled
- NEVER allow children to touch glass
- Keep children away

- CAREFULLY SUPERVISE children in same room as fireplace.
- Alert children and adults to hazards of high temperatures.

High temperatures may ignite clothing or other flammable materials.

- Keep clothing, furniture, draperies and other flammable materials away.

This appliance has been supplied with an integral barrier to prevent direct contact with the fixed glass panel. Do NOT operate the appliance with the barrier removed.

Contact your dealer or Hearth & Home Technologies if the barrier is not present or help is needed to properly install one.

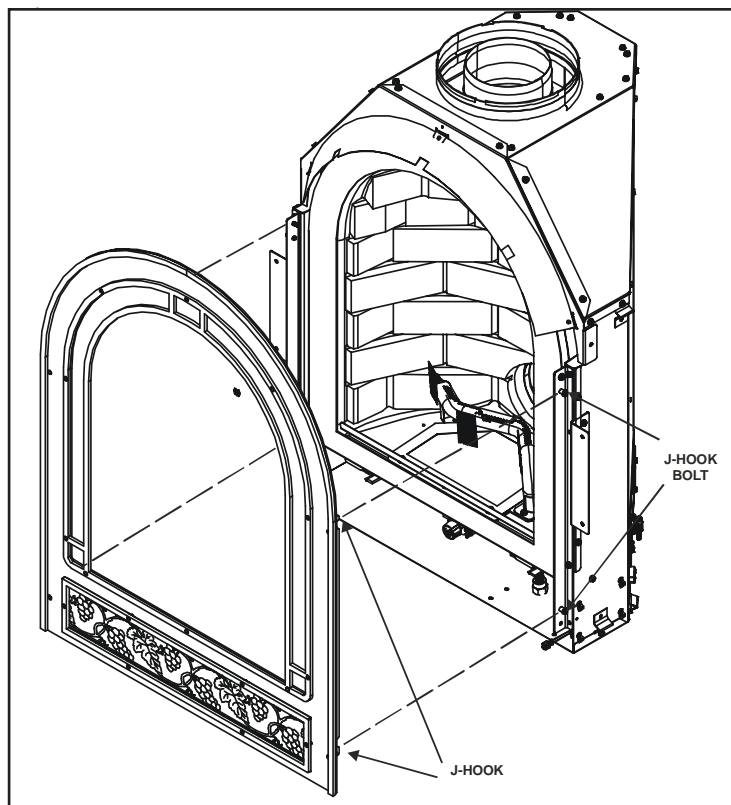


Figure 1. Door Shown: Reserve

The door is attached to the appliance with j-hooks.

Door Installation:

To install the door on the fireplace hold the door about 1/8 inch higher than the unit and center over the fireplace. Slowly lower the door until all four j-hooks are engaged.

Door Removal:

To remove the door, raise the door up about 1/8 inch to disengage the j-hooks and pull the door toward you.

Interchangeable Decorative Panels (Essence Doors):

The decorative panel at the bottom of the door is interchangeable with many different options. Contact your dealer or visit www.fireplaces.com for interchangeable panel options.

To change decorative panel:

- Remove the two 3/8 inch nuts on the back of door (see Figure 2).
- Remove the backing plate from the bolts.
- Slide the backing plate into the decorative panel.
- Place the new panel onto the bolts and secure with nuts.

Replacement Parts:

Mesh.....2083-145

Essence Doors Only -

Backing Plate: Pewter, Bronze.....2083-160
Polished Brass.....2083-160PB
Brushed Nickel.....2083-160BN

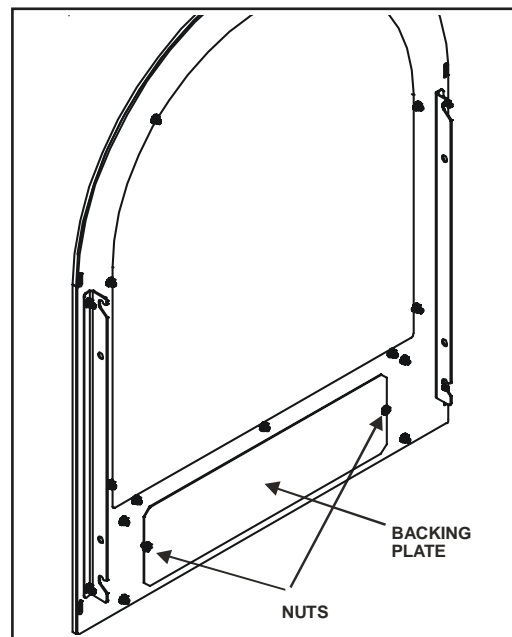


Figure 2. Door shown: Essence

Cleaning Instructions for Doors

Use a microfiber cloth and Windex® Original Glass Cleaner or 03M003 Stove Bright® Glass Cleaner to clean the door immediately after installation to remove acids deposited by the installer or technician. Spray the cleaner onto the microfiber cloth and carefully wipe the entire surface. The door should be cleaned in this manner annually by the homeowner to remove fingerprints or other contaminants. Once oxidation of the paint pigment has occurred, cleaning will not restore the original color.

Please contact your Hearth & Home Technologies dealer with any questions or concerns.
For the location of your nearest Hearth & Home Technologies dealer, please visit www.fireside.com.

Hearth & Home Technologies Inc.
7571 215th Street West, Lakeville, MN 55044
www.fireside.com