

## Galleria Doors

Models: 6000G, 6000GL, 6000GLX, BE-41C, SL-36-Ultimate

- Installation Instructions -



Leave this manual with party responsible for use and operation.

### ⚠ WARNING



#### HOT SURFACES!

Glass and other surfaces are hot during operation AND cool down.

#### Hot glass will cause burns.

- **DO NOT** touch glass until it is cooled
- **NEVER** allow children to touch glass
- Keep children away

- **CAREFULLY SUPERVISE** children in same room as fireplace.
- Alert children and adults to hazards of high temperatures.

#### High temperatures may ignite clothing or other flammable materials.

- Keep clothing, furniture, draperies and other flammable materials away.
- Do NOT operate with protective barriers open or removed.
- The doors must remain closed if children will be present during the operation of the fireplace.
- The doors may be made operable per these instructions. This may be done only upon request of a person responsible for the use and operation of the fireplace.
- The doors can be returned to the locked position following these instructions.
- These instructions are to be left with a person responsible for the use and operation of the fireplace.
- When the doors are in an operable state, the door-locking screw must be retained in the threaded nut behind doors.

**WARNING! Risk of Fire!** Combustible materials **MUST NOT** overlap or be placed under a surround.

**CAUTION!** Do not install damaged components.

It is very important to know what kind of finishing materials are going to be used on the fireplace. The doors are made to overlap finishing material up to 1 inch thick (see Figure 1).

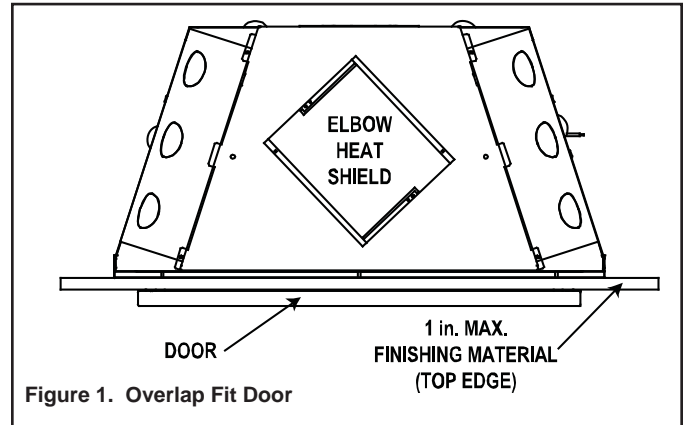


Figure 1. Overlap Fit Door

The doors can be used as an inside fit for finishing materials up to 2 inches thick. Finishing materials over 2 inches thick can be used but the doors will only open to a 90° position (see Figure 2). A template is available to assist with proper sizing of the finishing material.




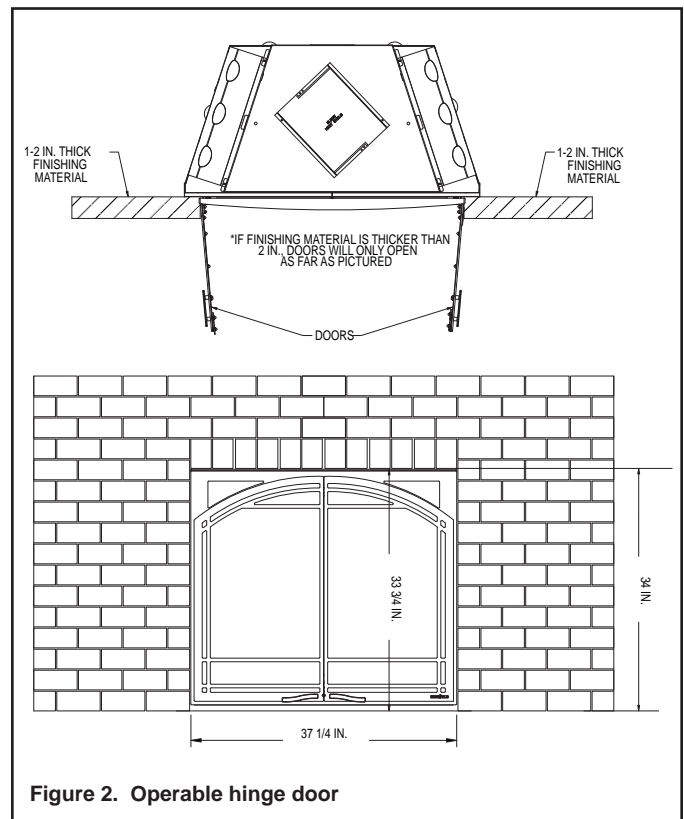


Figure 2. Operable hinge door

1. Remove all material from packaging.
2. Install lower valve shield, shown in Figure 4, by screwing two self tapping screws through the holes in the lower valve shield and into the pilot holes in the fireplace surround.
3. Install the valve shield, also shown in Figure 4, by hooking the "J" hooks into the small slots on the back side of the lower valve shield.
4. Remove the door locking screw that is fastened in between the two doors at the center bottom of the door frame. See Figure 6.
5. Lean the door frame with the two doors in place against a wall and check to make sure that the space between the two doors is even from top to bottom as well as that the top of the doors are even. If the doors need to be adjusted, it is possible to adjust the doors by loosening the nuts on the door hinges and sliding them slightly to the left or right. Retighten the nuts once the doors have been adjusted. If the height of the two doors is not the same, the height may be adjusted by loosening the screws that attach the hinge to the door frame, adjusting the height and then tightening the screws again. See detail in Figure 5 for hinge adjustment location.
6. Remove the doors from the hinges by opening the doors and the slightly lifting up on the door until the door hinges lift off the hinge pins on the frame.
7. Slide the door frame into the fireplace surround until it is tight against the finishing material. Locate the four slots in the attachment brackets on the back side of the frame. See Figure 5.
8. Using a common Phillips head screw driver, tighten a bolt through each of the slots and into the threaded inserts in the fireplace surround.
9. Place the doors back on the frame in the same way that you removed them in step 5.
10. Swing the doors shut, making sure to engage the top latches as shown in Figure 3.

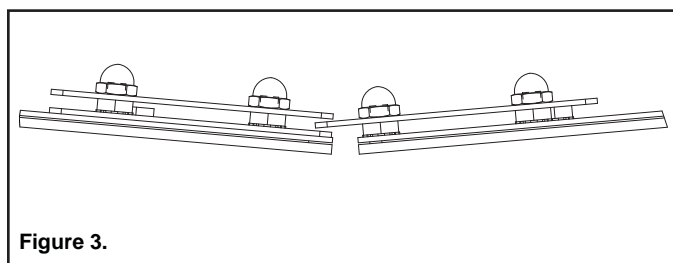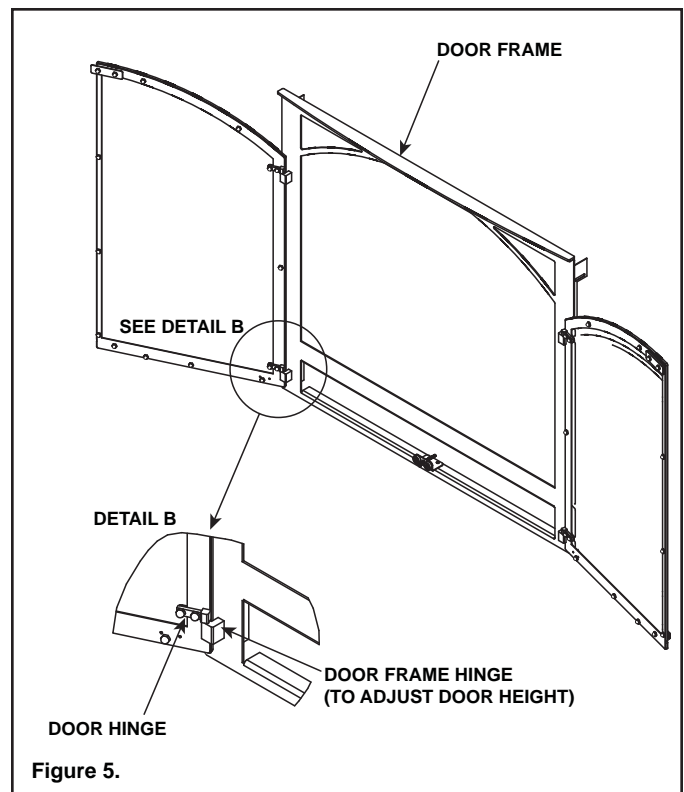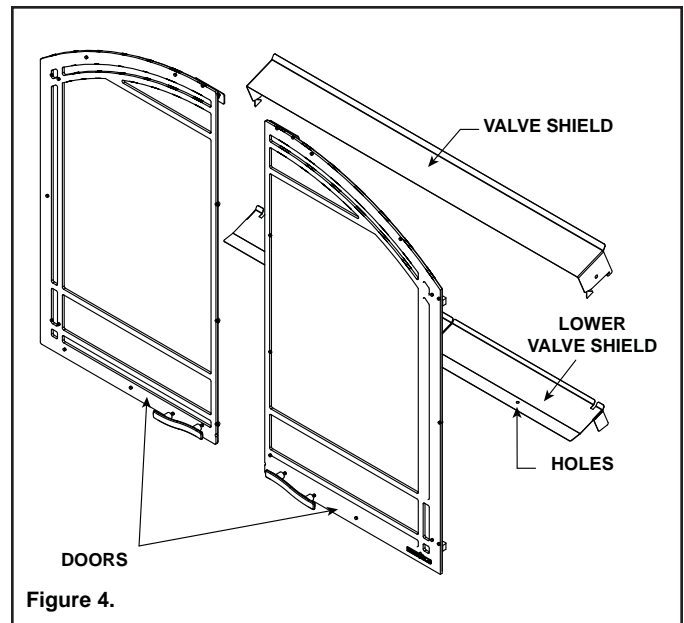

11. Replace the door locking screw through the doors. The doors are now locked shut. To make doors operable, remove the screw, open the doors and then replace the door locking screw.



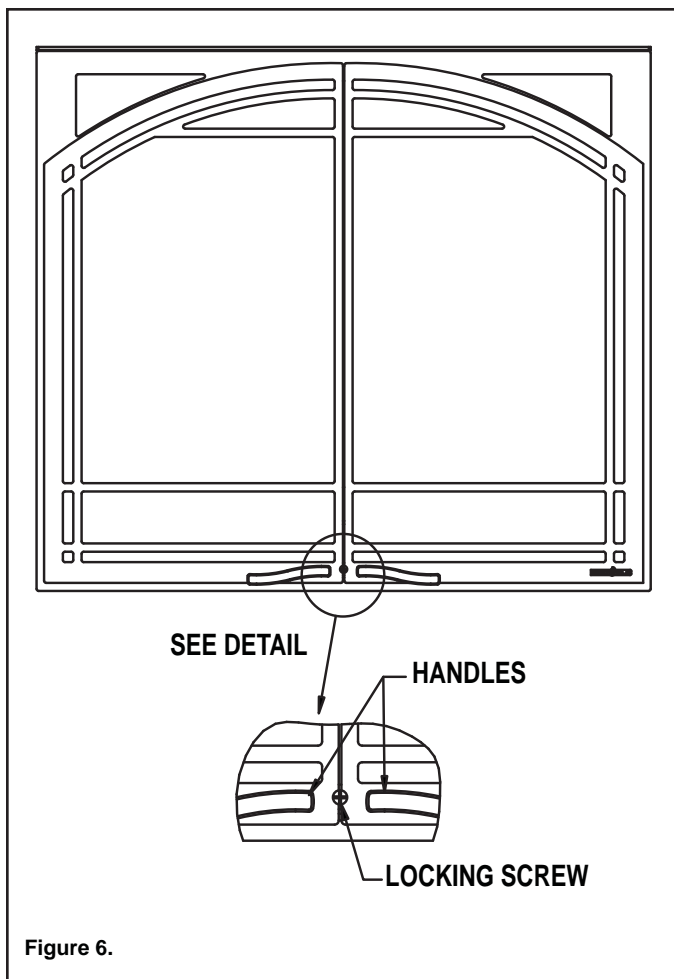


Figure 6.

### Cleaning Instructions for Doors

Use a microfiber cloth and Windex® Original Glass Cleaner or 03M003 Stove Bright® Glass Cleaner to clean the door immediately after installation to remove acids deposited by the installer or technician. Spray the cleaner onto the microfiber cloth and carefully wipe the entire surface. The door should be cleaned in this manner annually by the homeowner to remove fingerprints or other contaminants. Once oxidation of the paint pigment has occurred, cleaning will not restore the original color.

Please contact your Heat & Glo dealer with any questions or concerns.

For the location of your nearest Heat & Glo dealer, please visit [www.heatnglo.com](http://www.heatnglo.com).

Heat & Glo, a brand of Hearth & Home Technologies Inc.  
7571 215th Street West, Lakeville, MN 55044  
[www.heatnglo.com](http://www.heatnglo.com)