

SL-550METRO GLASS ROCK MEDIA

- Installation Instructions -



Leave this manual with party responsible for use and operation.

CAUTION! Risk of Cuts, Abrasions or Flying Debris. Wear protective gloves and safety glasses during installation.

WARNING! Choking Hazard! Keep glass rock media out of reach of children.

Cleaning the Rock

During shipment of the glass rock media, dust and debris can accumulate. It is recommended that the glass rock media be rinsed thoroughly with water to remove dust and small glass particles. An easy method to clean the glass rock media is to put the rocks into a bucket and rinse thoroughly with a garden hose. Allow the glass rock media to dry before installing into the fireplace.

KIT CONTENTS

- Glass Rock Media, 5 lb. bag
- Rock Media Tray
- Rock Media Placement Jig
- (2) Self-Tapping Screws

INSTALLATION

WARNING



Delayed Ignition Risk

- Place glass rock media according to instructions.
- Do NOT place glass rock media in area in front of pilot or between burner tracks.
- Do NOT place glass rock media in a position that they may fall onto burner or into area around burner.
- Do NOT use any media other than the glass rock media supplied with this fireplace.
- Do NOT use more than one 5 lb. bag of glass rock media media per fireplace.

Fireplace will not function properly.
Delayed ignition may occur.

1. Locate the two side flanges on rock tray and hand bend them both to a 90 degree angle. See Figure 1.
2. Install rock tray on base pan with bent flanges oriented upward. Secure with two screws as shown in Figure 2.
3. Hand bend the ten tabs on the rock media jig as shown in Figure 3. Place the jig over the burner opening.

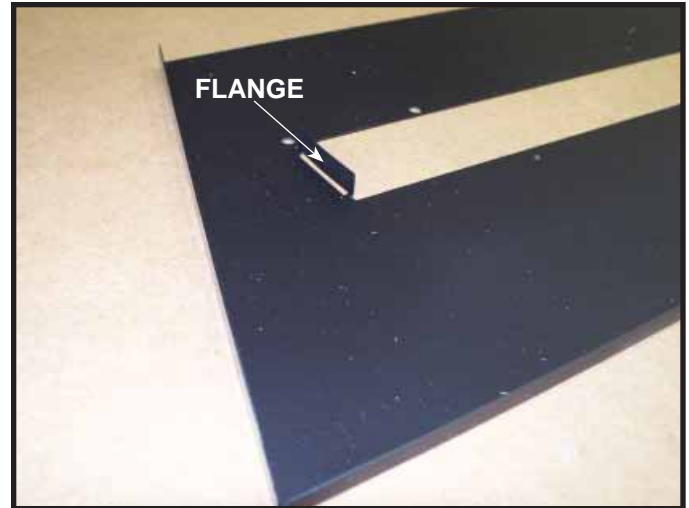


Figure 1. Flange on Rock Media Tray

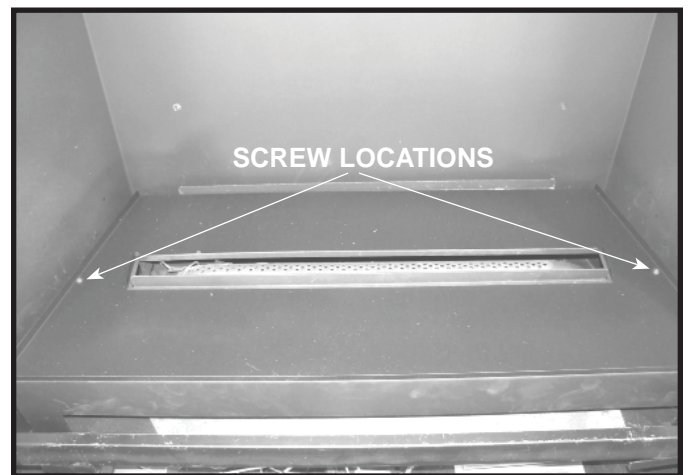


Figure 2. Rock Media Tray Placed on Base Pan.

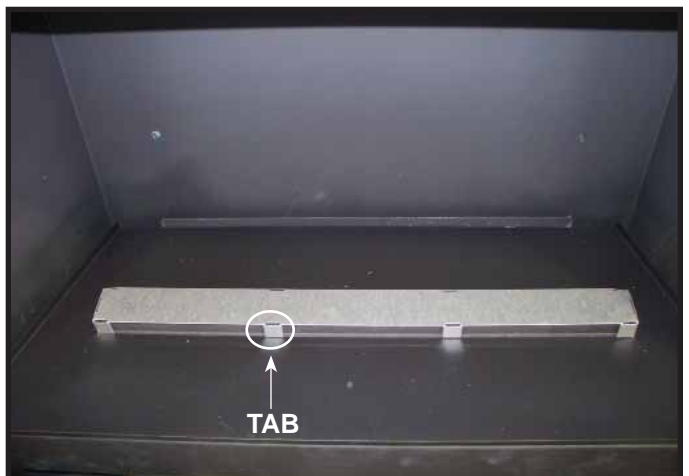


Figure 3. Rock Media Tray and Rock Placement Jig in Place.

4. Place an even layer of glass rock media on the rock tray as shown in Figure 4.



Figure 4. Glass Rock Media in Place.

5. Slowly and carefully remove the rock media jig as shown in Figure 5.
6. Verify that there are no glass rock media pieces in the burner opening. See Figure 6. This may cause lighting issues, undesirable burner flame, or delayed ignition.

WARNING! Risk of Delayed Ignition, Explosion and Fire. *DO NOT place glass rock media on or around pilot. DO NOT block burner ports with glass rock media. Delayed ignition may occur. Fireplace will not function properly.*



Figure 5. Removing Rock Media Jig.



Figure 6. Burner Opening.

Please contact your Heat & Glo dealer with any questions or concerns.

For the location of your nearest Heat & Glo dealer, please visit www.heatnglo.com.

Heat & Glo, a brand of Hearth & Home Technologies Inc.
7571 215th Street West, Lakeville, MN 55044
www.heatnglo.com