
## **DIRECT VENT KITS**

## Installation Instruction for models: LINK-DV30, LINK-DV4-30 and FTA3

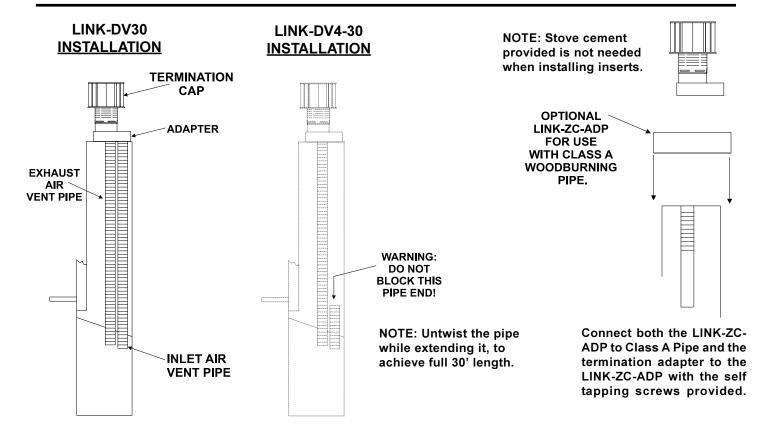

**WARNING:** The exhaust pipe must only be connected to the exhaust starting collar of the unit and the center of the termination cap.

The inlet air pipe must only be connected to the inlet air collar of the unit and either attached to the inlet air collar of the termination cap or terminated in the chimney. See fireplace manual

for proper system.

Note: Use 3 of the self tapping screws for each collar to attach flex liner.

To help eliminate cold air drafts, it may be necessary to place non-combustible insulation around the flues as they go through the damper.

## **DAMPER FLASHING KIT**

For use with LINK-DV4-30 Liner Kit.

**NOTE:** Damper may have to be removed to use this kit.

- 1. Run flex liners through 3" holes in the damper flashing.
- 2. Attach damper flashing to firebox roof with the self tapping screws included in the kit.

