



BRICKMQ42STCR, BRICKMQ42STTB

Models: MARQ42STIN

Refractory Installation Instructions -



Leave this manual with party responsible for use and operation.

CAUTION! Risk of Cuts or Abrasions. Wear protective gloves and safety glasses during installation.

NOTICE: Handle refractory panels with care. Refractory may chip or crack if dropped or impacted.

SPECIAL TOOLS

Screw gun equipped with 1/4 in. socket
1/4 IN. wrench or socket

REFRACTORY KIT COMPONENTS

- (2) Inside Side Panel
- (2) Inside Front Base
- (2) Inside Middle Base
- (2) Outside Right Panel
- (2) Outside Left Panel
- (2) Outside Hearth Panels

INSTALLATION

1. Side refractory panels are held in place by four hand bend refractory retainers formed from the top heat shield. Install side refractory with the notched end of the refractory on the bottom. See Figure 1 and Figure 2. Ensure that side refractory panels are centered left to right and do not extend past the outer firebox flange. Secure refractory by bending down hand bend feature from the top heat shield.



Figure 1. Notched End of Side Refractory

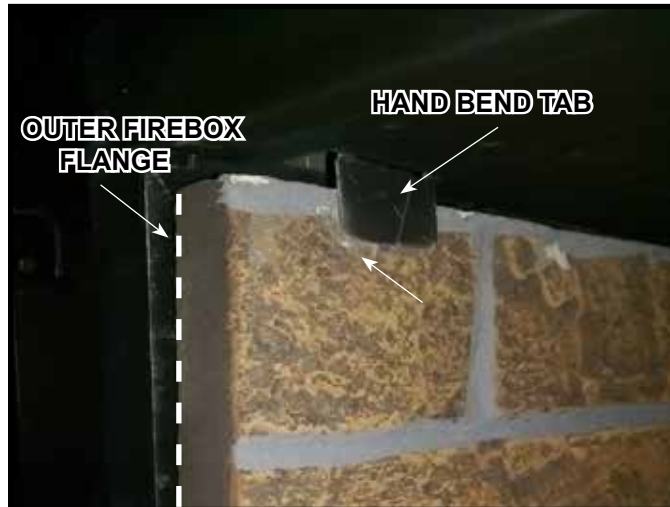


Figure 2. Refractory Installation

2. Install the left and right refractory middle base refractory pieces on top of the left and right bottom refractory standoffs. See Figure 3 and 4. Position so that the edge is flush with the ember light housing.



Figure 3. Positioning Inner Bottom Refractory



Figure 4. Positioning Left and Right Middle Base Refractory



Figure 5. Positioning Outer Bottom Refractory.

3. Install two outer bottom refractory pieces as shown in Figure 5. Ensure that outer bottom refractory pieces do not extend past the outer firebox flange.

Installing Fixed Glass Assembly

Return to the MARQ42STIN Installation Manual Section 11A for glass Installation instructions. Once the glass is installed continue to Install Outer Refractory Panels.

Install Outer Refractory Panels

1. The refractory brackets are shipped with an extra screw to secure placement during shipping. See Figure 6. Remove the indicated screws to allow adjustment of the refractory brackets. See Figure 7.
2. Install both outer refractory side panels and install refractory bracket to secure refractory panels in place. See Figure 7.
3. Install outer hearth. See Figure 8.
4. Repeat outer refractory panel instructions for opposite side.



Figure 6. Shipping Location of Refractory Brackets



Figure 7. Side Refractory Brackets



Figure 8. Outer Hearth Installation

Please contact your Majestic, Hearth & Home Technologies dealer
with any questions or concerns.

For the location of your nearest Majestic, Hearth & Home
Technologies dealer,
please visit www.majesticproducts.com.

Hearth & Home Technologies
7571 215th Street West, Lakeville, MN 55044
www.hearthnhome.com