

STUDIO-V12, STUDIO-S21, STUDIO-H31 DECORATIVE FRONTS

Installation Instructions



Leave this manual with party responsible for use and operation.

⚠ WARNING



HOT SURFACES!

Glass and other surfaces are hot during operation AND cool down.

Hot glass will cause burns.

- Do not touch glass until it is cooled
- NEVER allow children to touch glass
- Keep children away

- CAREFULLY SUPERVISE children in same room as fireplace.
- Alert children and adults to hazards of high temperatures.

High temperatures may ignite clothing or other flammable materials.

- Keep clothing, furniture, draperies and other flammable materials away.

This appliance has been supplied with an integral barrier to prevent direct contact with the fixed glass panel. Do NOT operate the appliance with the barrier removed.

Contact your dealer or Hearth & Home Technologies if the barrier is not present or help is needed to properly install one.

CAUTION! Risk of Cuts or Abrasions. Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

CAUTION! Do not install damaged components. If you received components that are damaged, contact your dealer for assistance.

INSTALLATION

Note: A panel kit or glass kit and the appropriate knobs are required to finish the Studio Front. See Figures 6-9.

1. Remove decorative front and hardware bag from packaging.
2. Install shoulder bolts securely into the threaded holes on the appliance outer wrap in four locations. See Figure 1.

WARNING! Risk of injury! Install shoulder bolts securely to prevent interference with glass in case of delayed ignition.

3. Remove and discard the four screws to separate the door top from the door assembly. See Figure 2.
4. Install door top. The door top must be slid back until it passes completely over the rear return bend. See Figure 3.
5. **STUDIO-H31 ONLY:** Remove the four fasteners from the top shipping bracket and the four fasteners from the bottom shipping bracket. Remove and discard shipping brackets.
6. Install the decorative front on the appliance by matching the four hooks on the decorative front with the four shoulder bolts on the appliance. See Figure 1.
7. Panels and knobs are packaged and sold separately from the decorative front. See Figures 6, 7 and 8.

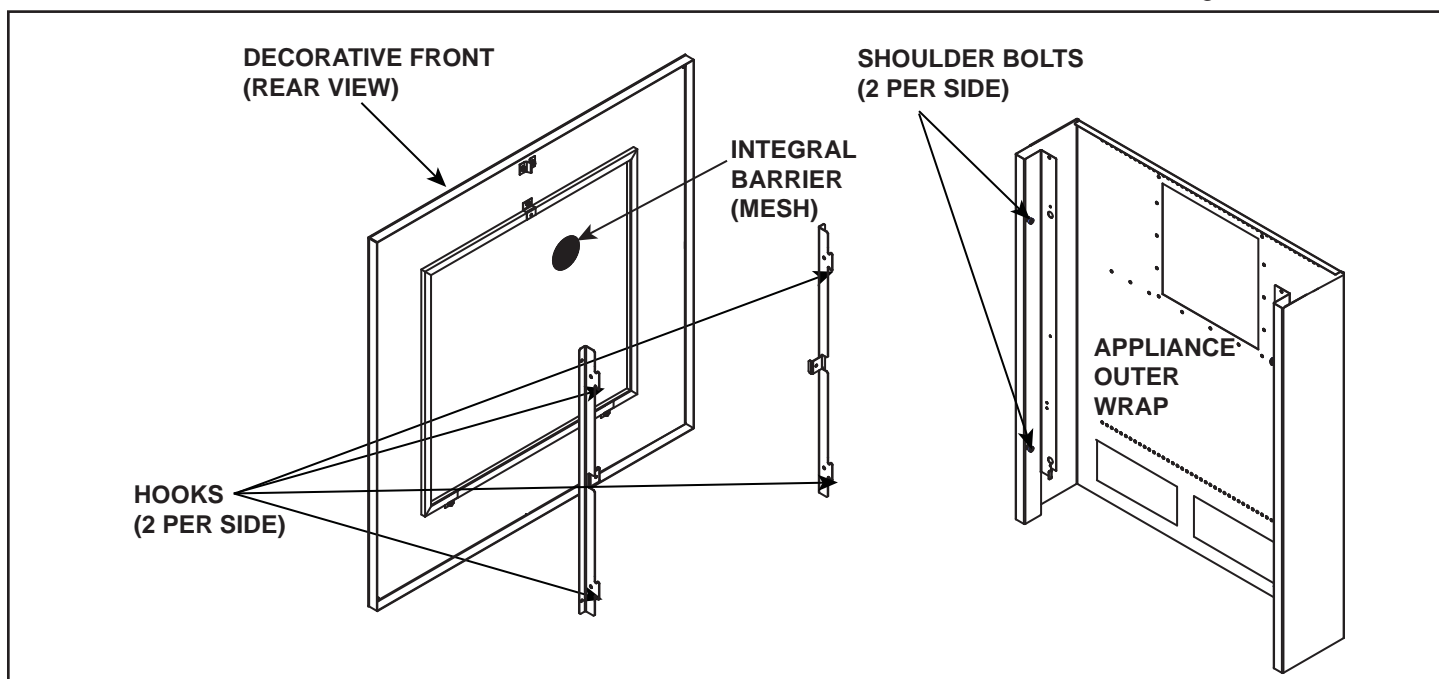


Figure 1. Hook and Shoulder Bolt Locations

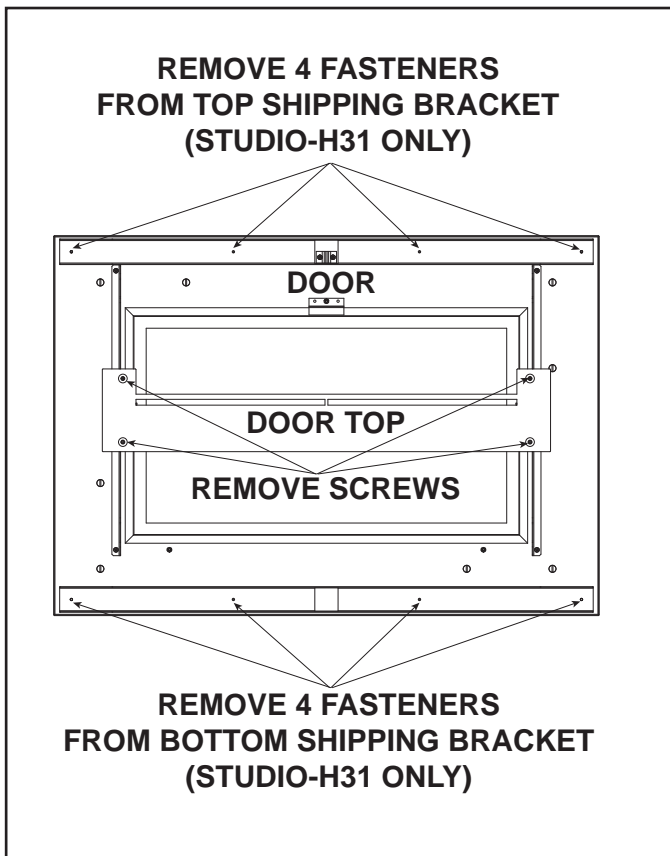


Figure 2. Separate Door Top from Decorative Front

8. Install the four decorative panels onto the panel bolts on the decorative front. Be sure the bolts and threaded barrels are secured tightly. See Figure 4. The required hardware, excluding the knobs, is shipped with the decorative front. Refer to Figure 6 for steel panels and Figure 7 for glass panels to determine the specific hardware needed. Figure 8 shows the order in which the hardware and panels are installed.

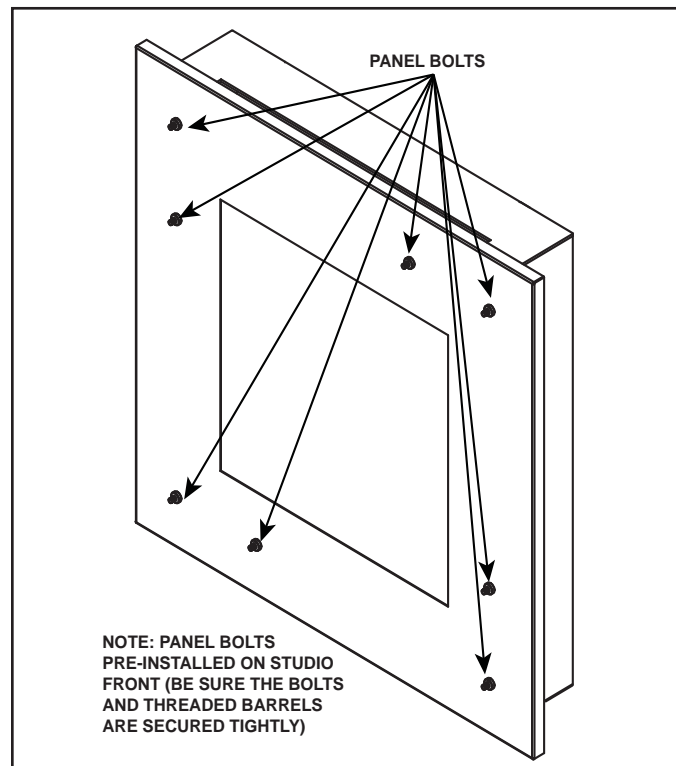


Figure 4. Panel Bolts

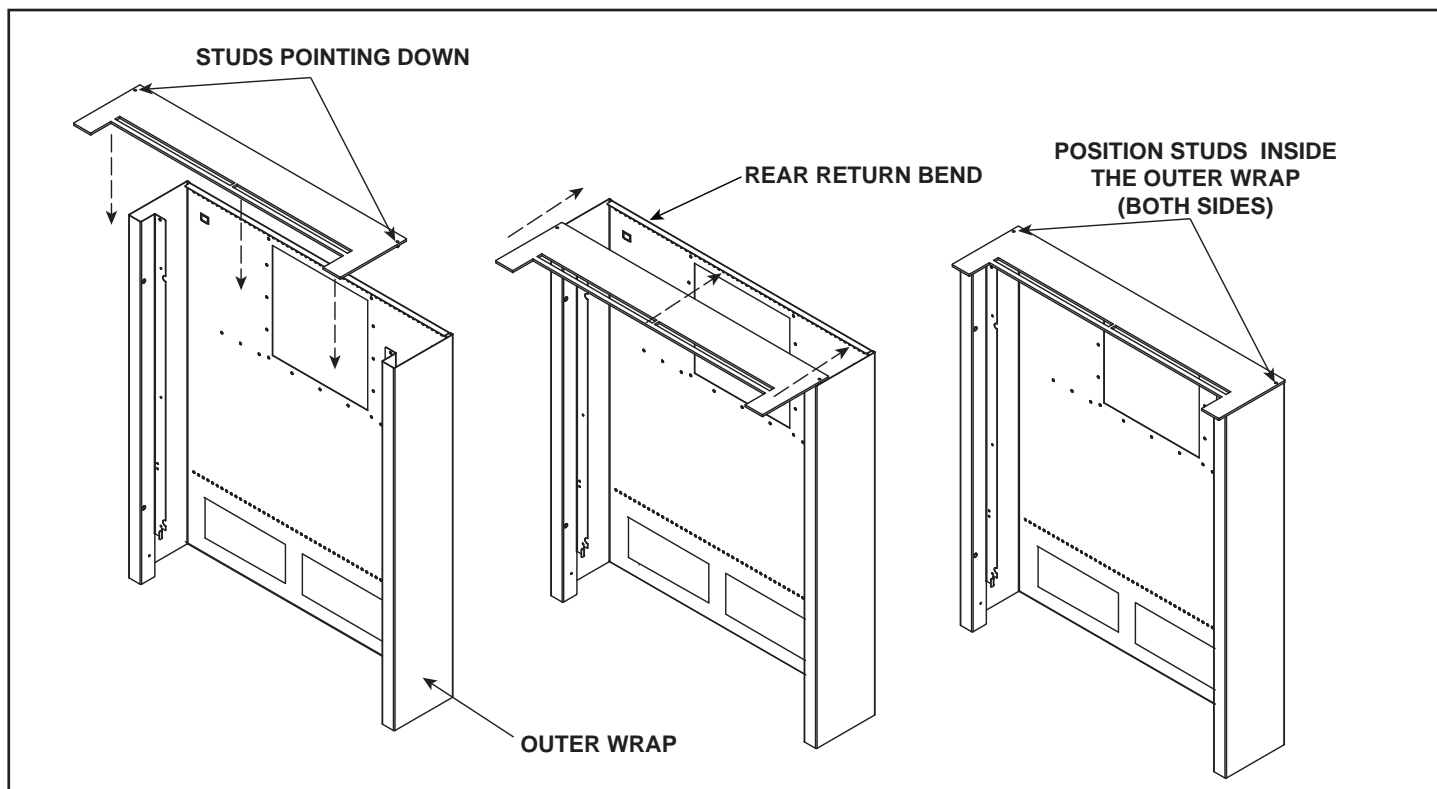


Figure 3. Install the Door Top

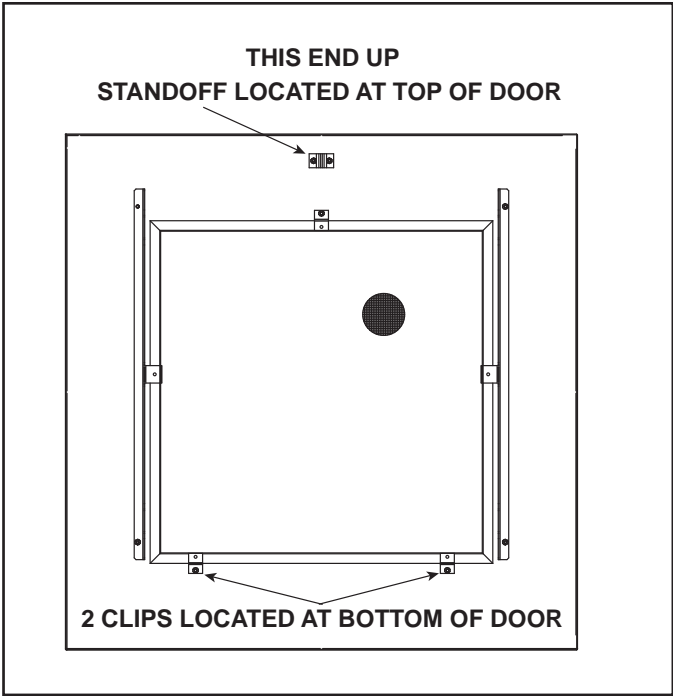


Figure 5. Decorative Front - Rear View

#5 NOT USED WITH STEEL PANELS

Number	Part Number	Description	Quantity	Assembly Required
1	2003-134	Bolt	8	No
2	2273-210	Threaded Barrel	8	No
3	2273-801	Metal Washer	16	Yes
4	7000-248	Plastic Washer	16	Yes
5	2273-211	Sleeve	16	N/A
6	KNOB-8-W (White) KNOB-8-B (Black) KNOB-8-G (Gray)	Knobs(Sold Separately)	8	Yes

Figure 6. Required Hardware - Steel Panels

#3 NOT USED WITH GLASS PANELS

Number	Part Number	Description	Quantity	Assembly Required
1	2003-134	Bolt	8	No
2	2273-210	Threaded Barrel	8	No
3	2273-801	Metal Washer	16	N/A
4	7000-248	Plastic Washer	16	Yes
5	2273-211	Sleeve	8	Yes
6	KNOB-8-W (White) KNOB-8-B (Black) KNOB-8-G (Gray)	Knobs (Sold Separately)	8	Yes

Figure 7. Required Hardware - Glass Panels

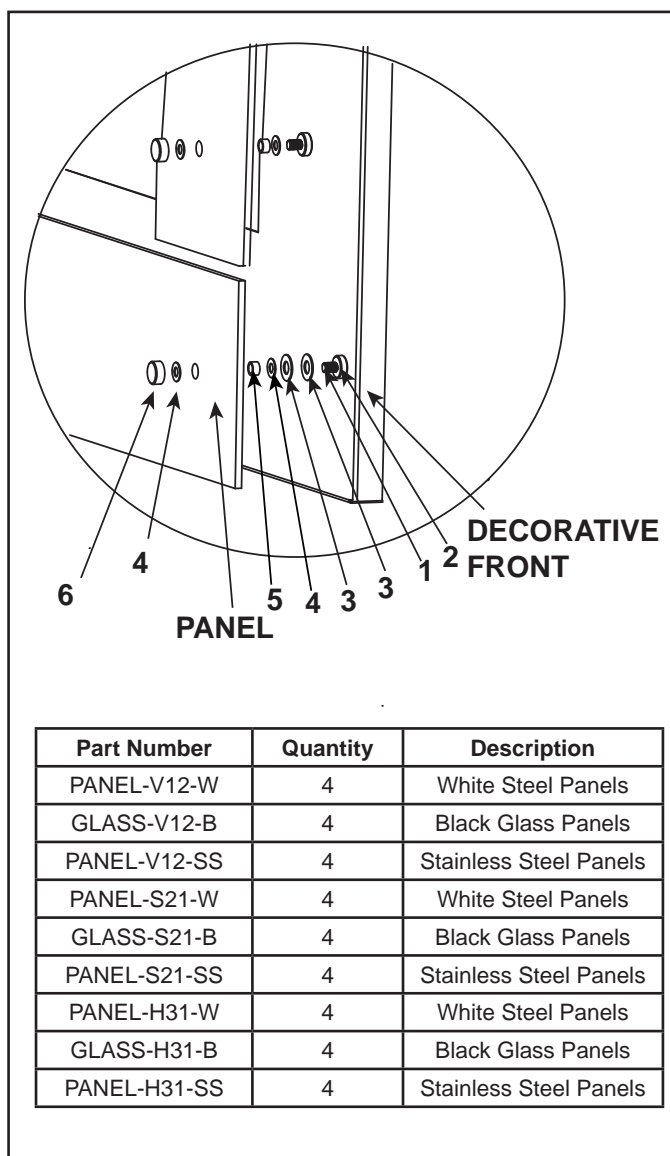


Figure 8. Panel/Glass Component Information

WARNING! Risk of Overheating and Fire! Do not allow convection air outlet to be blocked or covered. Non-combustible material must not exceed 4 inches in thickness. See Finishing Section of Appliance Installation Manual.

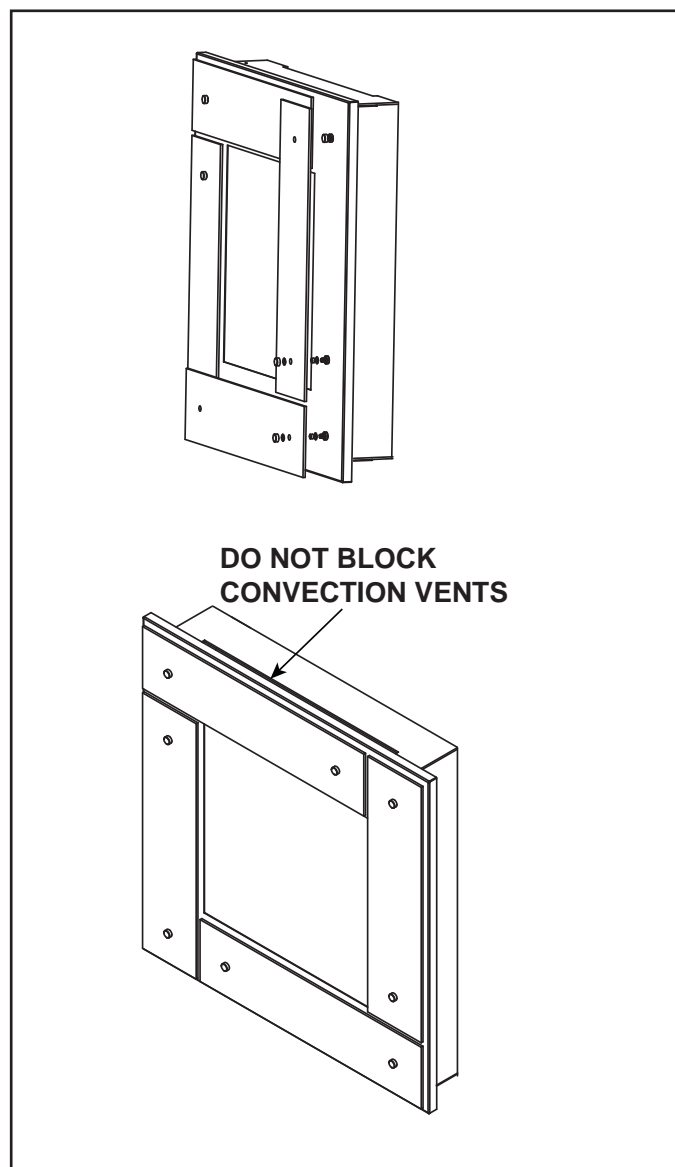


Figure 9. Decorative Front Finished with Panels

Cleaning Instructions for Doors

Use a microfiber cloth and Windex® Original Glass Cleaner or 03M003 Stove Bright® Glass Cleaner to clean the door immediately after installation to remove acids deposited by the installer or technician. Spray the cleaner onto the microfiber cloth and carefully wipe the entire surface. The door should be cleaned in this manner annually by the homeowner to remove fingerprints or other contaminants. Once oxidation of the paint pigment has occurred, cleaning will not restore the original color.

Please contact your Heat & Glo dealer with any questions or concerns.
For the location of your nearest Heat & Glo dealer,
please visit www.heatnglo.com.

Heat & Glo, a brand of Hearth & Home Technologies
7571 215th Street West, Lakeville, MN 55044
www.heatnglo.com