

**Models:**  
**DFG4036, DFG4042, DFG4050, Glass Door Kits**  
**DFS4036, DFS4042, DFS4050 Mesh Door Kits**



These door kits have been tested for use with specific Hearth & Home Technologies products. Check with your local building code agency before you begin installation to ensure compliance with local codes, including the need for permits and follow-up inspections. If you encounter any problems regarding code approvals, or if you need clarification of any of the instructions contained here, contact your Hearth & Home Technologies Inc. dealer. For the dealer nearest you, please visit [www.hearthnhome.com](http://www.hearthnhome.com).

## WARNING



### HOT SURFACES!

Screen/mesh, glass doors and other surfaces are hot during operation AND cool down.

#### Hot screen/mesh and glass doors will cause burns.

- Do not touch screen/mesh or glass doors until cooled
- NEVER allow children to touch screen/mesh or glass doors
- Keep children away
- CAREFULLY SUPERVISE children in same room as fireplace.
- Alert children and adults to hazards of high temperatures.

#### High temperatures may ignite clothing or other flammable materials.

- Keep clothing, furniture, draperies and other flammable materials away.

**NOTICE:** All fingerprints and smudges must be wiped clean from the viewable surfaces of the door kit prior to the initial burning of the fireplace. If this is not done, these prints and smudges will be cured into the finish and set for the life of the fireplace. To keep the finish looking its best, gently wipe with a soft cloth and if desired, soap and water. Never use thinner or abrasive cleaners since these products will damage the finish.

**CAUTION! Risk of Cuts/Abrasions.** Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

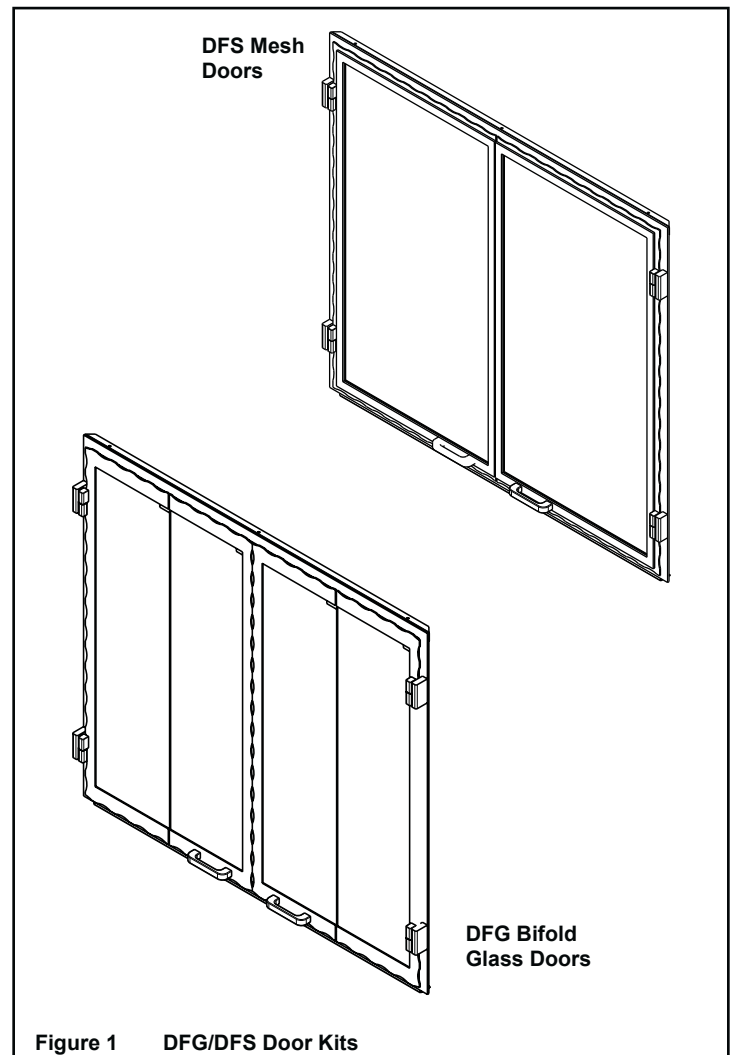 


Figure 1 DFG/DFS Door Kits

**CAUTION! The door kit is heavy. We recommend two installers to put the doors in place.**

**WARNING! Risk of Fire! DO NOT place combustible materials on the metal fireplace face or columns.**

## A. Install Doors

- Set frame in fireplace. Make sure the hinges face out.
- Line up holes in the top frame with the threaded holes on the fireplace.
- Attach the top of the frame to the fireplace with the three machine screws provided. Refer to Figure 2.
- If the bottom mounting plate is not sitting flush on the hearth stone, loosen but do not remove the two nuts (one at each end) indicated in Figure 2.
- Push the bottom mounting plate down tight to the stone.
- Adjust the bottom of the door frame so it is flush with the front of the fireplace columns.
- Tighten the two adjustment screws.
- Install the two thumb screws in the mounting plate and tighten.
- Place the doors on the hinges (tighten hinges if necessary).

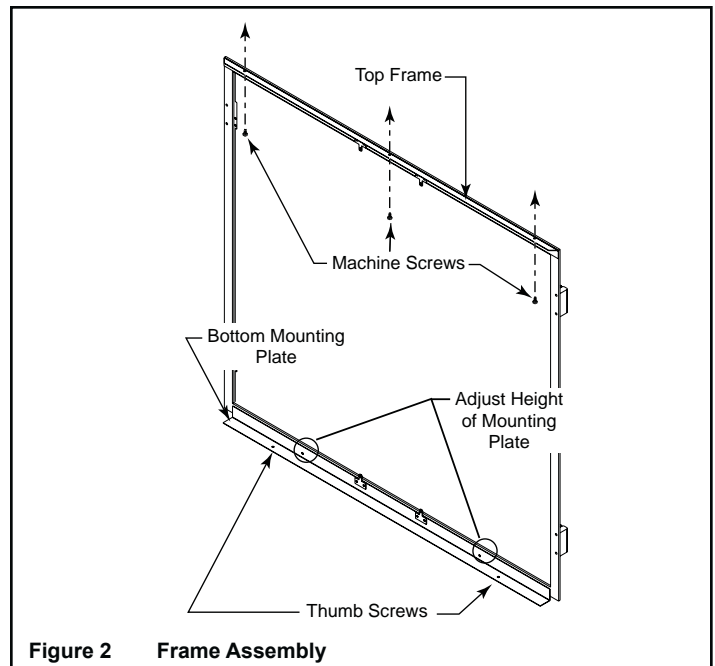 


Figure 2 Frame Assembly

## B. Remove / Reinstall Firescreens

**WARNING! Risk of Fire or Burns! DO NOT remove the firescreens if you are installing glass bifold doors.**

- Firescreens must be closed if the fireplace is operated with the doors open.
- Sparks and embers could cause fire or injury.
- It is not necessary to remove the firescreens for door installation.
- If you wish to remove the firescreens from behind the mesh doors:
  - Remove the screw from the flat end of the rod (center of fireplace).
  - Reach up into the top right of the firebox, slip the last ring off the screen rod.
- Pull rod (along with the firescreen) out of the rod clip and discard. Replace the screw.
- Repeat this process to remove the screen from the left side of the fireplace.

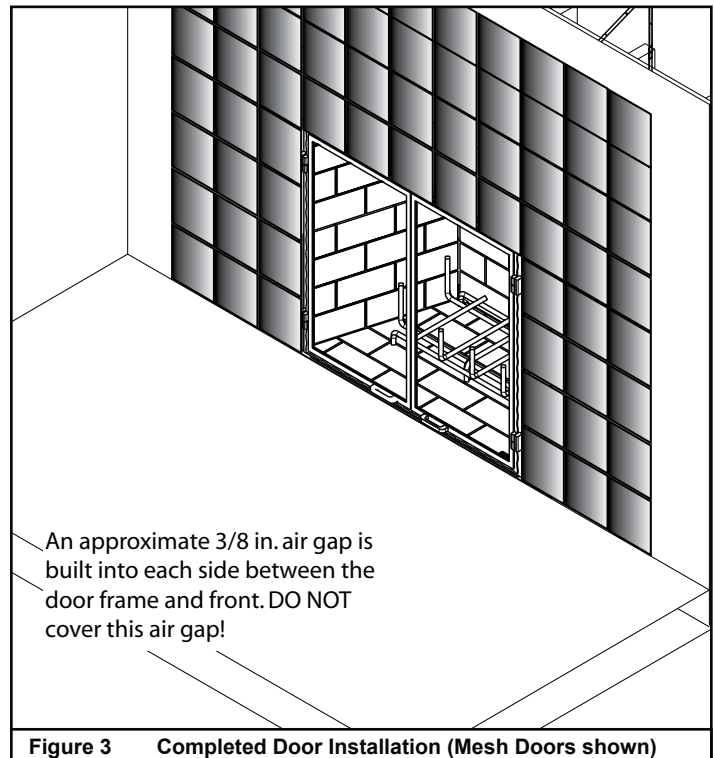 


Figure 3 Completed Door Installation (Mesh Doors shown)