

Deco Decorative Front

Model: RAVE3012I

Installation & Operating Instructions

heatilator®
The first name in fireplaces



Leave this manual with party responsible for use and operation.

CAUTION! Risk of Cuts or Abrasions. Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

CAUTION! Do not install damaged components.

⚠ WARNING



HOT SURFACES!

Glass and other surfaces are hot during operation AND cool down.

Hot glass will cause burns.

- **DO NOT** touch glass until it is cooled
- **NEVER** allow children to touch glass
- Keep children away

- **CAREFULLY SUPERVISE** children in same room as fireplace.
- Alert children and adults to hazards of high temperatures.

High temperatures may ignite clothing or other flammable materials.

- Keep clothing, furniture, draperies and other flammable materials away.
- Do **NOT** operate with protective barriers open or removed.
- These instructions are to be left with a person responsible for the use and operation of the fireplace.

WARNING! Risk of Fire! Combustible materials **MUST NOT** overlap a decorative front.

CONTENTS:

- Decorative Front Assembly
- Four Shoulder Bolts
- Mesh screen and two mesh clips

Verify and remove contents from packaging before beginning installation.

Installation Instructions

1. Locate the two top slots in the glass frame assembly. These will correspond to two mesh clips on the mesh frame assembly. See Figure 2.
2. Slide mesh into two bottom permanent glass retainers and snap the two mesh clips into the two corresponding top slots in the glass frame assembly. See Figure 2. Ensure that the mesh frame assembly is installed so that the spline is projecting outward from the fireplace. See Figure 1.
3. Install four shoulder bolts included in kit. See Figure 3.



Figure 1. Location of Mesh Clips.

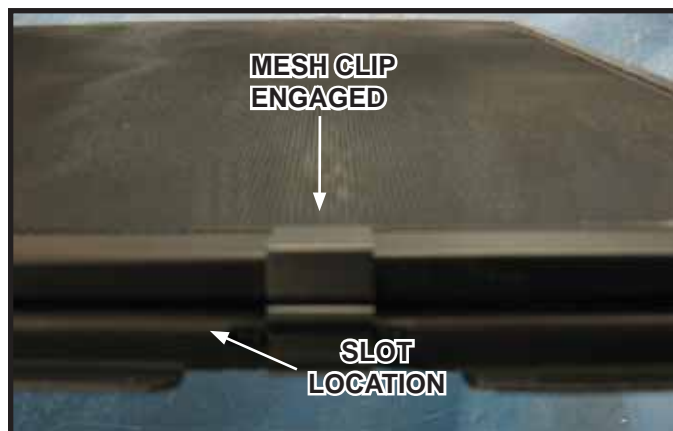


Figure 2. Mesh Clips Installed.



Figure 3. Location of Shoulder Bolts

4. Install the door into the fireplace opening. Note the orientation of the door brackets. The slots in the brackets will only line up with the shoulder bolts on the fireplace if the door is installed correctly.
5. Push decorative front toward fireplace. Slide front tight against finishing material.

Removing and Replacing Fixed Glass Assembly

WARNING! Risk of Asphyxiation! Handle fixed glass assembly with care. Inspect the gasket to ensure it is undamaged and inspect the glass for cracks, chips or scratches.

- **DO NOT** strike, slam or scratch glass.
- **DO NOT** operate fireplace with glass removed, cracked, broken or scratched.
- Replace as a complete assembly.

Removing Fixed Glass Assembly

1. Remove the decorative front.
2. Remove mesh from glass by releasing two top mesh clips.
3. Locate the two spring latches that are on the upper left and right of the fireplace.
4. Use both index fingers to release spring latches.
5. Allow glass to tilt forward. Grasp glass on the upper right and left sides and lift glass “up” and “out.”

Replacing Fixed Glass Assembly

1. Grasp glass on upper right and left sides and tilt bottom of glass assembly toward fireplace.
2. Allow of the bottom gasketing of the glass assembly to touch the face of the fireplace.
3. Put pressure on the glass as you allow the glass assembly to drop into the two lower glass retainers.
4. Tilt top of glass towards fireplace and engage both top spring latches.

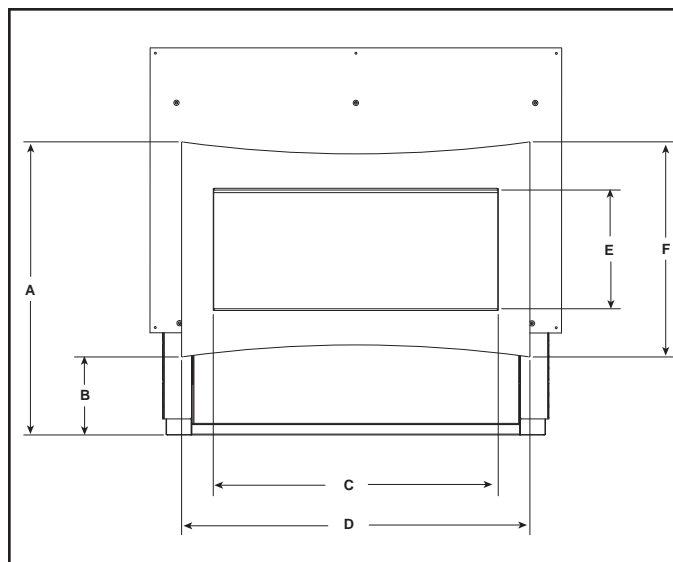


Figure 5. Dimensions of Deco Decorative Front.

Table 1. Dimensions of Deco Decorative Front.

A	Top of decorative front to bottom of appliance.	27-3/4 in.	705 mm
B	Bottom of decorative front to bottom of appliance.	7-3/8 in.	187 mm
C	Inside dimension of decorative front (width).	27 in.	686
D	Outside dimension of decorative front (width).	33 in.	838
E	Inside dimension decorative front (height).	11-1/4 in.	286
F	Outside dimension of decorative front (height).	20-3/8 in.	518 mm

Service Parts

PART #	DESCRIPTION
SRV-SLR32-MESH	Replacement Mesh

Cleaning Instructions for Fronts

Use a microfiber cloth and Windex® Original Glass Cleaner or 03M003 Stove Bright® Glass Cleaner to clean the front immediately after installation to remove acids deposited by the installer or technician. Spray the cleaner onto the microfiber cloth and carefully wipe the entire surface. The front should be cleaned in this manner annually by the homeowner to remove fingerprints or other contaminants. Once oxidation of the paint pigment has occurred, cleaning will not restore the original color.

Please contact your Heatilator dealer with any questions or concerns.

For the location of your nearest Heatilator dealer, please visit www.heatilator.com.

Heatilator, a brand of Hearth & Home Technologies Inc.
7571 215th Street West, Lakeville, MN 55044
www.heatilator.com