

VWL-18-B SET-UP INSTRUCTIONS



4004-148



4004-147



4004-146



4004-143



4004-144



4004-145

1



STEP ONE: PLACE 4004-148 AS SHOWN

2



STEP TWO: PLACE 4004-147 AS SHOWN

3



STEP THREE: PLACE 4004-146 AS SHOWN

4



STEP FOUR: PLACE 4004-143 AS SHOWN

5



STEP FIVE: PLACE 4004-144 AS SHOWN

6



STEP SIX: PLACE 4004-145 AS SHOWN