



Log Set Assembly

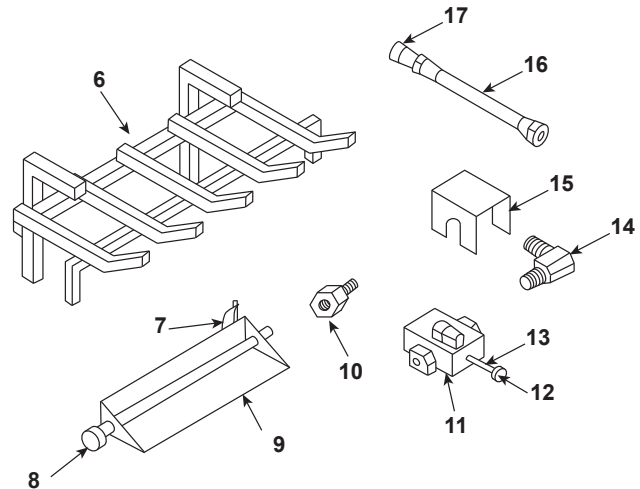

IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.

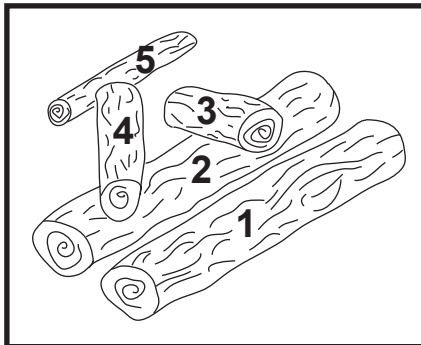

**Stocked
at Depot**

ITEM	DESCRIPTION	COMMENTS	PART NUMBER	
1	Log, Front Bottom	No longer available	13422B	
2	Log, Back	No longer available	14288B	
3	Log, Short Top	No longer available	13424A	
4	Log, Long Top	No longer available	13423B	
5	Log, Top Twig	No longer available	14285B	
6	Grate Assembly	No longer available	31154	
7	Pilot Assembly - NG	No longer available	14201D	
	Pilot Assembly - LP	No longer available	14206C	
8	Burner Cap	No longer available	14322B	
9	Burner Pan Assembly - NG	No longer available	14191A	
	Burner Pan Assembly - LP	No longer available	14207A	
10	Orifice - NG	No longer available	14202B	
11	Valve	No longer available	14320B	
12	Valve Extension Knob	No longer available	14549A	
13	Handle Extension - 3 in.	No longer available	14321B	
14	Brass Connector Elbow, 90 degree		SRV4021-045	
15	Valve Shield Assembly	No longer available	14340A	
16	Gas Tube Assembly	No longer available	14339B	
17	Brass Fitting	No longer available	14325/2	
	Air Mixer Assembly - LP	No longer available	15504A	
	Brass Male Connector - Flex	Pkg of 5	303-315/5	Y
	Damper Stop		14354	Y
	Flare End, 3/8 in.	No longer available	14324B	
	Lava Rock (2 lb.)		4021-296	
	Mineral Wool		SRV14333	
	Sand	No longer available	14330A	
	Vermiculite		28746	
	Installation Instructions		14306C	