 


Log Set Assembly

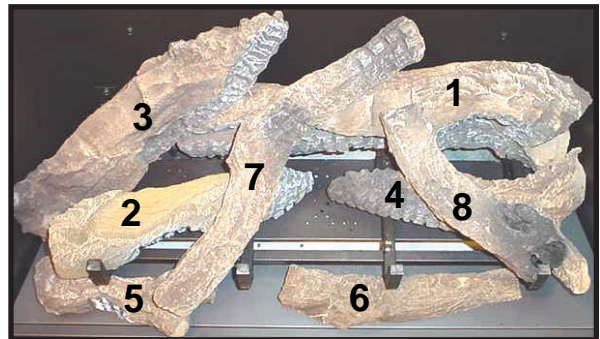

Part number list on following page.




No one builds a better fire

IMPORTANT THIS IS DATED INFORMATION: When Requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.

ITEM	DESCRIPTION	SERIAL #	PART NUMBER
	Log Set Assembly		LOGS-550TRSAUD
1	Log #1		SRV550-715
2	Log #2		SRV347-703
3	Log #3		SRV349-704
4	Log #4		SRV278-705
5	Log #5		SRV540-704
6	Log #6		SRV550-718
7	Log #7		SRV484-703
8	Log #8		SRV347-701
9	Grate		2021-007
10	Base Refractory		550-117
11	Burner Assembly N		2079-010
	Burner Assembly P		2079-012
	Burner Assembly B		2079-014
12	Glass Door Assembly		GLA-550TRS
13	Hood		SRV550-175
14	Top Louver		550-251A
15	Dress Guard		2079-040
16	Lower Door		2079-041
17	Switch Sensor		046-530
18	Junction Box		2078-025
19	Power Cord		546-251A
20	Blower Assembly 240V		100-505A
	Interior Top Heat Shield		2079-109
	Glass Latch Assembly		386-122A
	Mineral Wool		050-721
	Mesh Assembly		561-330A
	Exhaust Restrictor		347-299
	Wire Harness 20 in.		107-558A
	Gasket Assembly Includes: Burner Neck, Shutter Bracket, Vent, Seal Cap, Valve plate, and Air Passage Gaskets		2115-080
	Touch Up Paint		TUP-GBK-12
	Heat Shield (Control Module)		2078-121
	Multi Function Remote Control		REM-DLX-CE
	Conversion Kits		
	Propane /Butane to Natural		PB2N-550I-AUE
	Propane to Butane		P2B-550I-AUE
	Natural to Propane		N2P-550I-AUE
	Natural to Butane		N2B-550I-AUE
	Pilot Orifice .0181		2098-518
	Pilot Orifice .0121		2098-512

Additional service parts numbers appear on following page.

 Valve Assembly

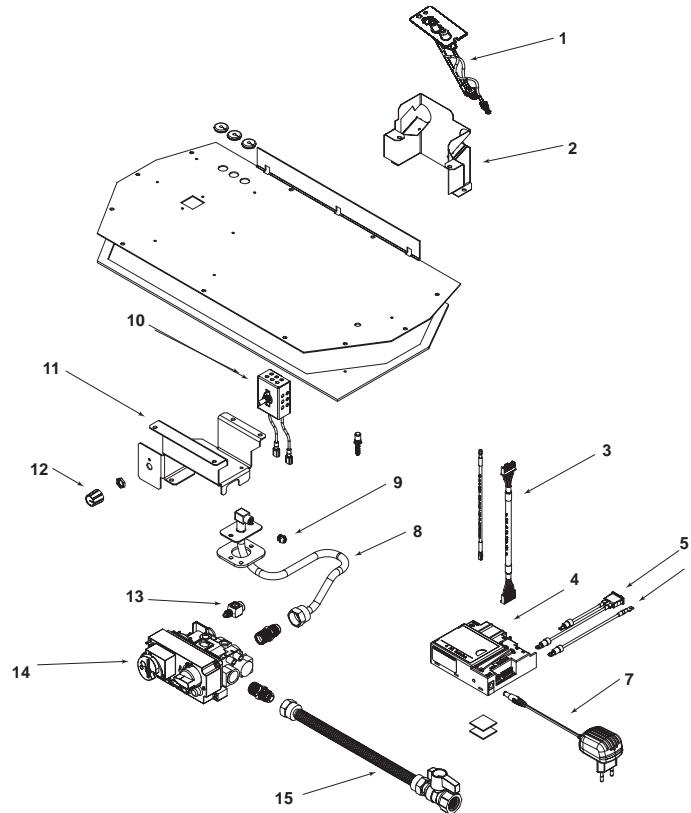

IMPORTANT THIS IS DATED INFORMATION: When Requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.

ITEM	DESCRIPTION	SERIAL #	PART NUMBER
1	Pilot Assembly N		2098-050
	Pilot Assembly P		2098-051
2	Pilot Bracket		2079-104
3	Control Cable		2098-143
4	Module, Maxitrol		2098-142
5	Switch Assembly		2098-145
6	Block Control Wire		2098-148
7	240V Adaptor		2098-144
8	Flexible Gas Connector		383-302A
9	Orifice N (#40C)		582-840
	Orifice P (.057C)		582-057
	Orifice B (#55C)		582-855
10	Rheostat		491-510A
11	Valve Bracket		2089-120
12	Rheostat Knob		100-512
13	Thermocouple Block		2098-146
14	Gas Shutoff Assembly		2098-320A
15	Valve N		2098-130
	Valve P		2098-131