

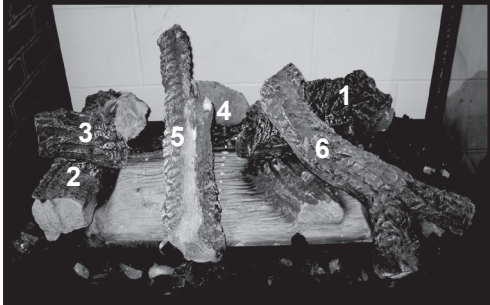


Log Set Assembly

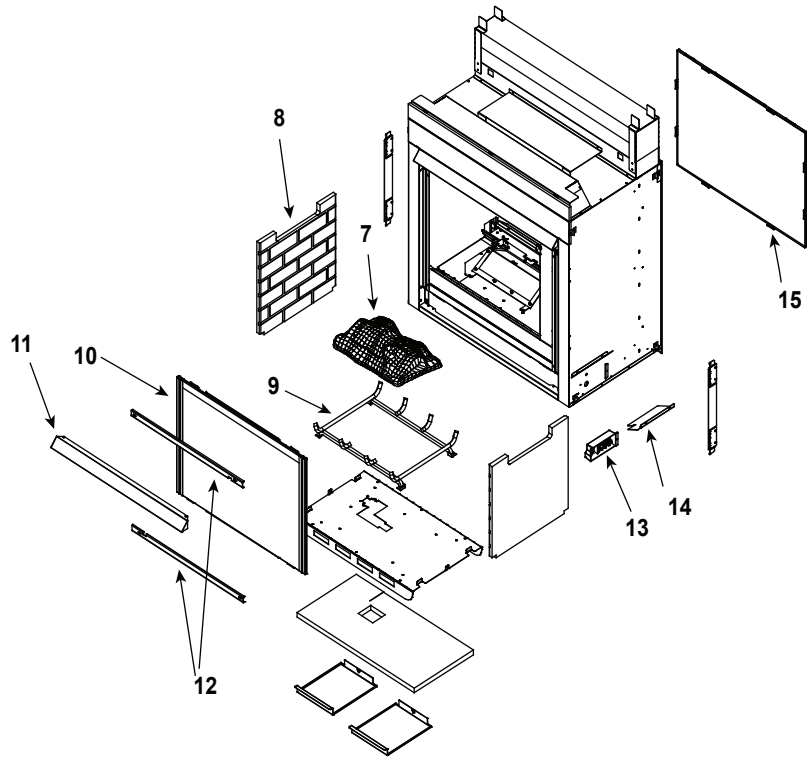

Wind Screen Assembly

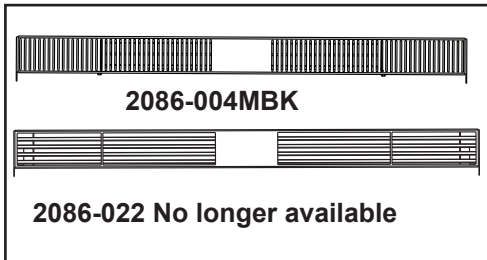


IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.



**Stocked
in Depot**

ITEM	DESCRIPTION	COMMENTS	PART NUMBER	
	Log Set Assembly /Burner Assembly		SRV2087-004	Y
1	Log 1		SRV2005-701	
2	Log 2		SRV2005-700	
3	Log 3		SRV2005-702	
4	Log 4		SRV2005-703	
5	Log 5		SRV2005-704	
6	Log 6		SRV2077-701	
7	Burner Assembly / Log Assembly		SRV2087-004	Y
	Burner Assembly	No longer available	2087-004	
9	Grate Assembly		SRV2005-012	
8	Refractory, Side		SRV2005-730	
10	Indoor Glass Assembly		GLA-6TROC	Y
11	Hood - Interior Side		SRV60-143-BK	
12	Glass Clip		2087-121	
13	Junction Box		SRV4021-013	Y
14	Junction Box Shield		2087-149	
15	Outdoor Glass Assembly	All others	GLA-OUTDOOR2	
		UPGRADE2-TWII (No longer available)	2086-024	

#16 Valve Assembly

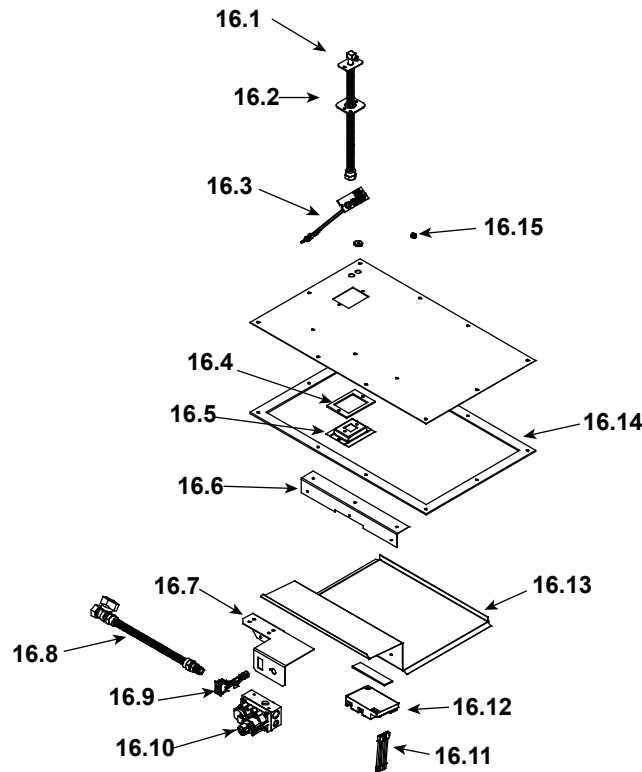

IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.



Stocked
in Depot

ITEM	DESCRIPTION	COMMENTS	PART NUMBER	
16.1	Flexible Gas Connector		383-302A	Y
16.2	Burner Neck Gasket		438-407	
16.3	Pilot Assembly NG		SRV2090-012	Y
	Pilot Assembly LP		2090-013	Y
	Pilot Tube		SRV446-301	Y
16.4	Orifice Bracket Gasket		2087-110	
16.5	Orifice Bracket		2087-109	
16.6	Valve L Bracket		674-168	
16.7	Valve Bracket		2087-116	
16.8	Flex Ball Valve Assembly		SRV302-320	Y
16.9	ON/OFF Rocker Switch		060-521A	Y
16.10	Valve NG		SRV593-500	Y
	Valve LP		SRV593-501	Y
16.11	Wire Assembly		SRV593-590	Y
16.12	Control Module		SRV593-592	Y
16.13	Valve Bracket		2087-117	
16.14	Valve Plate Gasket		2087-112	
16.15	Burner Orifice (NG) (#32C)		SRV582-832	Y
	Burner Orifice (LP) (#50C)		582-850	Y

Additional service part numbers appear on following page.

