LOG PLACEMENT INSTRUCTIONS

Log Set Assembly: SRV2384-070, SRV2385-070

Models: NNXT3933IF-B, NNXT3933ILF-B, NNXT4236IF-B, NNXT4236ILF-B NNXT33-IFT, NNXT33L-IFT, NNXT36-IFT, NNXT36L-IFT

See Table 1 for corresponding log set and individual logs for each size Novus model.

SIZE	3933 / 33	4236 / 36
ASSEMBLY	SRV2384-070	SRV2385-070
LOG 1	SRV2384-071	SRV2384-071
LOG 2	SRV2380-072	SRV2381-072
LOG 3	SRV2384-073	SRV2385-073
LOG 4	SRV2380-074	SRV2380-074
LOG 5	SRV2384-075	SRV2385-075
LOG 6	SRV2384-076	SRV2385-076

Table 1.

CAUTION: Logs are fragile, handle with care.

The log set is shipped from the factory with three logs already in place on the hearth pan. See Figure 1.

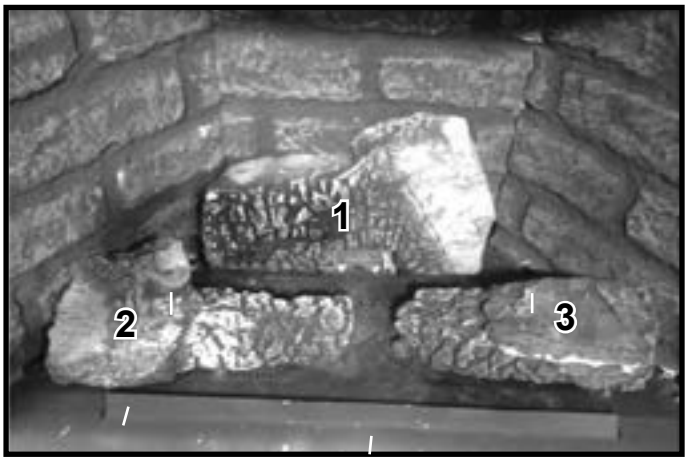


Figure 1. Log Set Shown as Shipped

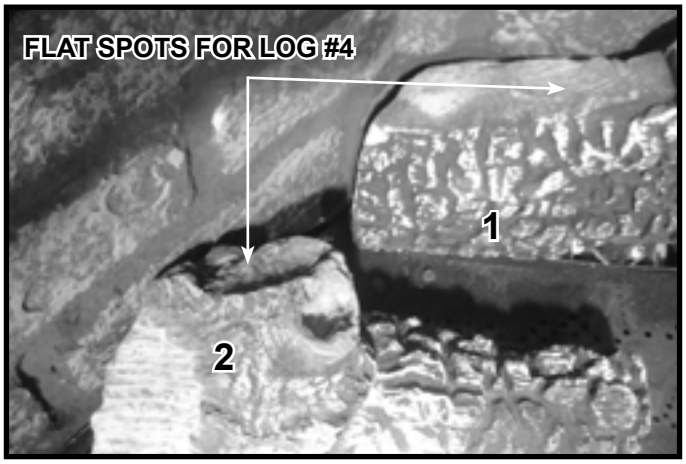


Figure 2. Locations of Flat Spots for Log #4

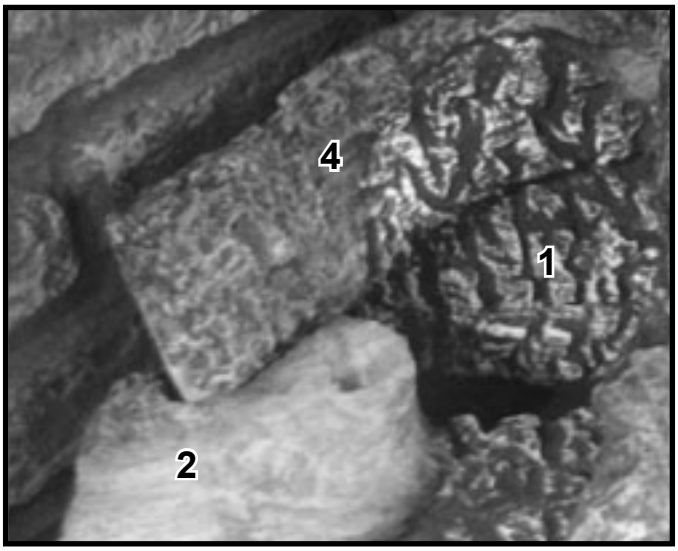


Figure 3. Log #4 in Position

LOG #4: Place Log #4 into position by setting the left end of Log #4 into the flat spot on Log #2 and then resting the right end, or nose, of Log #4 on the flat spot on Log #1. Figure 2 shows locations of flat spots. Figure 3 shows Log #4 installed.

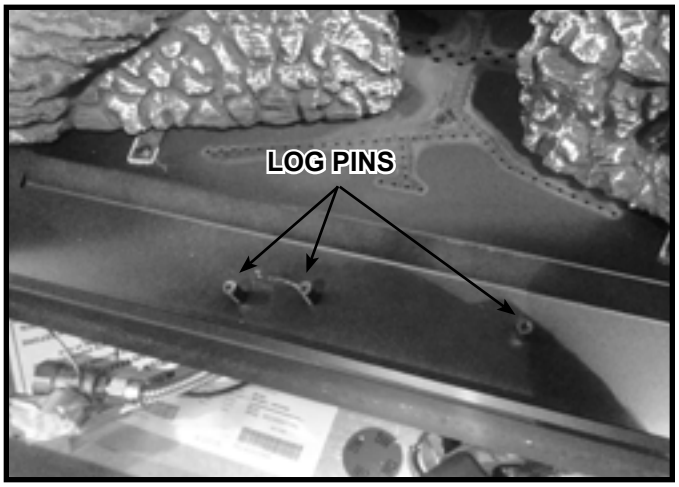


Figure 4. Log Pin Locations

Log #5: Place Log #5 into position. The forked end of Log #5 is positioned on the log pins as shown in Figure 5. The back end of Log #5 will rest on Log #4, but does not touch Log #1.

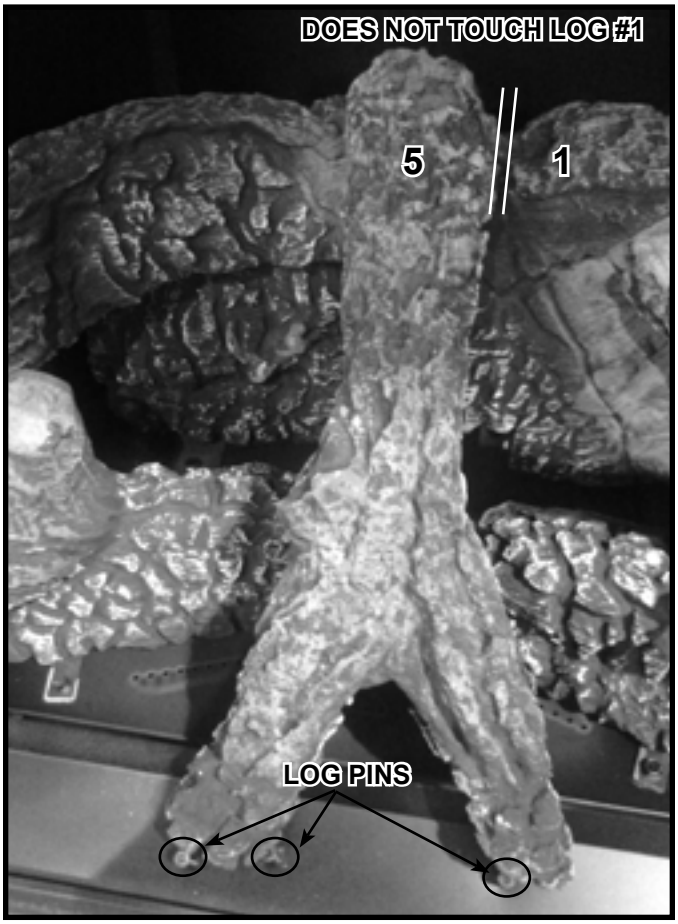


Figure 5. Log #5 in Position

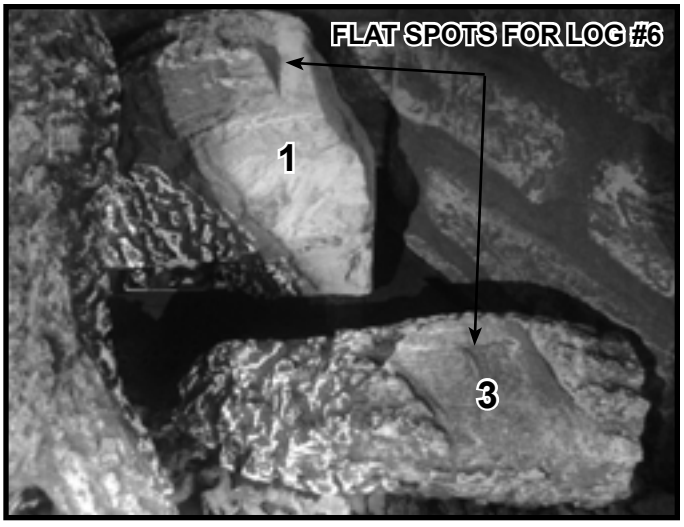


Figure 6. Locations of Flat Spots for Log #6

Log #6: Place Log #6 into position by setting the large end on the flat spot in Log #3 and then resting the small end on the flat spot on Log #1.

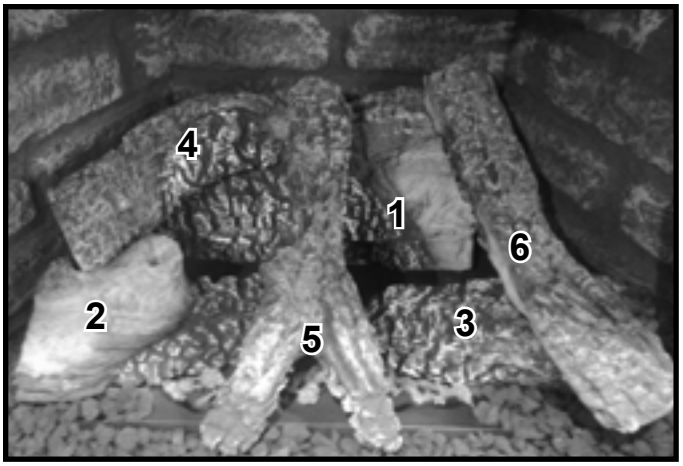


Figure 7. Log Set Installed