

### Tools Required:

Phillips Screwdriver

### Needed to complete:

(1) Log - 3-40-674099 (Figure 2)

### Installation Instructions:

**Step 1:** With the stove off and cool, open the front door. Place the bracket on the mounting tabs located on the door at the bottom of each glass panel.

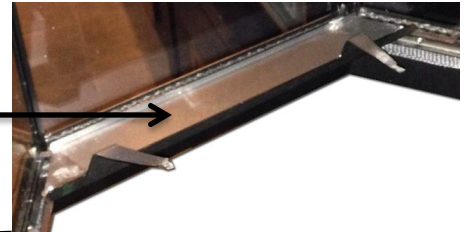


Figure 1

**Step 2:** Starting on the bottom, tighten screws firmly through tabs into bracket



Figure 2

**Step 3:** Place log on mounting bracket so the hooks from the bracket go into the holes on the bottom of the log set. Keep logs back from glass approximately 1 inch.

**Step 4:** Close the door and latch securely. The unit is now ready for burning.



Figure 3

**MAINTENANCE:** Ash build-up will occur and can be removed by tilting the log. Be careful not to breathe in the dust. Do not put the ash into a combustible container. Also, remove the log to scrape the burn pot. This will avoid possible damage to the log

### NOTES:

- The log will be hot when the stove is burning, and will retain some of the heat after shut down. Use proper protection when handling the log.
- *The high heat and abrasive nature of a pellet fire, coupled with continuous handling, can damage the logs. Based on this information, we highly recommend using the logs only for special occasions or when a decorative fire is wanted. For normal operation, burning without the logs results in a cleaner, more efficient burn and makes firebox maintenance easier*