



STEP 1. CAUTION: Carefully remove the logs from the packaging. Logs are fragile!




STEP 2. Place log #1 (SRV2014-701) centered on grate and 1-1/4 inch from back of firebox.




STEP 3. Place log #2 (SRV2014-703) with left tip on burner and right side pulled forward. Do not place log over burner ports.



STEP 4. Place log #3 (SRV2014-702) with right tip on burner and left end resting on grate. Do not place log over burner ports.

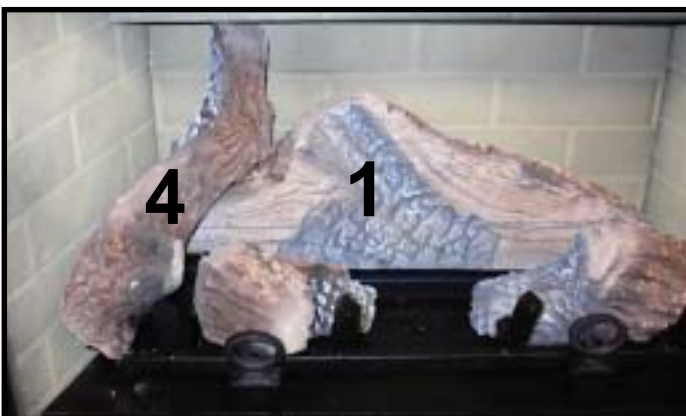

STEP 5. Place log #4 (SRV780-707) on log #1 with bottom end resting on grate and against left side of firebox.

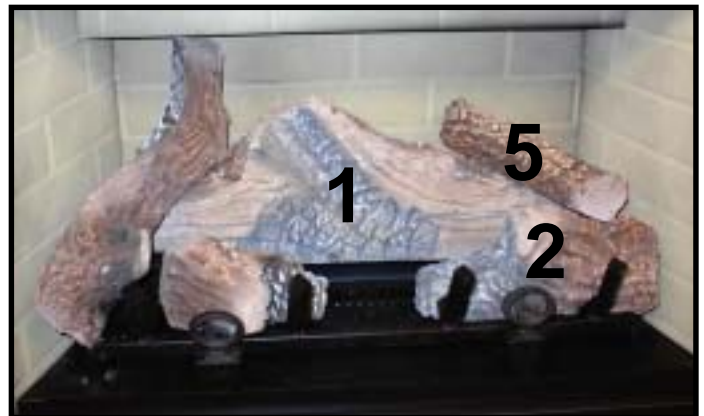

STEP 6. Place log #5 (SRV2014-704) on log #1 and log #2 with burned out area facing burner.