



**STEP 1:** Carefully remove the logs from the packaging. **CAUTION:** Logs are fragile!




**STEP 2: LOG #1 (SRV2016-701):** Place notches of log #1 on outer two grate tines, and push against back of firebox.




**STEP 3: LOG #2 (SRV2014-703):** Place log #2 with the left tip of the log on the flat spot on the burner. Pull the right part of the log to touch right grate tine, and the top of the log should rest against log #1.



**STEP 4: LOG #3 (SRV2014-703):** (This log is the same as log #2). Place log #3 with the flat side down and burned side into notch on burner. Pull left end forward against grate.

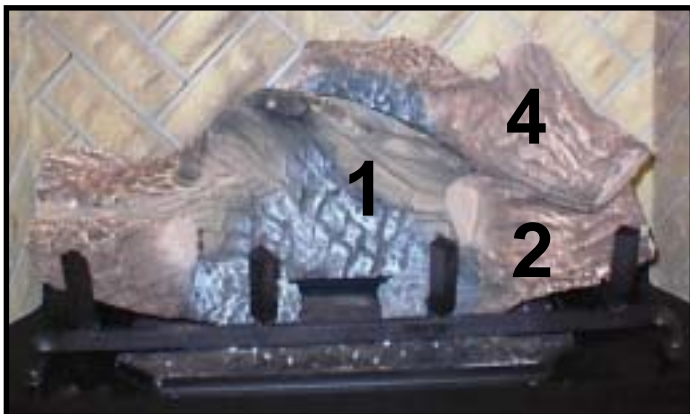

**STEP 5: LOG #4 (SRV780-707):** Place log #4 across log #1 and log #2 with burned out area facing out.

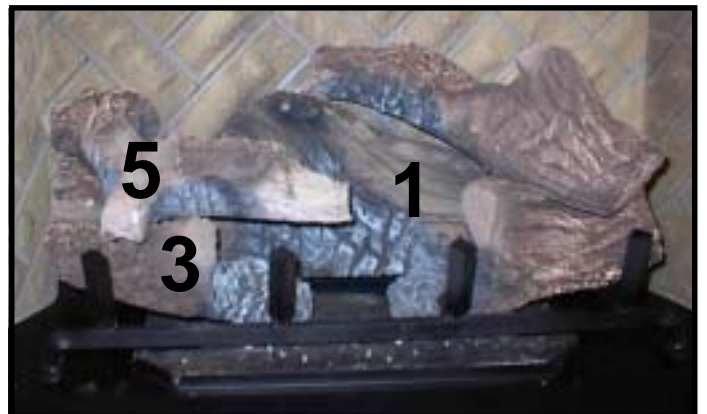

**STEP 6: LOG #5 (SRV700-706):** Place log #5 across logs #1 and #3 with the Y-shape facing out.