



LOG PLACEMENT INSTRUCTIONS

Log Assembly: LOGS-295
Models: QV36D, QV36D-A

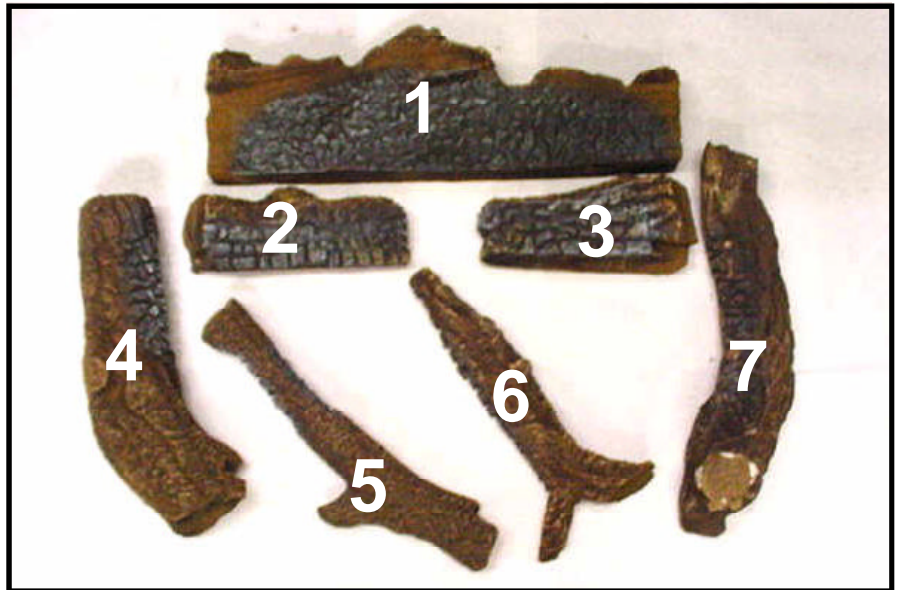


STEP 1:

Bend log locator tabs to a vertical position on log support bracket. Place slots on bottom of log #1 (SRV364-701) on log support bracket such that locator tabs mate with the positioning slots on the log bottom.

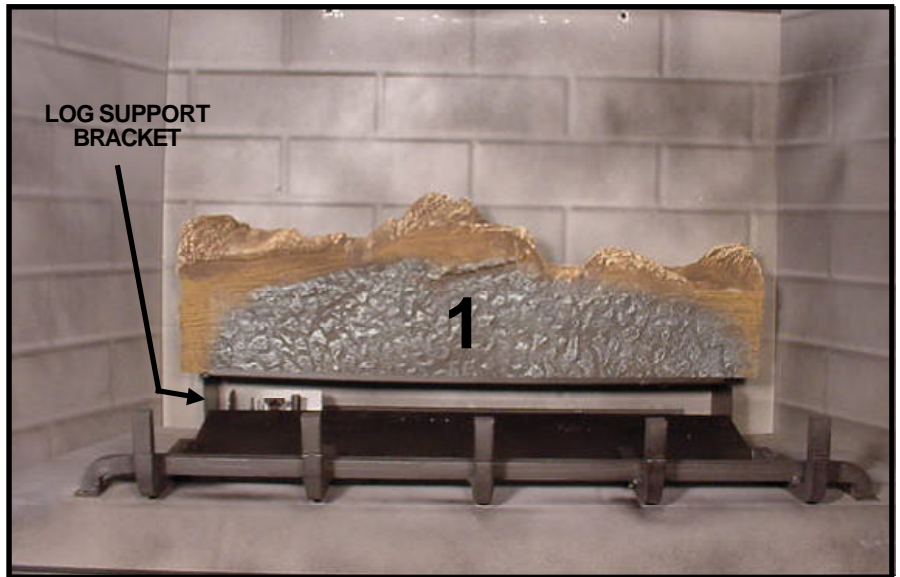


STEP 2:

Align the slot on bottom of log #2 (SRV364-706) with left grate bar. Pull log forward until it makes contact with second bar on grate.

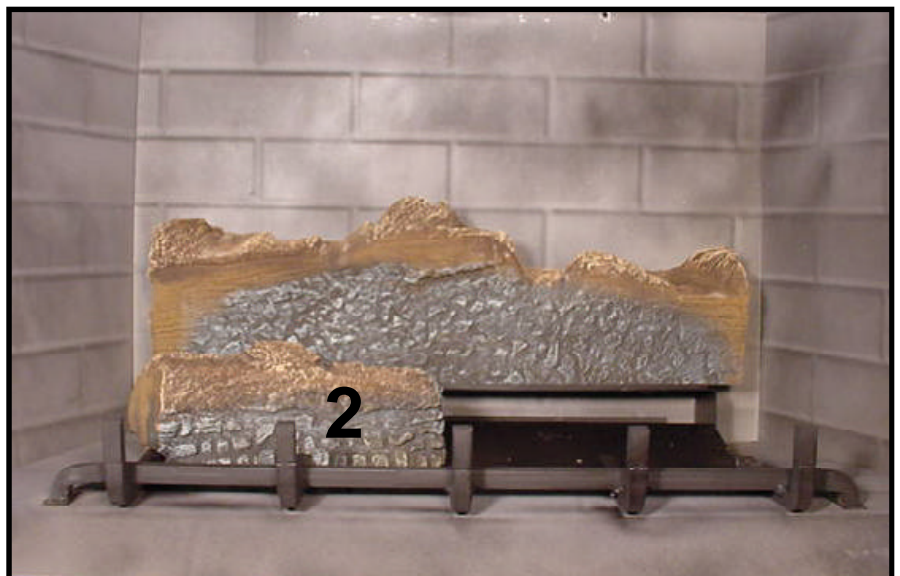

STEP 3:

Align the slot on bottom of log #3 (SRV364-707) with right grate bar. Pull forward until it makes contact with fourth bar on grate.

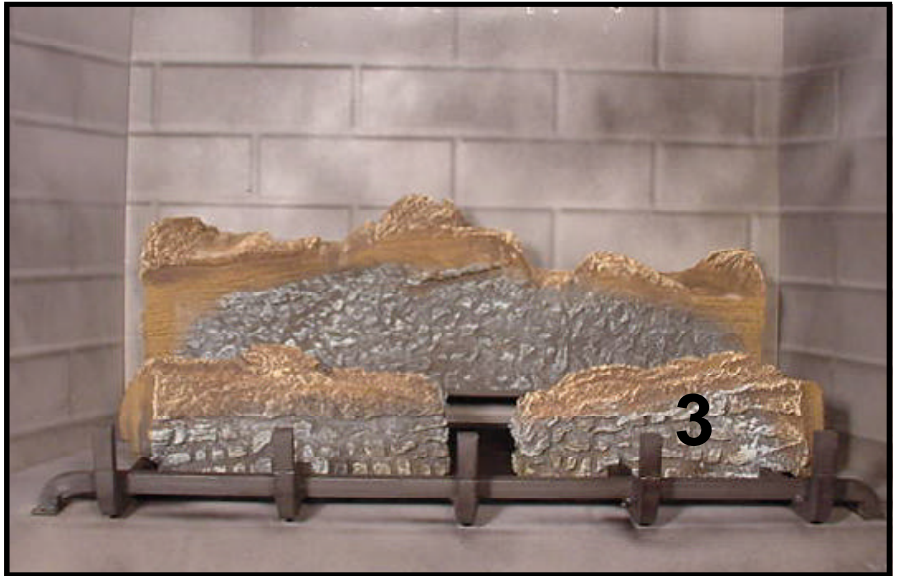


STEP 4:

Align slot on log #4 (SRV364-702) with left end of cross-bar on grate. Place rear side of log #4 on top of log #1 as shown.




STEP 5:

Align slot on log #5 (SRV364-704) with third bar on grate. Place rear side of log #5 on top of log #1 as shown.

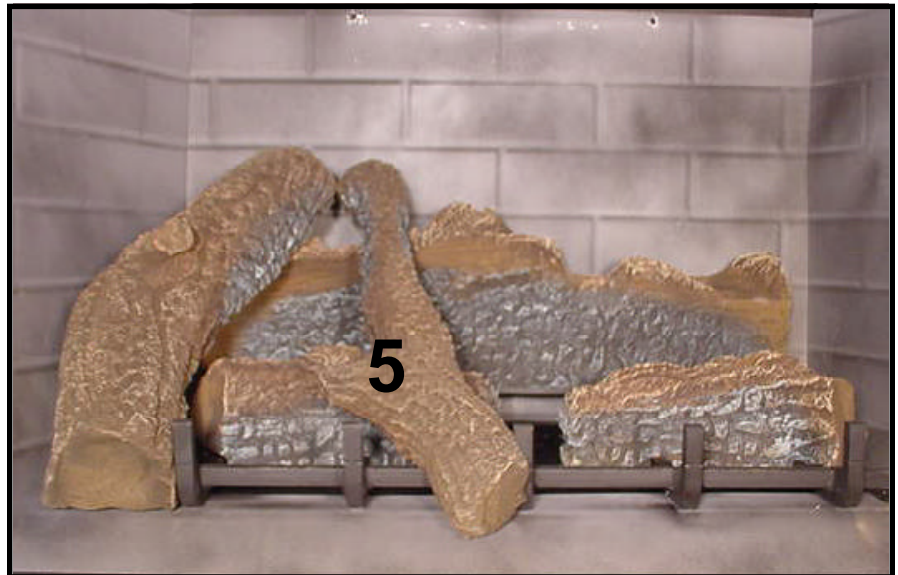

STEP 6:

Align “Y” shaped end of log #6 (SRV364-705) with fourth bar on grate. Place rear side of log on log #1 as shown.

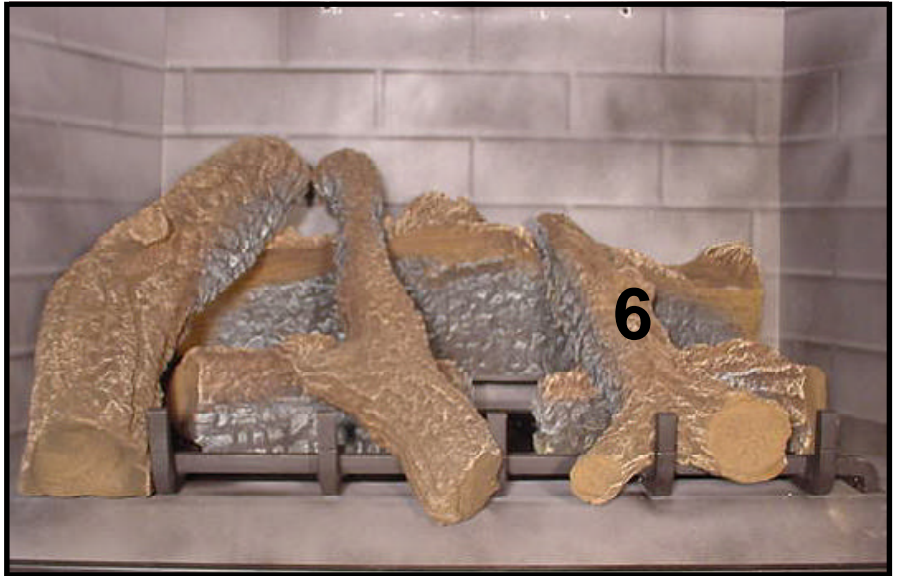

STEP 7:

Place rear side of log #7 (SRV278-707) on log #1. Rest log #7 on right bar on grate as shown.

