

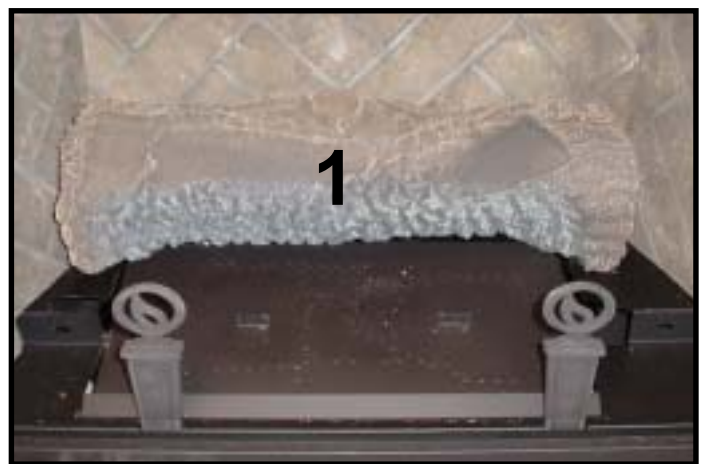
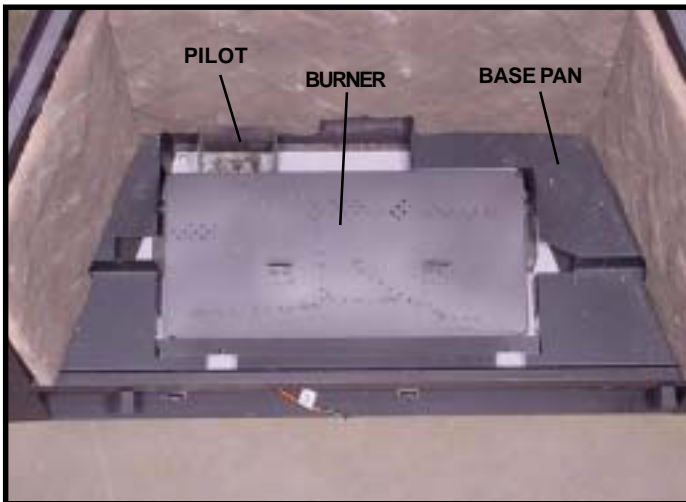
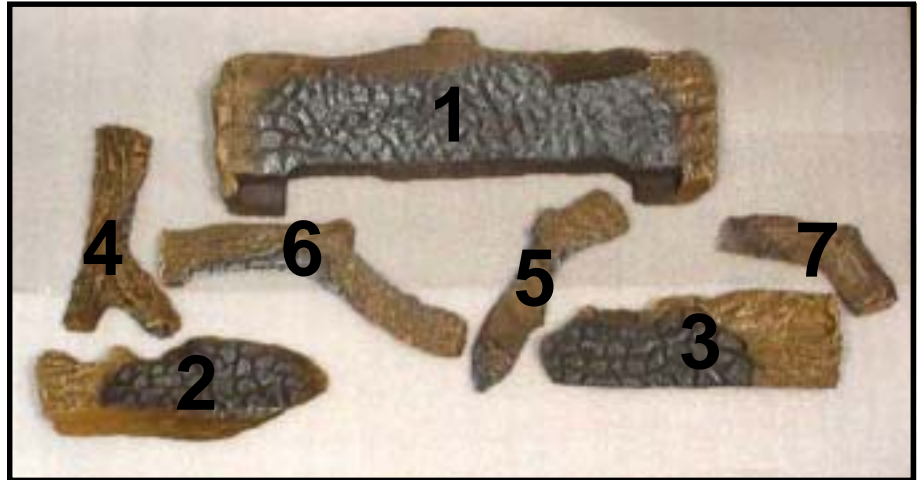



Carefully remove the logs from the packaging. **CAUTION:** Logs are fragile!

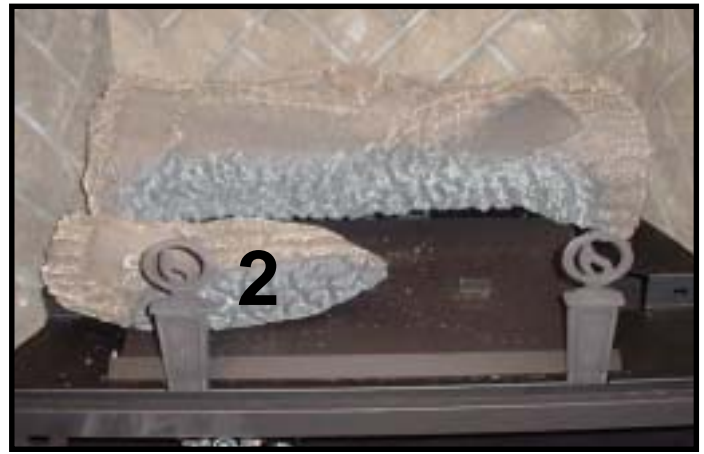

LOG #1 (SRV340-701): Place log #1 in the back on the insert. Locate the legs of the log outside the 3/8" tabs to either side of the burner. Pull the log forward until the log is stopped by the back edge of the burner. The log should be centered.

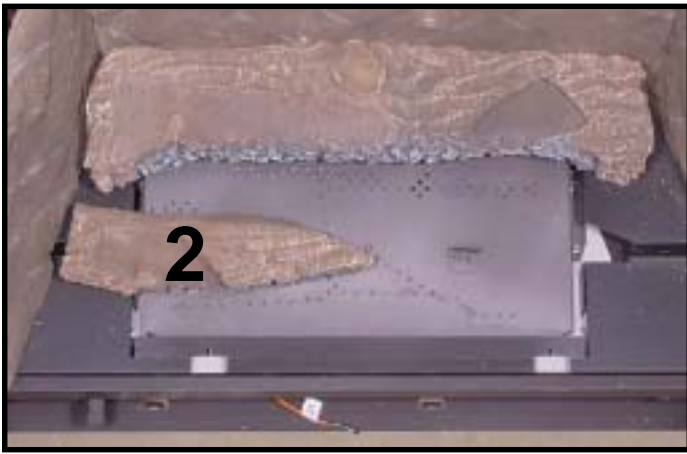


LOG #2 (SRV340-702): Position log #2 by locating its slot over the tab on the front left of the burner. The slot in the left end of the log slides into the vertical metal edge in front of the square cut out on the base pan.

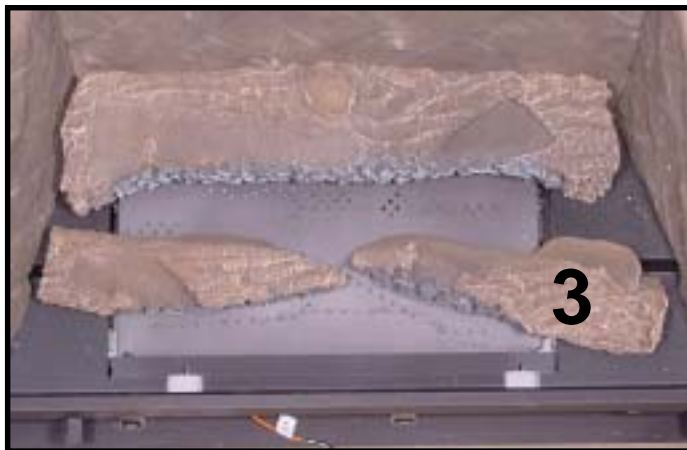



LOG #3 (SRV340-703): Position log #3 by locating its slot over the tab on the front right of the burner. Push the right side back against the step in the base pan.



LOG #4 (SRV340-704): Place log #4 across log #1 and log #2 in the grooved out areas as shown.

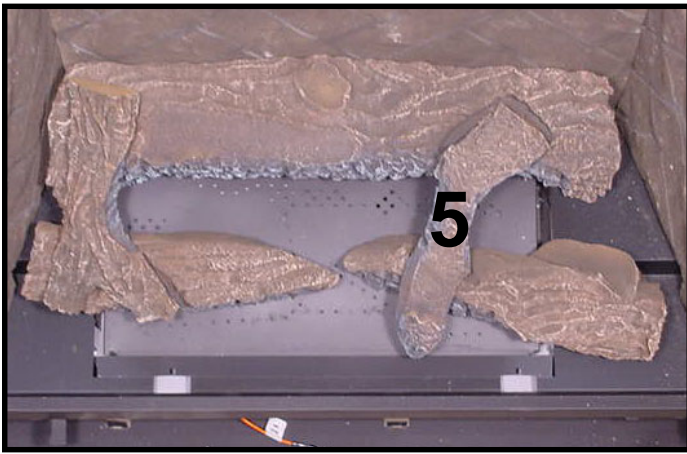

LOG #5 (SRV340-706): Place log #5 across log #1 and log #3. The notch in the bottom of the log sets on the carved out edge on top of log #3. The back of the log sits in the grooved out area in log #1.

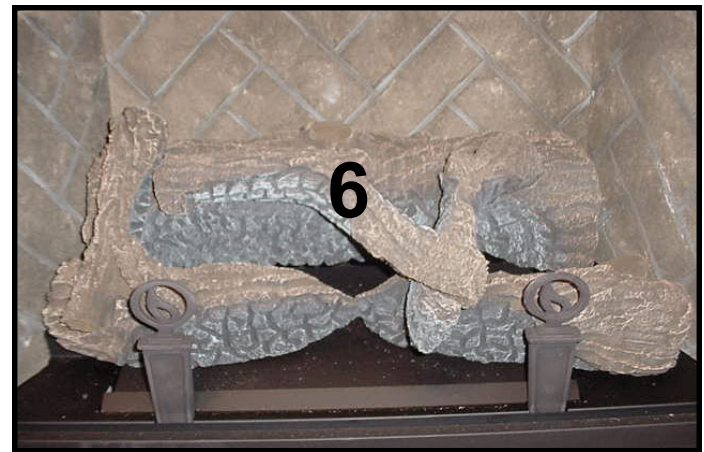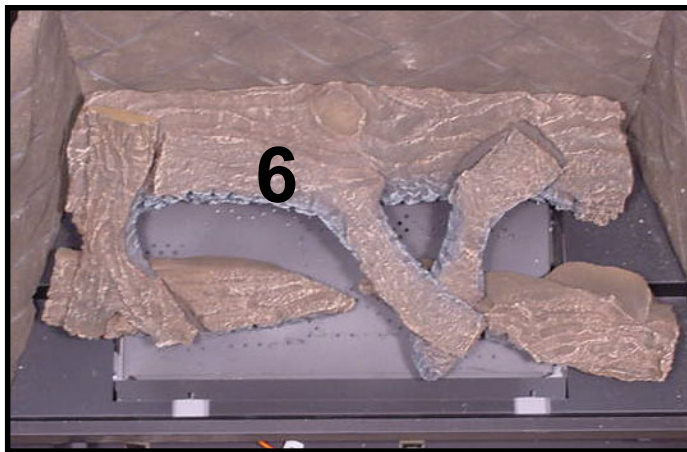

LOG #6 (SRV340-705): Place log #6 across log #1 and log #5. The notch in the bottom of log #6 rests in the carved out section on top of log #5 and the left end of the log sits in the horizontal carved out section of log #1.



LOG #7 (SRV740-707): Small log #7 rests on the “ramp” on the backside of log #3. The burned out end of the log slopes down and to the left.