



# Anti Spill Kit Model EM48

## CONTENTS OF KIT: Plus two mesh panels.

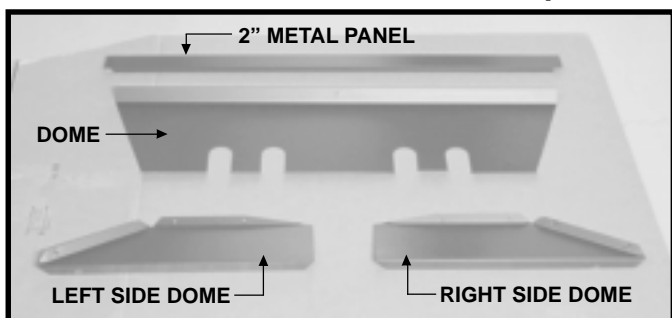


## PROCEDURE:


1. Remove glass doors.
2. Remove mesh and mesh rod, discard mesh.
3. Using a 3/16" drill bit, drill a new hole below existing hole for mesh rod. Locate the new hole 19" up from base refractory. See photo below.

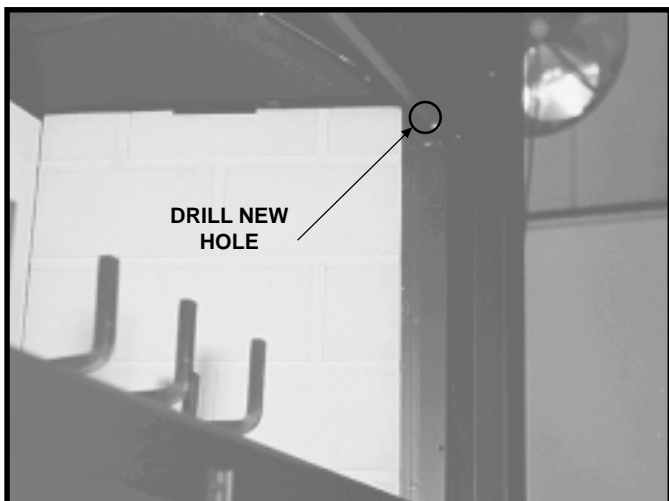

4. Hold 2" metal panel at top firebox opening and mark the bottom rivet hole on each side. Drill the two rivet holes using 1/8" drill bit. Rivet the 2" metal panel in place. Run 3 self-tapping screws up through the back top edge of the 2" metal panel into the firebox opening top. See photo below.

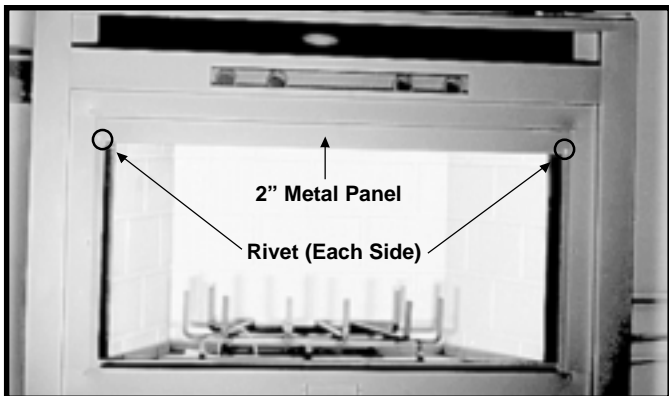

5. Install front dome attaching it to the underside of the 2" panel and top of the firebox. See photo below.

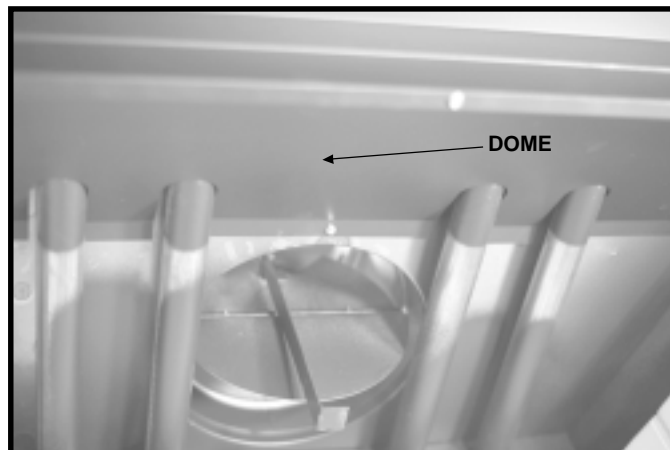

6. Fasten side domes by screwing them to front dome and top of the fireplace. See photo below.



7. Install the new mesh onto the mesh rod and screw the rod to the front dome. See photo below.

