

6CAMP-UA

- Installation Instructions -

1. Remove decorative front and glass.
2. Remove logs, bar grate, base refractory and base pan (see Figure 1).
3. Remove burner and back air baffle.
4. Remove pilot bracket and pilot assembly. Note: Do not damage pilot assembly, it will be re-used (see Figure 2).

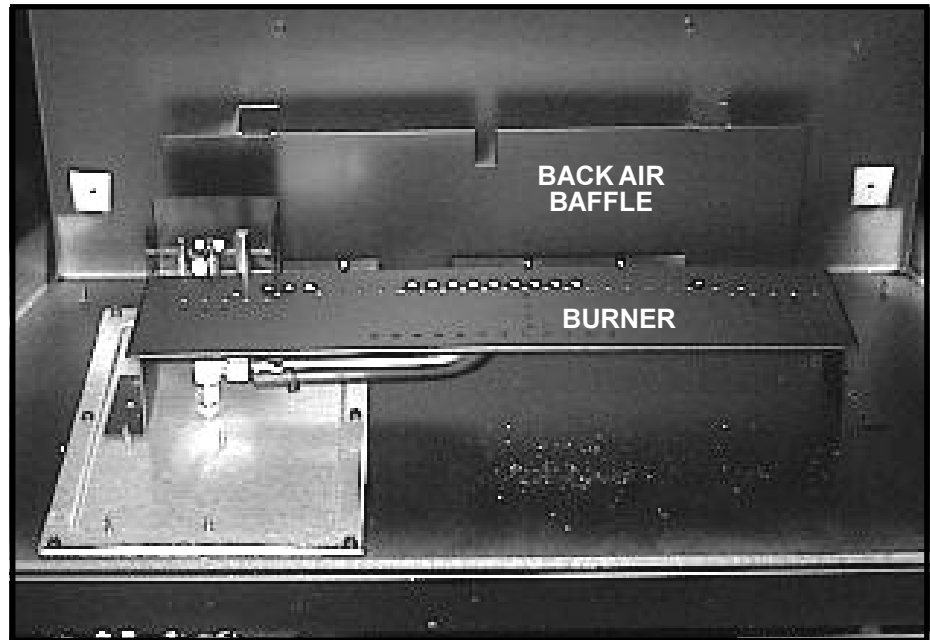


Figure 1

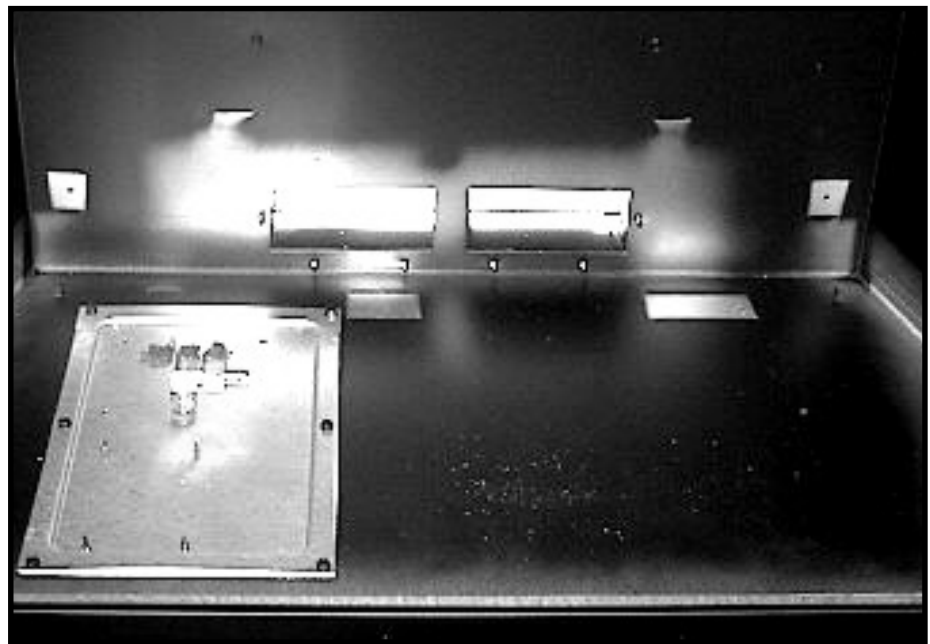


Figure 2

5. Remove orifice and 90° fitting (do not throw away, it will be re-used). Cut and remove gas line to orifice and then plug all holes using the plugs provided (see Figure 3).

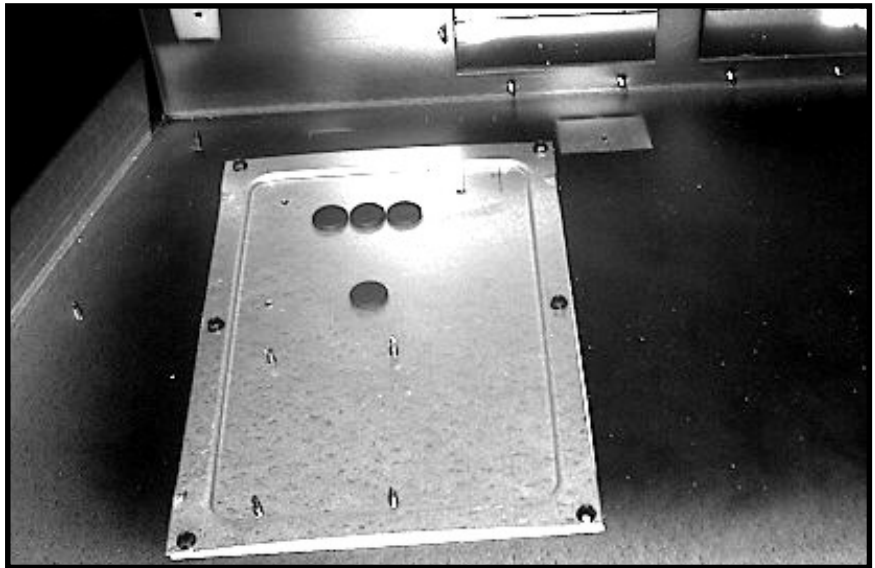


Figure 3

6. Place the template with the small hole in the left corner over the screw tip in the back left corner of firebox. Mark all holes. Remove template and drill four 1/2" holes and two 1/8" holes (see Figure 4).

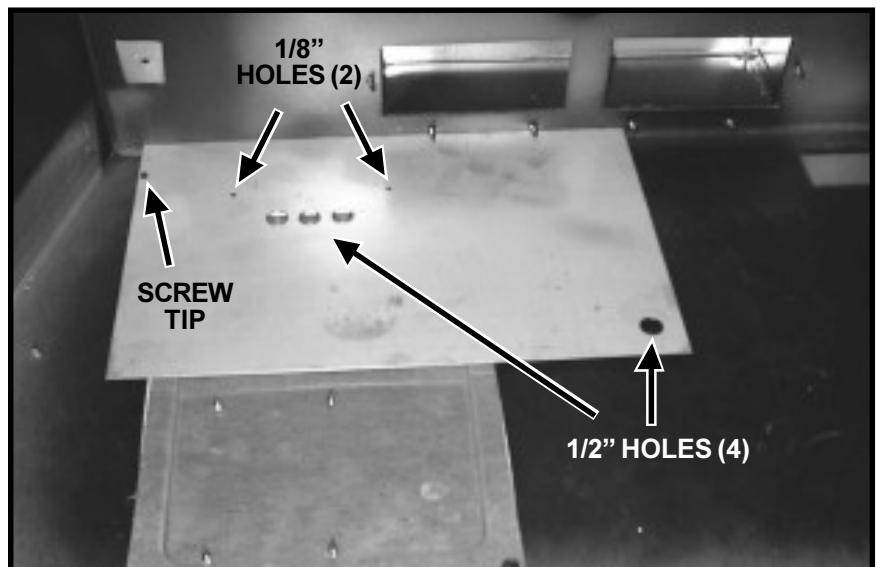


Figure 4

7. Reinstall pilot assembly and new pilot bracket using the two 1/8" holes for locating it. Reinstall orifice and gas line (see Figure 5). Note: You may not need to use all the grommets provided, and might be able to re-use the old ones from the pilot.

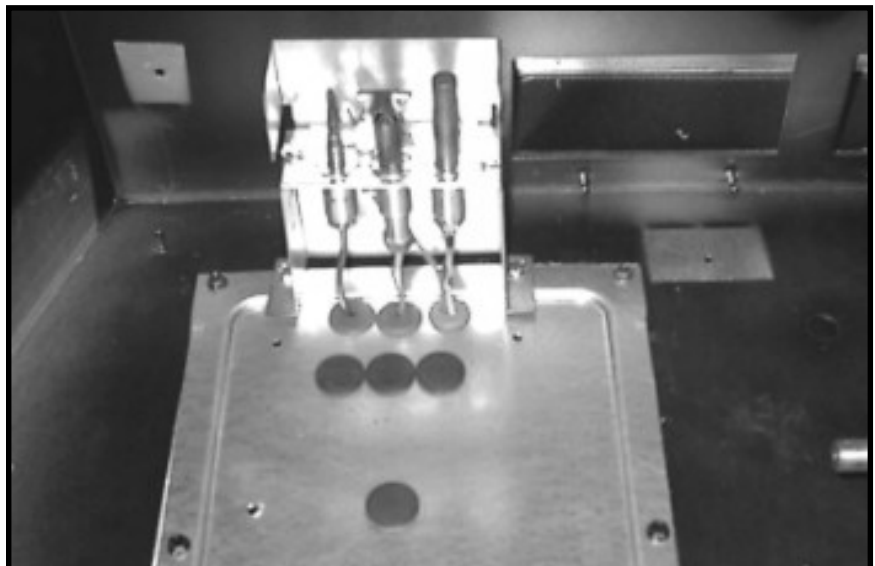


Figure 5

8. Install new burner making sure it is properly seated on orifice. Center it from left to right and $2\frac{7}{8}$ " from back of firebox (see Figure 6).

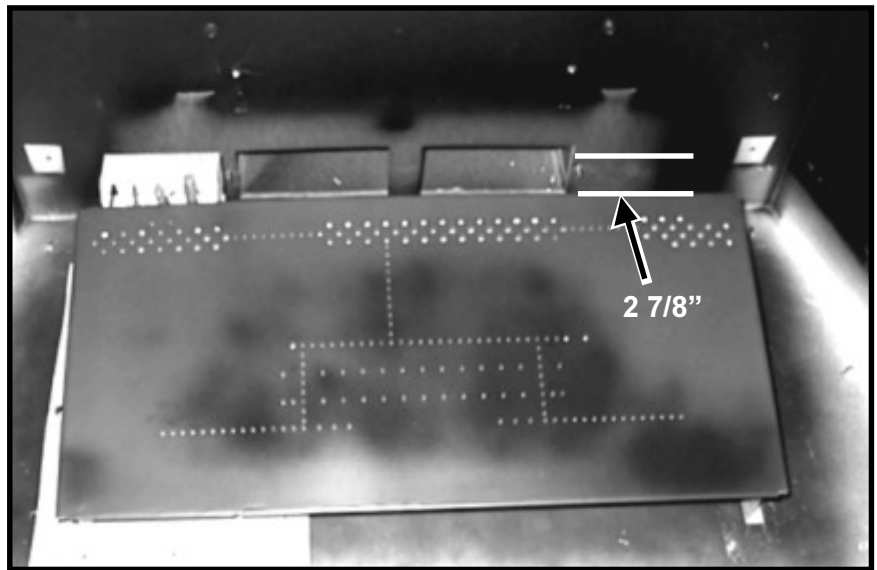


Figure 6

9. Install new base refractory and log bar grate assembly (see Figure 7). Note: Place embers on burner.
10. Replace glass and decorative front.



Figure 7