


INSTALLATION INSTRUCTIONS

BRICK-6BSK



Heat-N-Glo, a division of Hearth Technologies, Inc.
20802 Kensington Boulevard
Lakeville, MN 55044 USA

Side Wall Refractory Set

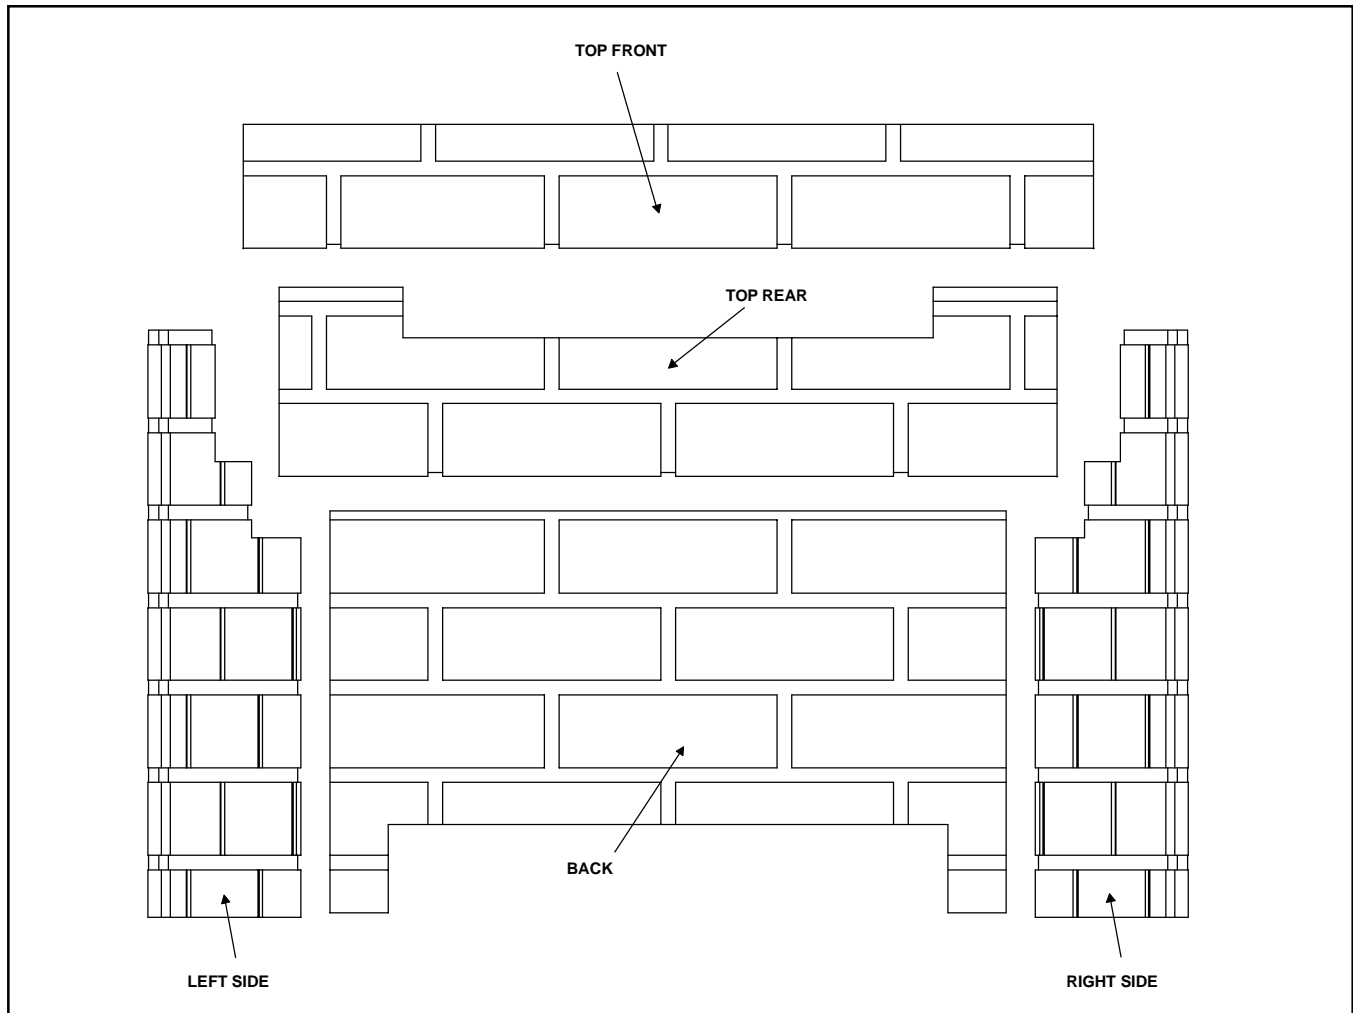

Step 1

Insert back refractory with notch down, brick pattern facing you, against the back wall and on the base refractory lock tabs.

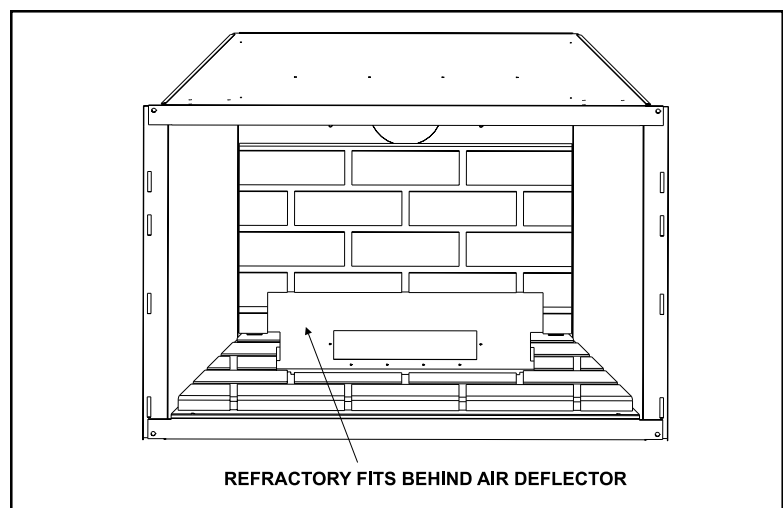


Figure 1

Step 2

Place right and left side refractory pieces upright and partway back on the left and right sides of the firebox as shown in Figure 2.

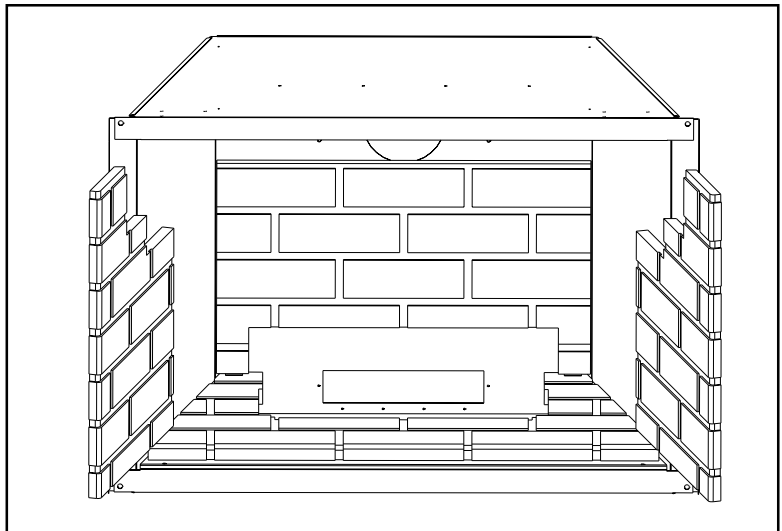


Figure 2

Step 3

Place top rear refractory on the back step of each sidewall refractory (notch up) and lock it against the front corner of the step as shown in Figure 3.

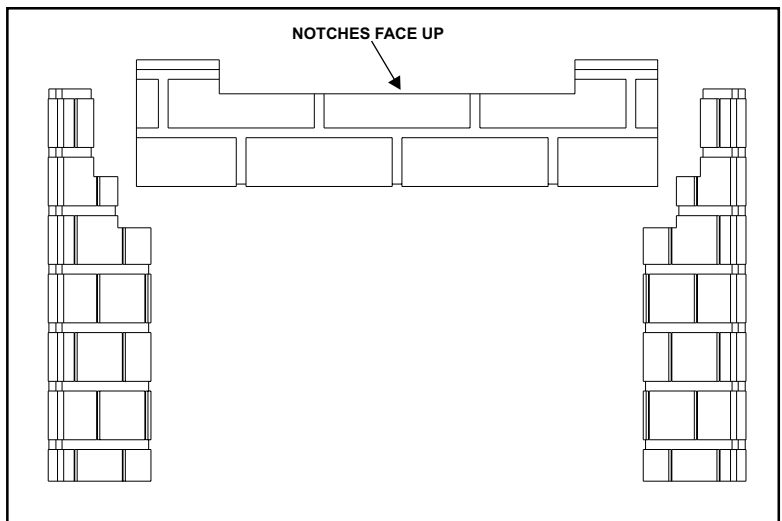


Figure 3

Step 4

Repeat Step 3 with the top front refractory making sure the radius on the front edge is DOWN. See Figure 4.

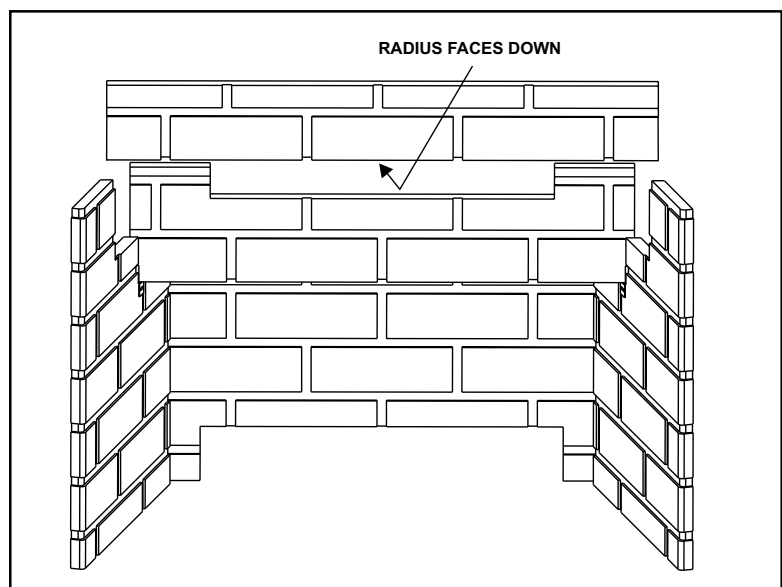
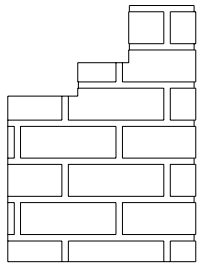
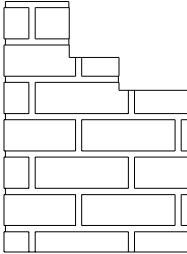
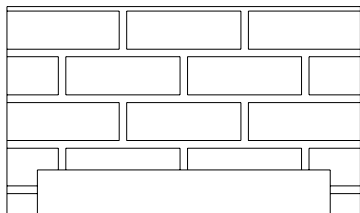
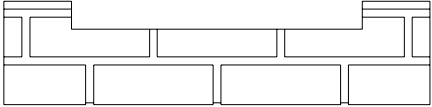



Figure 4

Step 5

Slide the two sides into the back of the firebox against the back refractory and tight against the side walls.

Service Parts - BRICK-6BSK

| ACCESSORY | PART DESCRIPTION | PART NUMBER |
|---|-----------------------|-------------|
|  | Right Side Refractory | |
| | | SRV389-371 |
|  | Left Side Refractory | |
| | | SRV389-372 |
|  | Back Refractory | |
| | | SRV389-373 |
|  | Top Rear Refractory | |
| | | SRV520-375 |
|  | Top Front Refractory | |
| | | SRV520-374 |