


Studio 24 Doors


- Installation Instructions -

Instructions:

1. Remove door from box.
2. Remove corner spacers from door.
3. Ensure that decorative caps are hand tight (see Figure 1).

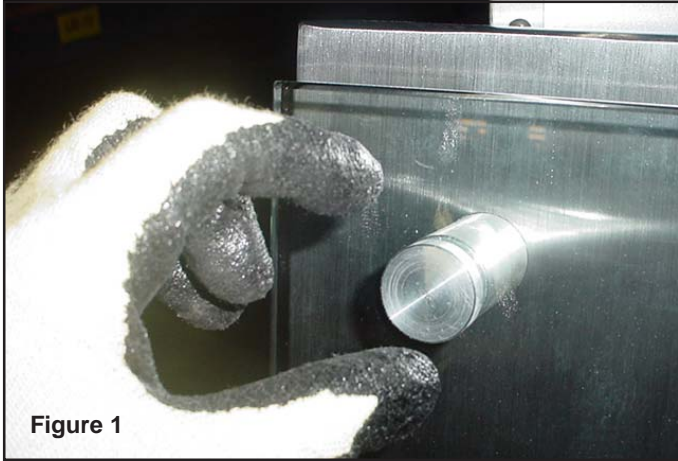

5. Use 3/8 inch nuts to attach hanging brackets (with shims if necessary) to the door studs (see Figure 3).

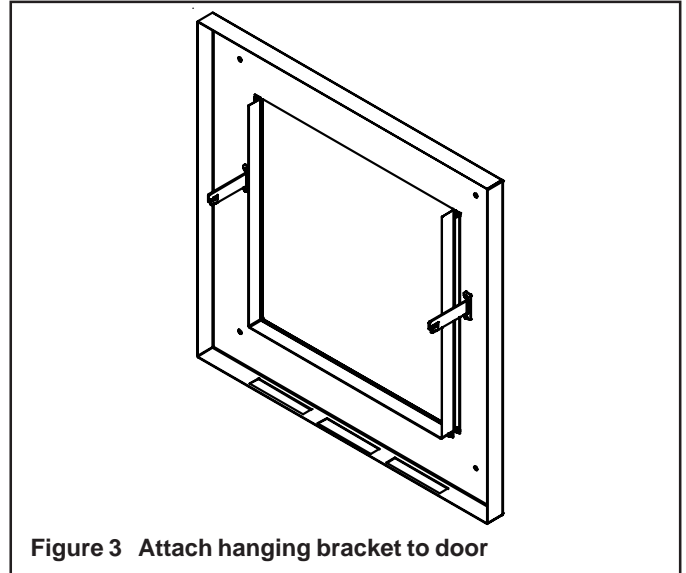

6. Hang door assembly onto fireplace such that hanging brackets engage J-hook slots of fireplace (see Figure 4).

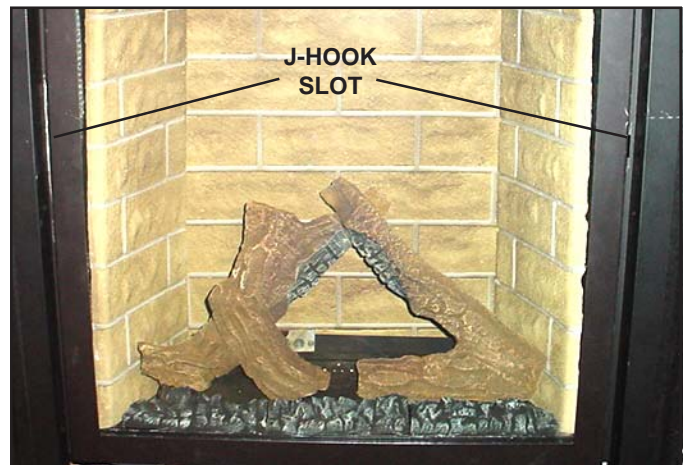


Figure 4

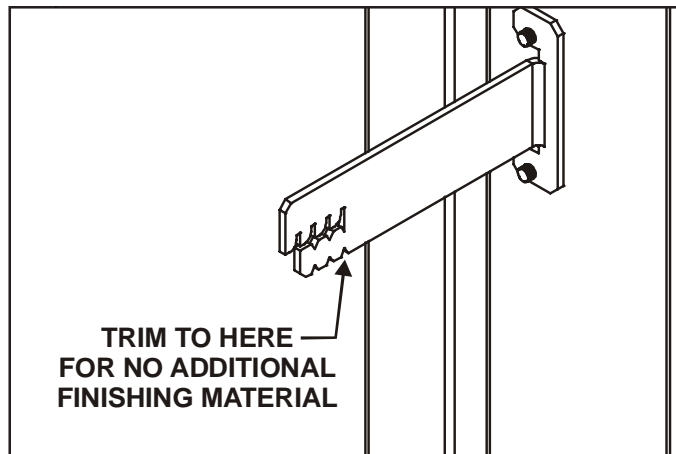


Figure 2 Hanging Bracket

4. Hanging bracket may be trimmed for different finishing materials. The brackets are set for 3/4 inch finishing material placed over the non-combustible header.
 - Trim the support leg at the first notch for 1/2 inch finishing material.
 - Trim at the third notch for no additional finishing materials. (There is no need to trim the hook portion of the bracket). See Figure 2.
 - Use the included spacer shims to adjust the spacing to approximately 1/16th inch of space between the front and the finishing material.

Service Parts List

DESCRIPTION	SERVICE PART NO.
Glass	2077-147
Cap and Barrel Assembly	2077-013
J-Hook Bracket	2077-135
Spacer Shim	2077-175