

## Folio Door

Models: 6000G, 6000GL, 60000GLX, BE-41C

- Installation Instructions -

### CAUTION



Sharp Edges

- Wear protective gloves and safety glasses during installation.



1. Remove all materials from the packaging.
2. Install the black shoulder bolts into the four threaded inserts located in the fireplace surround (see Figure 1). **Note:** Remove hood clips on BE-41C units.
3. Install the lower valve shield by placing two screws through the holes in the shield and into the pilot holes located on the back of the door. See Figure 2.
4. Hang the door on the four shoulder bolts.

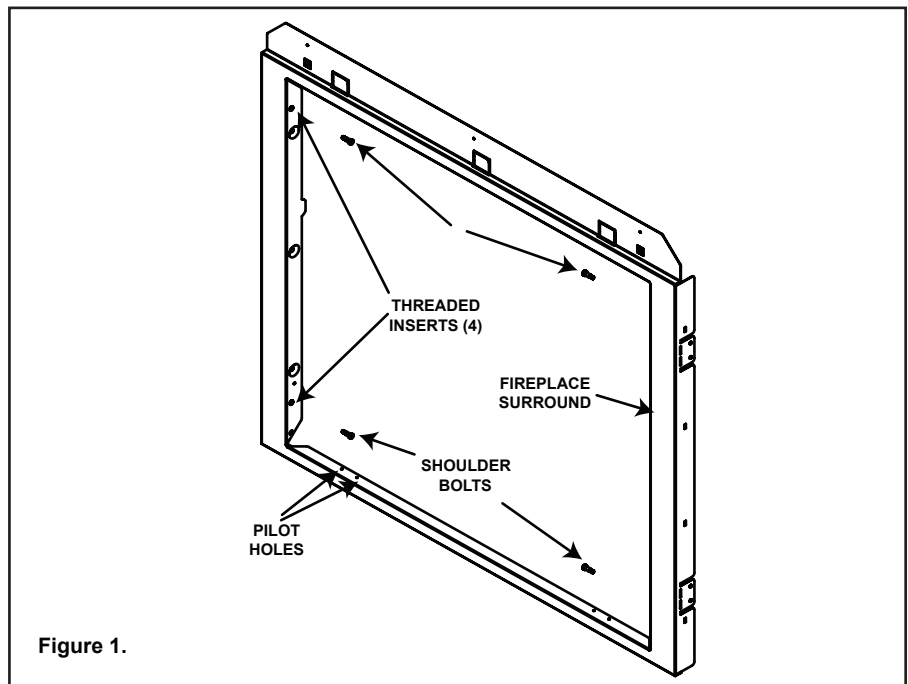


Figure 1.

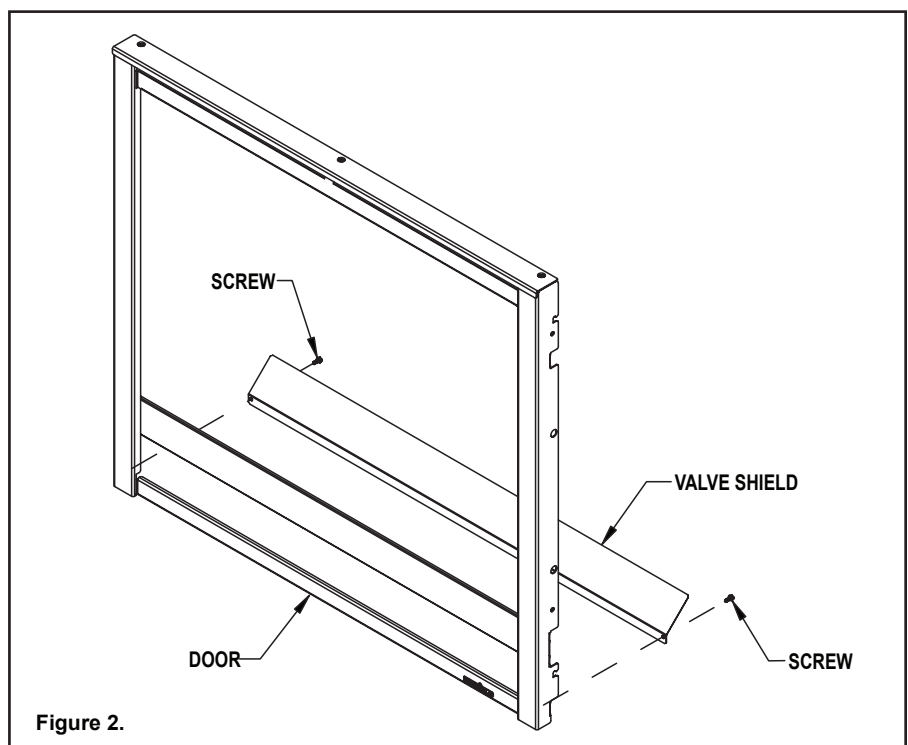


Figure 2.