

SOHOCE-ROCK, SOHOCE-ONYX, SOHOCE-OPAL

- Installation Instructions -

This kit is used in place of the logs in a SOHO model with an alternate media and reflective firebox liner.

CAUTION! Risk of Cuts, Abrasions or Flying Debris. Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

WARNING! Choking Hazard! Keep media out of reach of children.

CONTENTS OF KIT:

- Stainless Steel Firebox Liner (Optional)
- Rock Tray
- Rock or Onyx



Figure 1

1. Remove the front and glass from the appliance and set aside. Remove the logs (if installed) from the appliance and either discard or save for later use.
2. Fold down the log locating tabs (if bent up) on the base pan so they are parallel with the burner. See Figure 2.
3. Proceed to step 4 if the firebox liner is not being installed. Install the firebox liner by placing it on the base pan of the fireplace and sliding it back until it contacts the back of the fireplace. See Figure 2.

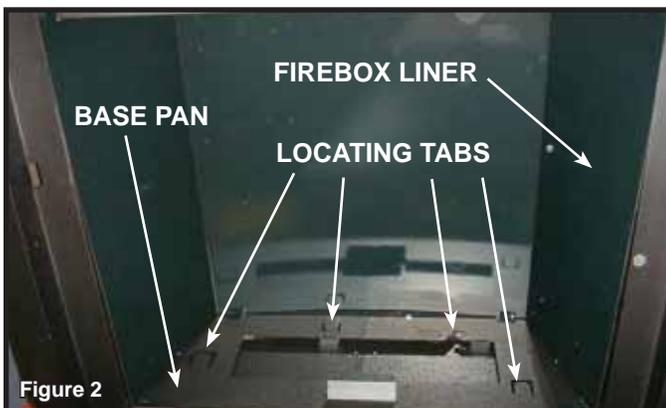


Figure 2

4. Set the rock tray on top of the base pan. See Figure 3.



Figure 3

5. Spread the rock or onyx evenly across the rock tray. See Figure 5. **DO NOT** place rocks in burner area or in front of pilot burner.

⚠ WARNING



Delayed Ignition Risk

- Do NOT place rocks on burner.
- Do NOT place rocks in a position that they may fall on the burner.

Fireplace will not function properly. Delayed ignition may occur.



Figure 5

6. Reinstall the glass frame and front.

Heat & Glo, a brand of Hearth & Home Technologies Inc.
7571 215th Street West, Lakeville, MN 55044
www.heatnglo.com

Please contact your Heat & Glo dealer with any questions or concerns.
For the location of your nearest Heat & Glo dealer,
please visit www.heatnglo.com.