

550-TRIM3-BK, 550-TRIM3-SS 550-TRIM4-BK, 550-TRIM4-SS 750-TRIM3-BK, 750-TRIM4-BK

Installation & Operating Instructions



Leave this manual with party responsible for use and operation.

CAUTION! Risk of Cuts or Abrasions. Wear protective gloves and safety glasses during installation.

⚠ WARNING



HOT SURFACES!

Glass and other surfaces are hot during operation AND cool down.

Hot glass will cause burns.

- Do not touch glass until it is cooled
- NEVER allow children to touch glass
- Keep children away

- CAREFULLY SUPERVISE children in same room as fireplace.
- Alert children and adults to hazards of high temperatures.

High temperatures may ignite clothing or other flammable materials.

- Keep clothing, furniture, draperies and other flammable materials away.

This appliance has been supplied with an integral barrier to prevent direct contact with the fixed glass panel. Do NOT operate the appliance with the barrier removed.

Contact your dealer or Hearth & Home Technologies if the barrier is not present or help is needed to properly install one.

1. Remove parts from package and lay face down on a non-abrasive, stable, flat surface. If components contain protective plastic coating, remove prior to assembly. See Figure 4 for a visual reference and measurements for each individual trim kit.



Figure 1. Assemble Components.

2. Connect the top and sides by aligning the holes on the left and right side pieces with the threaded studs on the top pieces. The three-piece trim kit is shown in Figure 1. When installing the four-piece trim kit, align the bottom piece with the sides in the same manner as the top piece.
3. Secure the two nuts at each corner using a 3/8 in. wrench or nut driver.

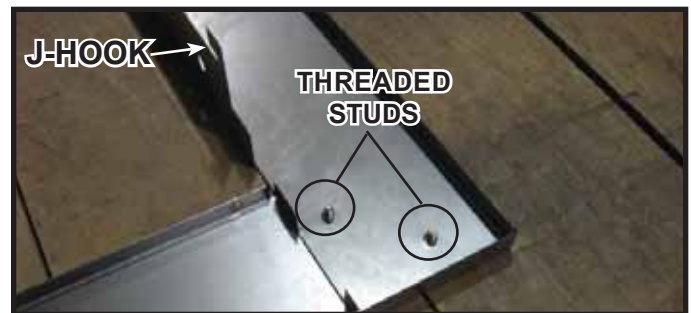




Figure 2. Location of J-Hook and Threaded Studs.

4. Hang trim kit on appliance by aligning J-Hooks with fireplace slots. Secure by pressing inward and downward until trim kit sits firmly in place.
5. If the sides of the trim pieces appear to be bent inward away from fireplace wrap sides, loosen hex nuts, remove assembled trim piece and gently bend sides outward slightly. While keeping the side trim pieces pushed outward, replace and tighten the hex nuts.
6. Hang the Folio decorative front on appliance.

Note: If an overlap front is used, attach trim kit before attaching door front mounting brackets. The front will overlap the trim kit.



Figure 3. Trim Kit Installed.

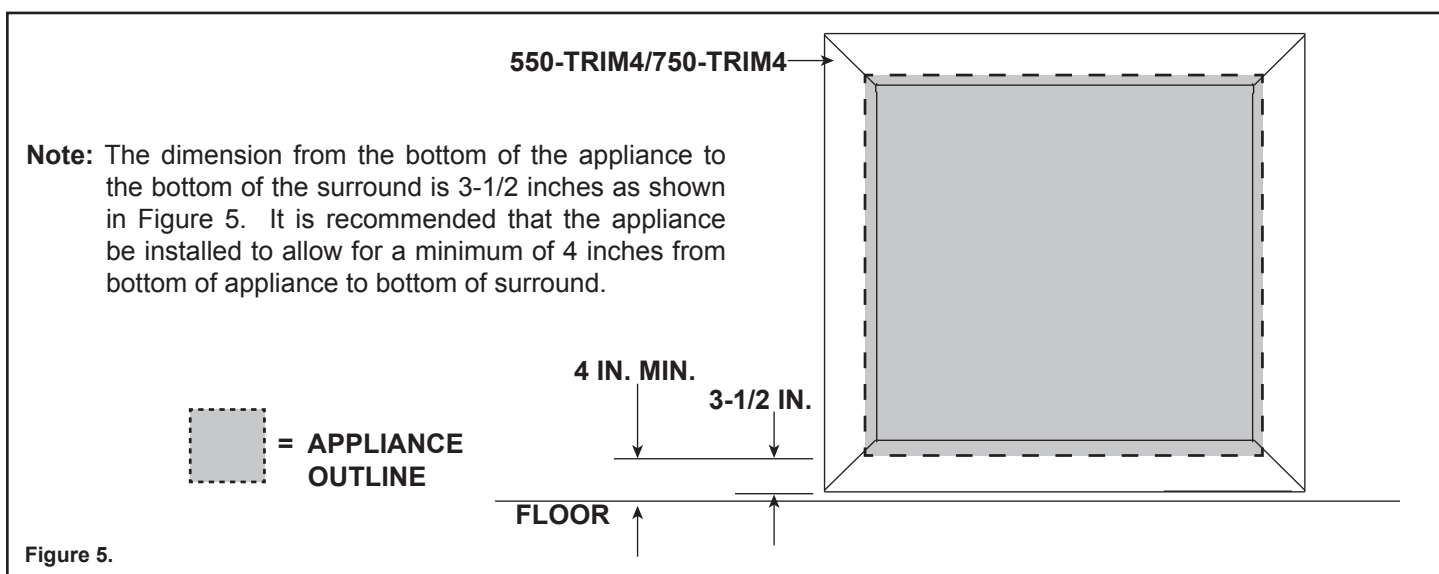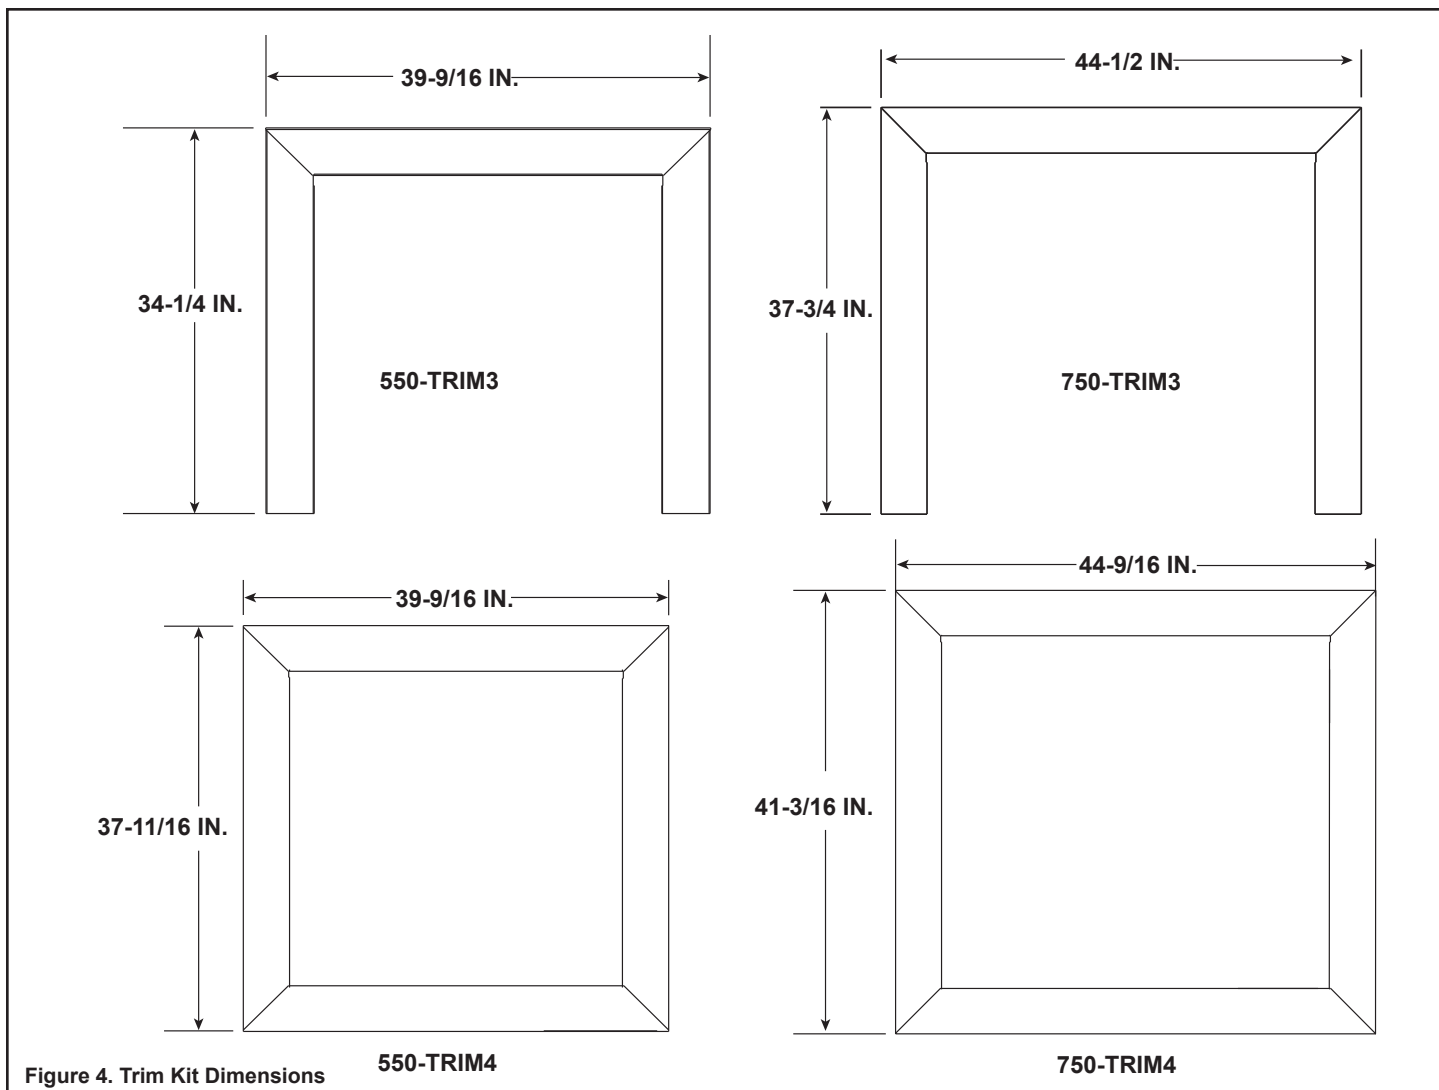

Please contact your Heat & Glo dealer with any questions or concerns.
For the location of your nearest Heat & Glo dealer, please visit www.heatnglo.com.

Heat & Glo, a brand of Hearth & Home Technologies
7571 215th Street West, Lakeville, MN 55044
www.heatnglo.com