

# Top to Rear Flue Conversion

## Model: VRTIKL-AU

**HEAT & GLO**

Where everything comes together

**KIT CONTENTS:** Top cover (without hole);  
Back panel (with hole).

1. Remove the front door assembly by pulling bottom of front away from gas stove and lifting it off of the hooks on top of the gas stove. Set door aside.

### ON TOP OF APPLIANCE:

2. Remove the top plate with hole and discard (**Figure 1**).



Figure 1.

3. Remove and retain the Allen head screws that hold the solid back panel in place (**Figure 2**). Remove and discard the solid back panel.

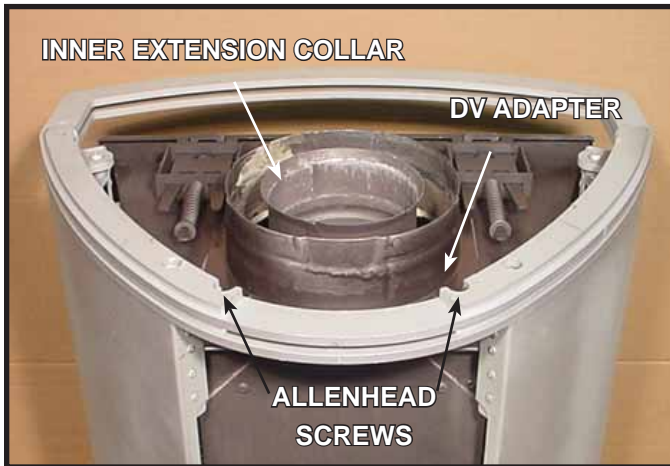


Figure 2.

4. Remove the inner extension collar (shown in **Figure 2**) and set aside.
5. Remove the four screws from the DV adapter collar (**Figure 2**). Set aside DV adapter collar and screws.

### ON BACK OF APPLIANCE:

6. Remove the four screws from the cover plate on rear of gas stove. Set cover plate aside. Retain screws. (See **Figure 3**). Attach DV adapter collar in its place. Install the inner extension collar.

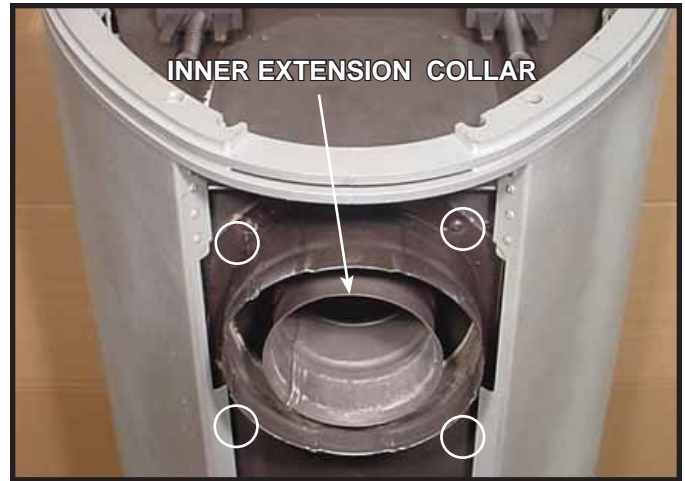


Figure 3.

7. Install the cover plate with gasket to the top of gas stove with screws previously removed (**Figure 4**).



Figure 4.

### ON TOP OF APPLIANCE:

8. Install the new back panel (without hole) to the rear of gas stove. Replace the Allen head screws removed in Step 3 to hold the back panel in place.
9. Install the new top as shown in **Figure 5**.



Figure 5.