



INSTALLATION INSTRUCTIONS

DM1000 SERIES GLASS DOORS

GLASS END PANEL

These glass end panels have been tested for use with specific Hearth & Home Technologies Inc. fireplaces and are listed as fireplace parts. Refer to the installation instructions supplied with the fireplace for the correct accessories to be used. Check with your local building code agency before you begin your installation to ensure compliance with local codes, including the need for permits and follow-up inspections. If you encounter any problems regarding code approvals, or if you need clarification of any of the instructions contained here, contact your Hearth & Home Technologies Inc. dealer. For the dealer nearest you, please visit www.hearthnhome.com.

ITEM#	DESCRIPTION	QTY.
1	Door Assembly	1
2	Side Fillers	2
3	Fastener Package	1

Note: An arrow (➡) found in the text signifies change in content.

CAUTION:
Edges are sharp! Hand protection is highly recommended.

Step by Step Installation:

1. Install the eight screws from the fastener pack into the holes as shown in Figure 1. Do not tighten them down until the door is in place!
2. Slide the side fillers onto the back side of the glass (short flange against the glass). The top and bottom lips will hold the side fillers in place. See Figure 2.

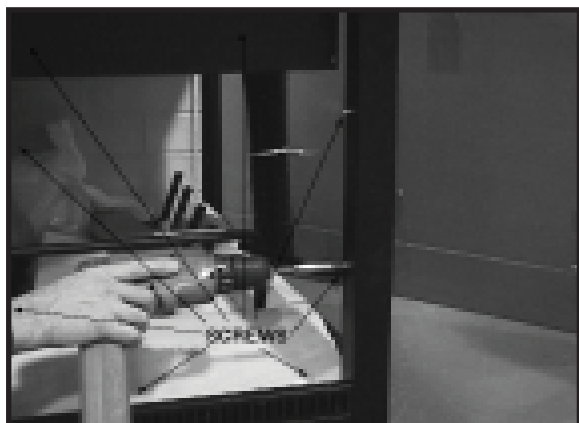


Figure 1 - Attaching Lugs

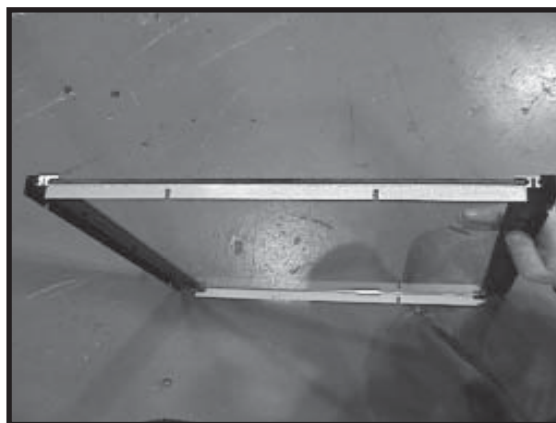


Figure 2 - Notches in Side of Glass Frame

3. Slip the glass into the opening so that the screws from step 1 engage with the notches on the back of the door. See Figure 3.
4. Reach into the fireplace while holding the door flush with the fireplace opening and tighten the top and bottom screws.
5. From inside the fireplace, push the side fillers tightly against the glass and tighten all of the screws. See Figure 4.
6. Clean the glass to complete the installation.



Figure 3 - Notches Sliding in to Engage Lugs



Figure 4 - Attaching Side Lip