

heatilator®

The first name in fireplaces

Hearth & Home Technologies Inc.
1915 W. Saunders Street
Mt. Pleasant, Iowa 52641
Division, HON INDUSTRIES
www.heatilator.com

INSTALLATION INSTRUCTIONS

TKE1B / TK6B / TK7B POLISHED BRASS TRIM KIT
TKE1S / TK6S / TK7S STAINLESS STEEL TRIM KIT
→ **TK6PT / TK7PT PEWTER TRIM KIT**
→ **TK6BN / TK7BN BRUSHED NICKEL TRIM KIT**

These trim kits are intended for use with specific Heatilator products. Refer to the installation instructions supplied with the appliance for the correct accessories to be used. If you encounter problems regarding code approvals, or if you need assistance during installation please contact your local dealer or contact the Heatilator Technical Services Department, Hearth & Home Technologies Inc., 1915 W. Saunders Street, Mt. Pleasant, Iowa 52641, 1-800-927-6841.

1. TRIM KIT POSITIONING

We recommend positioning the trim pieces over every other existing louver of the upper and lower grille panels. **Remove** all protective coating from the new trim pieces.

2. INSTALLATION INSTRUCTIONS

a. Lower Grille Panel

- 1) Slip the angled lip of the trim piece onto the top edge of the louver. See Figure 1.
- 2) From the center of the trim piece, press the bottom edge of the trim piece onto the louver, moving out to each end of the louver.
- 3) Install two pieces of the louver trim onto the bottom grille panel, alternating ever other louver.

b. Upper Grille Panel

- 1) Slip the angled lip of the trim piece onto the top edge of the louver. See Figure 1.
- 2) From the center of the trim piece, press the bottom edge of the trim pieces onto the louver, moving out to each end of the louver.
- 3) Beginning with the first louver, either the top or bottom louver of the grille panel (this is your preference), install the louver trim onto every other (alternating) louver.
- 4) If a trim piece fits loosely on a louver, make a dimple on the trim piece (the back side of the louver only).

Note: An arrow (→) found in the text signifies change in content.

WARNING!

To prevent injury, wear gloves when handling metal parts.

Tools Needed:

Safety Gloves

Item	Description	Qty.
1	Louver Trim	4

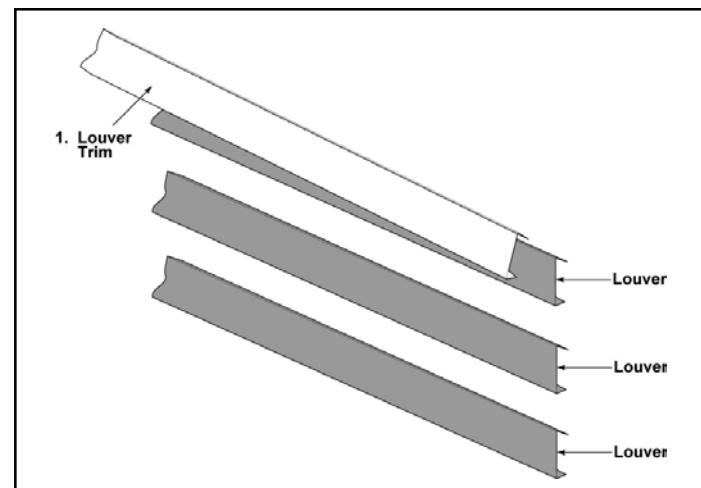


Figure 1