

Models:

LUX60-TMPLT

Rock Template for the LUX60



This rock template been tested for use with LUX60. Check with your local building code agency before you begin installation to ensure compliance with local codes, including the need for permits and follow-up inspections. If you encounter any problems regarding code approvals, or if you need clarification of any of the instructions contained here, contact your Hearth & Home Technologies Inc. dealer. For the dealer nearest you, please visit www.heatnglo.com.

The LUX60-TMPLT must be used when the decorative finish to be used is greater than 1 in. (25 mm) thick (i.e. rock, brick, etc.) to ensure proper air flow through the surround and to provide an attractive finished transition from the wall to the surround.

CAUTION! Risk of Cuts, Abrasions or Flying Debris. Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

- Attach top template piece (8.44 in./214 mm wide)
 - Use two screws from the fastener pack.
 - Secure template piece to the front frame of appliance. See Figure 1.
- Repeat for sides and bottom.
 - Overlap pieces by 1/8 in./3 mm so no gaps are visible.
- Use drywall screws (not provided) and the pre-drilled holes to further secure the template to the wall.
- Decorative wall finishing material may now be applied to wall down to the 1/2 in. lip on the template pieces.

WARNING! Risk of Fire! DO NOT restrict the 1 in. air gap with any facing material!

After the decorative wall facing is set, the SSF-LUX-BX Surround Kit may be installed. See the installation instructions included with the surround kit.

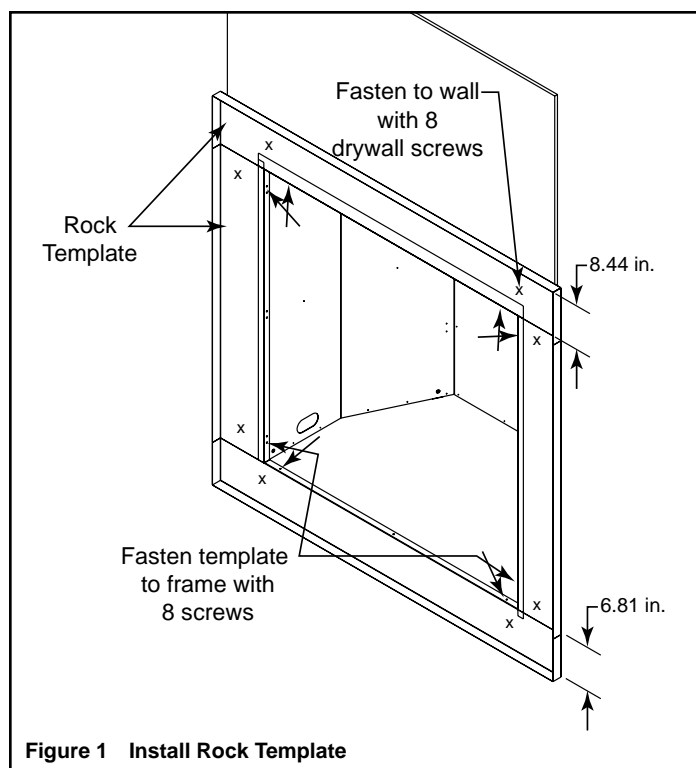


Figure 1 Install Rock Template

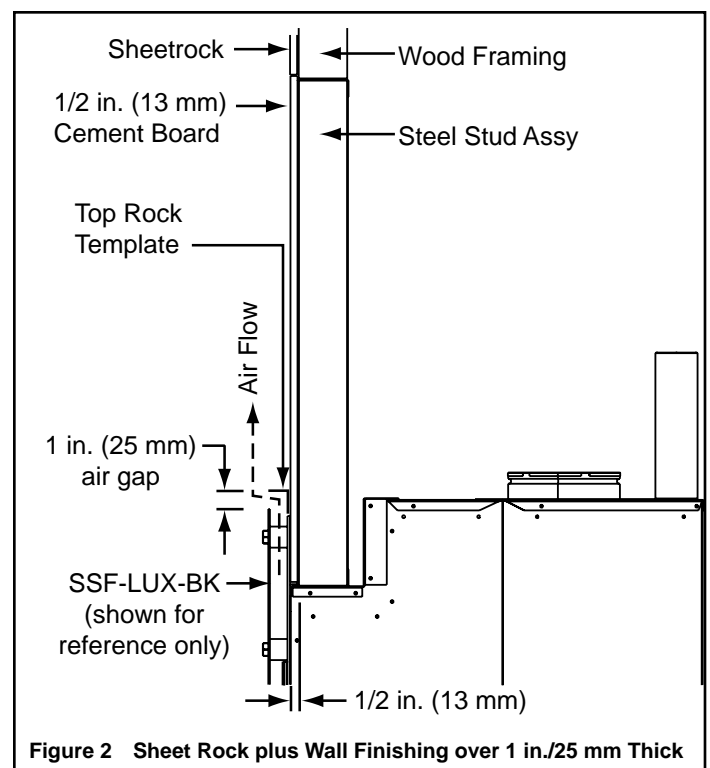


Figure 2 Sheet Rock plus Wall Finishing over 1 in./25 mm Thick