

ALLUSION HERITAGE FINISHING TRIM ACCESSORY KITS

SF-ALLH36-FT, SF-ALLH42-FT

Compatible With: SF-ALLH36, SF-ALLH42

- Installation Instructions -

CAUTION! Risk of Cuts, Abrasions or Flying Debris.
Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

CAUTION! Do not install damaged components.



Do not discard and leave with product. These instructions are required at different times.

Refer to the Allusion Heritage Installation & Operation Manual (SF-ALLH-MAN) for additional details on framing and installation. This document is for supplemental use only.

Tools Needed

Before beginning the installation, be sure that the following tools and building supplies are available.

- Phillips Screwdriver
- Level (and shims)
- Tape Measure
- Square
- Safety Glasses
- Gloves

Introduction

The Allusion Heritage Finishing Trim Accessory Kits are designed to replace the standard trim, enabling the finishing materials to be installed up to the finishing trim's edge, for a clean, integrated appearance. The Finishing Trim Accessory accommodates thicker finishing material like mortared stone, allowing for a broader range of materials that may exceed the 3" maximum of the standard trim.

NOTE: When installing the appliance with a finishing trim kit, the appliance must be installed before the finishing material. This sequence differs from the standard installation method, which is a post-paint installation.

Kit Components

Remove contents from packaging and verify all pieces are included before beginning installation.

PART	36"	42"
Side Trim Pieces (Right & Left)	2	2
Top Trim Piece	1	1
Bottom Trim Piece	1	1
ST3.5x12 Screws	4	4
ST4x6 Screws	6	8
ST3.5x8 Screws	4	4

NOTE: Replacement screws are provided with the kits, however, the screws removed during disassembly may also be reused, if desired.

Framing

The appliance can be installed into a framed horizontal wall or corner wall, on or off the ground. The framing dimensions remain the same as a standard installation when installing the appliance with a finishing trim kit.

NOTE: When installing the appliance with a finishing trim kit, the appliance must be installed before the finishing material. This sequence differs from the standard installation method, which is a post-paint installation.

Below are the framing dimensions for a horizontal wall installation. Refer to the Allusion Heritage Installation & Operation Manual (SF-ALLH-MAN) for corner wall framing dimensions and additional information.

MODEL	UNIT	WIDTH	HEIGHT	DEPTH
SF-ALLH36	in.	37-3/4	31-1/4	12
	mm	960	794	305
SF-ALLH42	in.	42	39-3/4	13-1/2
	mm	1067	1010	343

Table 1 Horizontal Wall Framing Dimensions

Prepare the Appliance

Remove Front Trim

The standard front trim must be removed.

- 1. Remove the ST4x8 screws from the top and sides of the appliance that attach the front trim. Remove the standard trim pieces and set aside.

NOTE: Replacement screws are provided with the kits, however, the screws removed during disassembly may also be reused, if desired.

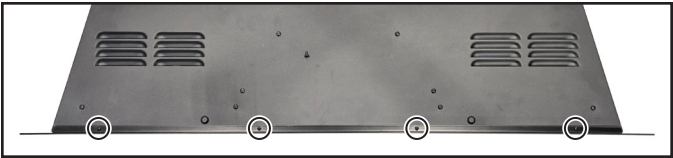


Figure 1 Top Screw Locations

- 2. Remove the ST4X8 screws along the front bottom edge of the ember bed.

NOTE: The front glass will need to be removed to access these screws.



Figure 2 Bottom Screw Locations

Attach Finishing Trim

Install the finishing trim pieces onto the appliance.

IMPORTANT: Be careful not to bend or damage the finishing trim pieces.

- 1. Attach the top and sides of the finishing trim with ST4X8 screws.
NOTE: Either re-use the screws from removing the standard trim, or use the screws provided in the kit. The finishing trim pieces attach using the same holes as the standard trim.
- 2. Attach the bottom finishing trim piece with ST4X8 screws. The bottom piece lays flat, and does not angle out like the side and top pieces.
- 3. Verify all of the corners come together to form a close connection. There should not be a gap between the trim pieces.

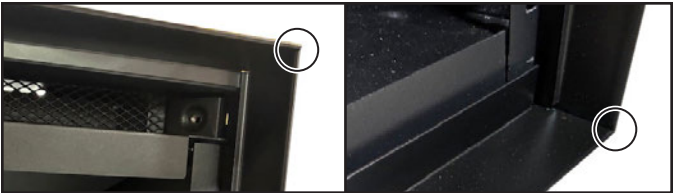


Figure 3 Finishing Trim Corners

Installation

Make sure all previous steps to prepare the appliance have been completed before installation. Refer to the Allusion Heritage Installation & Operation Manual (SF-ALLH-MAN) for more information and for details on leveling feet adjustment, adding an optional discreet outlet, and electrical requirements.

1. Remove the magnetic side panels by removing the brackets attached to the ember bed. Remove the two (2) ST4x8 screws from each bracket.

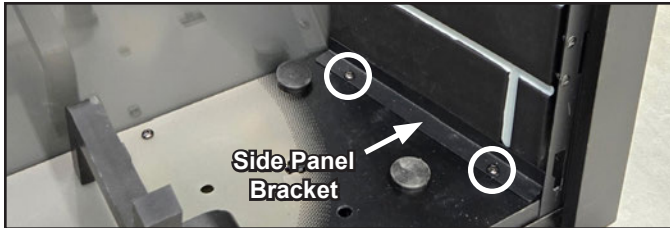


Figure 4 Side Panel Bracket Screws

2. Slide the appliance into the framed opening.

NOTE: The appliance needs to slide in far enough so that the finishing material can consistently be either flush with or inset from the finishing trim's edge. See Figure 5.

3. Attach the appliance to the framing with four (4) ST4X40 wood screws (provided with the appliance) at the tabbed, framing attachment hole locations.

IMPORTANT: Reinstall the front glass and cover the fireplace so it is protected during finishing.

Finishing

With the appliance installed, the finishing material can now be installed up to the finishing trim.

1. Install drywall or backer board on the framing around the appliance, making sure the material is brought up to the edge of the framed opening.
2. With the drywall installed, confirm that the space between the drywall and the finishing trim's edge matches the finish material thickness.

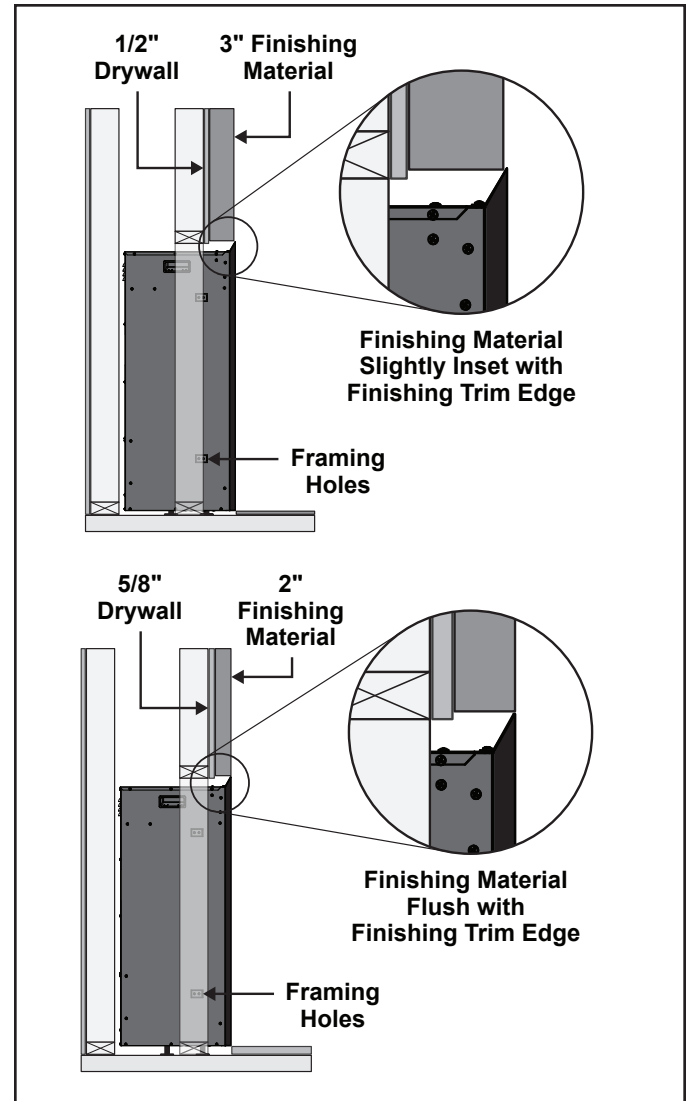


Figure 5 Finishing Material and Finishing Trim Examples

3. Install the finishing material either flush with or inset from the finishing trim's edge.

IMPORTANT: Having a clean finished edge will greatly increase the look of the finished product.

- Do not bend the finishing trim.
- Get as close as possible to the finishing trim without making contact.
- The appliance still needs to be removable for service.



SimpliFire®, a brand of Hearth & Home Technologies®
7571 215th Street West, Lakeville, MN 55044

Please contact your SimpliFire dealer with any questions or concerns.
For the location of your nearest SimpliFire dealer,
please visit www.simplifire.com.

Printed in China - Copyright 2026