

ALLUSION PLATINUM BIRCH AND TIMBER ACCESSORY LOG SETS

SF-ALLP-BIRCH, SF-ALLP-TIMBER

Compatible With: SF-ALLP50, SF-ALLP60, SF-ALLP72

- Installation Instructions -

Introduction

The Allusion Platinum Birch and Timber Accessory Log Sets are hand-painted and offers a true-to-life look. These placement instructions provide guidance for the recommended setup.

The Allusion Platinum Birch and Timber Log Sets are designed to fit the Allusion Platinum 50" (SF-ALLP50), 60" (SF-ALLP60), and 72" (SF-ALLP72).

NOTE: Some pieces will not be used, and may be discarded, if setup with the 50" or 60".

CAUTION! Risk of Cuts, Abrasions or Flying Debris. Wear protective gloves and safety glasses during installation and service. Sheet metal edges are sharp.

Tools and Supplies Needed

Before beginning installation, be sure that the following tools/supplies are available.

- Gloves
- Safety Glasses
- Magnetic Phillips Screwdriver
- Black Acrylic Embers (included with appliance)
- Small Clear Crystals (included with appliance)

Kit Components

Before beginning installation, confirm that all log pieces are included in your log set. There should be two pieces of each log included in the set for a total of 12 pieces. See Figures 1 and 2.

NOTE: The log sets include the piece quantities listed in the 72" column. Table also shows recommended quantities of each piece to use for each size appliance.

Piece	50"	60"	72"
A	1	2	2
B	1	2	2
C	1	1	2
D	1	1	2
E	1	1	2
F	1	1	2

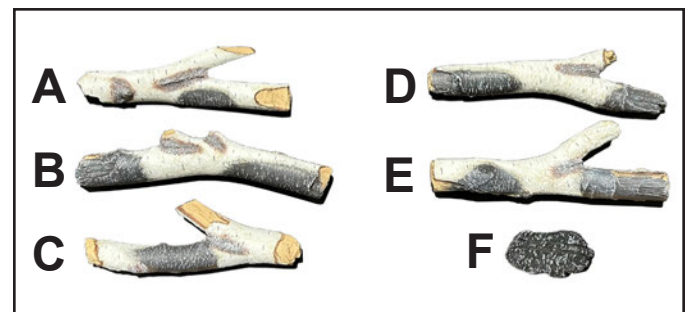


Figure 1 SF-ALLP-BIRCH Logs

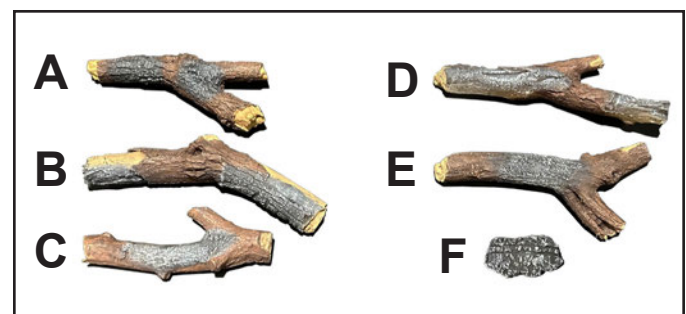


Figure 2 SF-ALLP-TIMBER Logs

Log Set and Media Placement

Refer to the Allusion Platinum Installation & Operation Manual (SF-ALLP-MAN) for installation and appliance preparation instructions. Appliance installation should be completed before beginning log and media placement.

The Birch and Timber log sets are nearly identical in shape of the logs, which allows this installation instruction to work for both accessory log sets.

1. Verify the appliance is fully installed into the wall, make sure side panels are properly installed, and remove the front glass if it is not already removed.
2. Cover the ember bed with a generous amount of clear crystals or black embers, depending on preference.
3. Starting from the left side of the appliance, place the logs in order as follows: A, B, C, D, E. See Figures 3 and 4.
4. Place Log F under the left side of Log D. See Figures 3 and 4.
5. Place additional logs for the 60" and 72" appliances as follows (additional logs in **BOLD**):
 - **60"** – A, B, C, F\D, E, **A, B**
 - **72"** – A, B, C, F\D, E, **A, B, C, F\D, E**
6. Once all the logs are placed, add additional clear crystals or black embers to fill any gaps or holes.
7. Re-install the front glass.

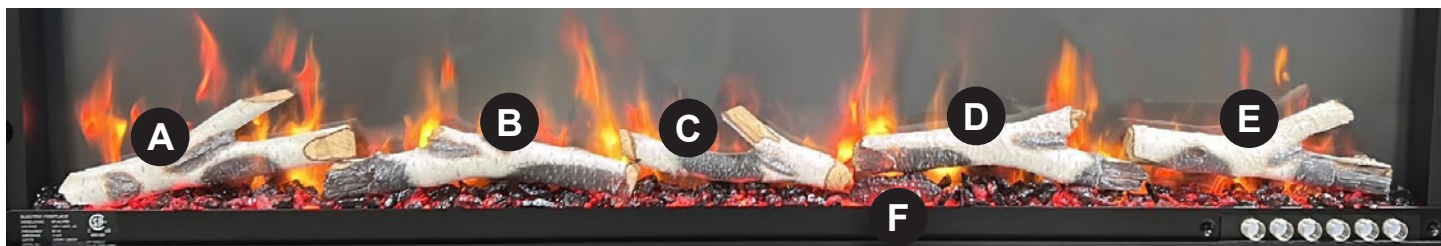


Figure 3 Allusion Platinum 50" Birch Log Positioning

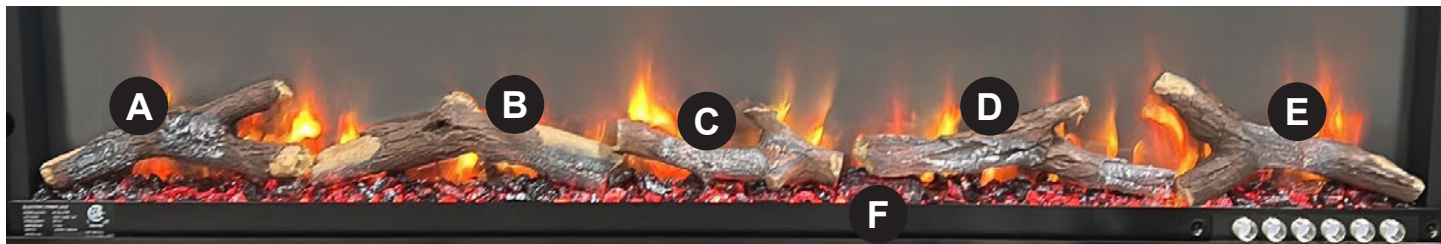


Figure 4 Allusion Platinum 50" Timber Log Positioning



SimpliFire®, a brand of Hearth & Home Technologies®
7571 215th Street West, Lakeville, MN 55044

Please contact your SimpliFire dealer with any questions or concerns.
For the location of your nearest SimpliFire dealer,
please visit www.simplifire.com.

Printed in China - Copyright 2026