

Fiber Stone Placement: Models: 350TSI-P-CEM

FIBER STONE PLACEMENT INSTRUCTIONS

1. Locate the pilot hole in the back right side of the base pan. Install the provided shoulder screw. See Figure 1.



Figure 1

2. Install foam fixture, place left end tight against the pilot. Right side over the shoulder screw. See Figure 2.

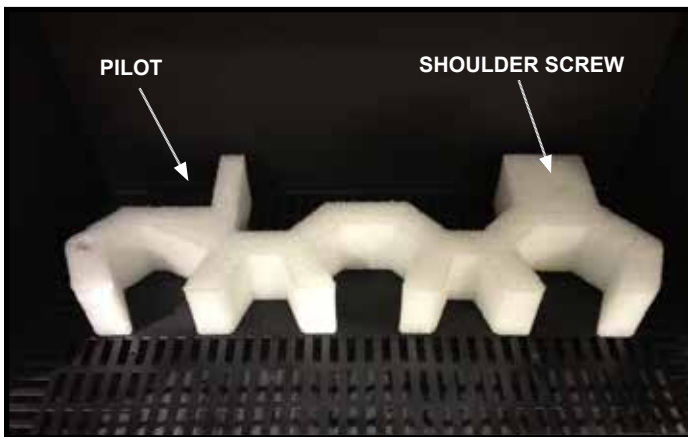


Figure 2

3. **Stone Placement:** Set Fiber Stones around the fixture in any desired color arrangement. **Note: Large rocks should be used around the fixture, small rocks can be used as fillers.** See Figure 3.



Figure 3

4. **Remove Fixture:** After fixture is removed, place Fiber Stones in area that is shown in Figure 4. **Note: Do Not place over burner ports.**



Figure 4

5. **Mineral Wool:** Place dime size pieces of mineral wool loosely over burner ports. **Note: Mineral wool may need to be adjusted if there is a stressed flame.** This can be done by moving the mineral wool around with a screwdriver. See Figure 5.



Figure 5

Air Shutter Setting

Air shutter settings should be adjusted by a qualified service technician at the time of installation. The air shutter is set at the factory for minimum vertical vent run. Adjust air shutter for longer vertical runs. See Figure 6.

- Loosen the wing nut.
- Move the air handle to the left to open the air shutter.
- Move the air handle to the right to close the air shutter.
- Tighten the wing nut.

NOTICE: If sooting occurs, provide more air by opening the air shutter.

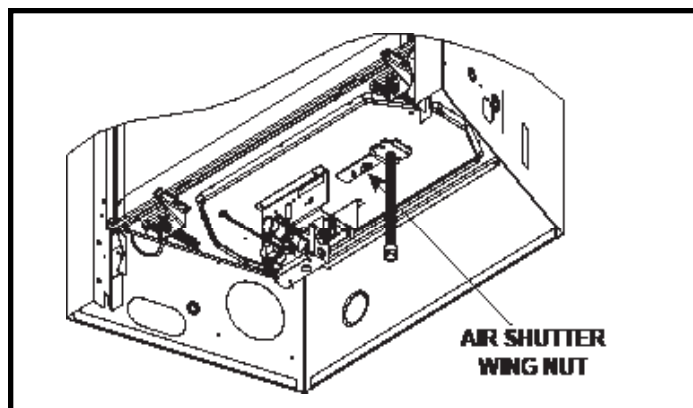


Figure 6

	Natural Gas	Propane
350TSI-P-CEM	0,6 cm	FULL OPEN