

Glass Panel Liner :

Models: 350TSI-P-CEM

GLASS PANEL LINER INSTRUCTIONS

1. Install back glass panel (see Figure 1-A). Set back panel tight to the back of the fire box (**be careful to hold the panel from falling until side panels are in place**).
2. Install left glass panel (see Figure 1-B). Set left panel tight to left side of the firebox. Top of panel should slide in behind the top heat shield in the fire box. Push left panel to the back of the fire box until it makes contact with the back panel.
3. Install right glass panel (see Figure 1-C). Set right panel tight to right side of the firebox. Top of panel should slide in behind the top heat shield in the fire box. Push right panel to the back of the fire box until it makes contact with the back panel.

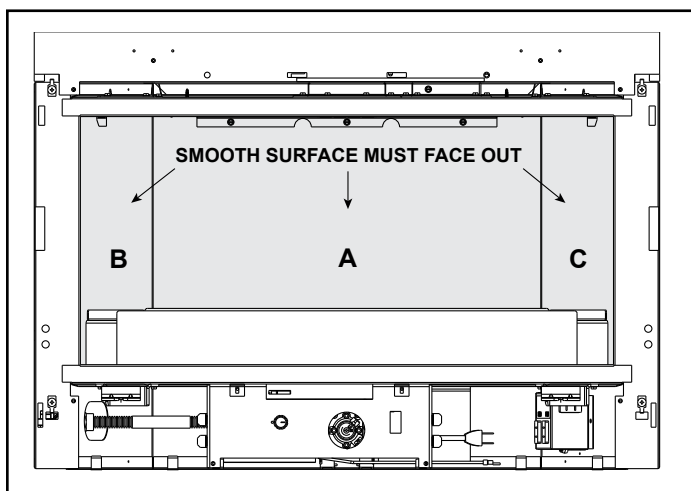


Figure 1 Placement of Glass Panels

Air Shutter Setting

Air shutter settings should be adjusted by a qualified service technician at the time of installation. The air shutter is set at the factory for minimum vertical vent run. Adjust air shutter for longer vertical runs. See Figure 2.

- Loosen the wing nut.
- Move the air handle to the left to open the air shutter.
- Move the air handle to the right to close the air shutter.
- Tighten the wing nut.

NOTICE: If sooting occurs, provide more air by opening the air shutter.

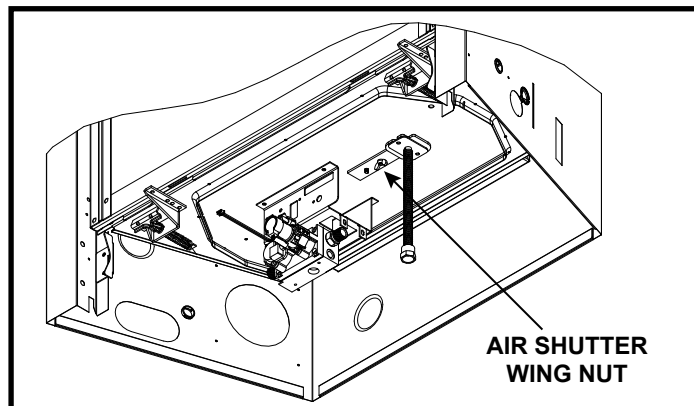


Figure 2

| | Natural Gas | Propane |
|--------------|-------------|-----------|
| 350TSI-P-CEM | 0,6 cm | FULL OPEN |