

Studio Fronts - Installation Instructions -



Leave this manual with party responsible for use and operation.

INSTRUCTIONS:

1. Remove door and baffle from box.
2. Remove corner spacers from door.
3. If your Studio has a glass front, ensure that decorative caps are hand tight (see Figure 1).



Figure 1

4. Use supplied 3/8 in. kee nuts to attach hanging brackets to the door studs. The left and right brackets are different, make sure that the hook part of the bracket is inside the studs and toward the center of the front on both sides. See figure 2.



Figure 2 Hanging Bracket

5. Remove 3 screws from underneath top surround.
6. With the top baffle pointed down, place inside the opening of unit and press against the top edge. See Figure 3.
7. Attach with 3 screws that were removed.

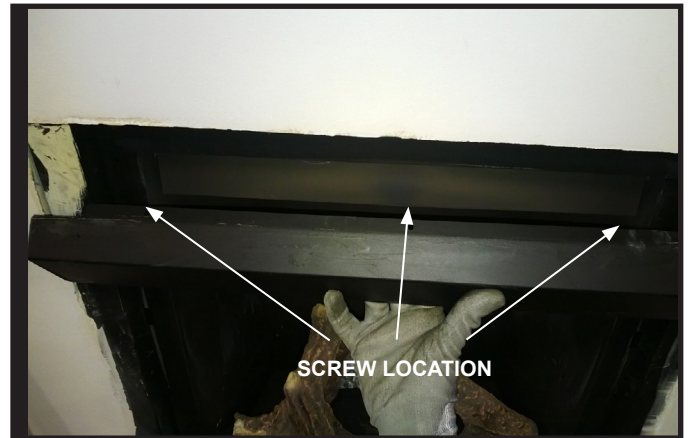


Figure 3. Top Baffle Placement

8. Hang door assembly onto fireplace such that hanging brackets engage J-hook slots of fireplace (see Figure 4) and slide door on until it contacts the wall or finishing material.

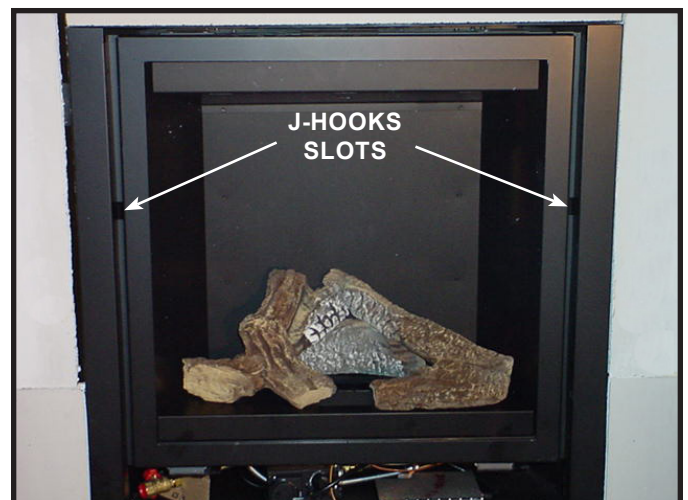


Figure 4

CLEANING INSTRUCTIONS - BRUSHED NICKEL

The brushed nickel (BN) decorative front is to be cleaned **ONLY** with a solution of water and mild dish soap. **DO NOT** clean with ammonia-based or alkaline cleaning products. Failure to clean as directed could result in damage to this decorative front.

Service Parts List

| DESCRIPTION | SERVICE PART NO. |
|-----------------------|------------------|
| J-Hook Bracket, Left | SRV2111-136-BK |
| J-Hook Bracket, Right | SRV2111-137-BK |
| Mesh | 2077-011 |

Please contact your Hearth & Home Technologies dealer with any questions or concerns.

For the location of your nearest
Hearth & Home Technologies dealer,
please visit www.fireside.com.

Hearth & Home Technologies
7571 215th Street West, Lakeville, MN 55044
www.fireside.com