

CF-TON32, CF-ILL32, CF-DECO32 Decorative Fronts

Models: RAVE3012I, SLR32
Installation & Operating Instructions



Leave this manual with party responsible for use and operation.

CAUTION! Risk of Cuts, Abrasions or Flying Debris.
 Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.


DANGER



**HOT GLASS WILL
CAUSE BURNS.**

**DO NOT TOUCH GLASS
UNTIL COOLED.**

**NEVER ALLOW CHILDREN
TO TOUCH GLASS.**

A barrier designed to reduce the risk of burns from the hot viewing glass is provided with this appliance and must be installed for the protection of children and other at-risk individuals.

WARNING! Risk of Fire! Combustible materials *MUST* NOT overlap or be placed under a surround.

CAUTION! Do not install damaged components.

CONTENTS:

- Decorative Front Assembly
- Shoulder Bolts (4)

Verify and remove contents from packaging before beginning installation.

1. Remove decorative front assembly and shoulder bolts from the package.
2. Detach vanity panel and inner decorative front assembly from the trim ring by removing the six screws as shown in Figure 1.

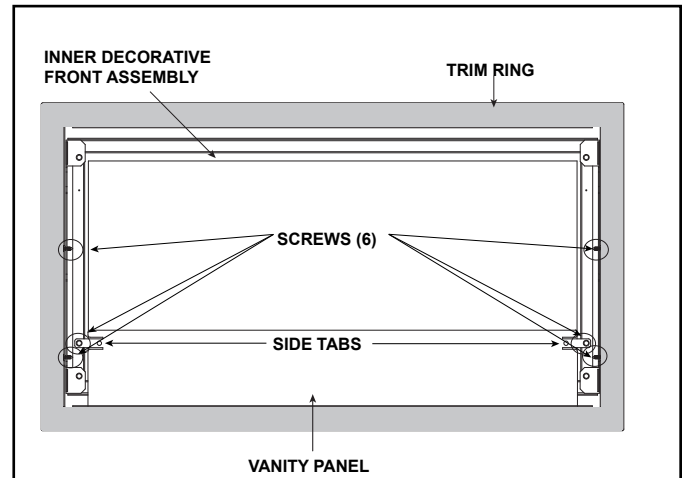


Figure 1. Decorative Front Assembly

3. Position trim ring within appliance opening, ensuring it is pushed tightly to the finish material. Install four shoulder bolts into appliance through trim ring as shown in Figure 2.

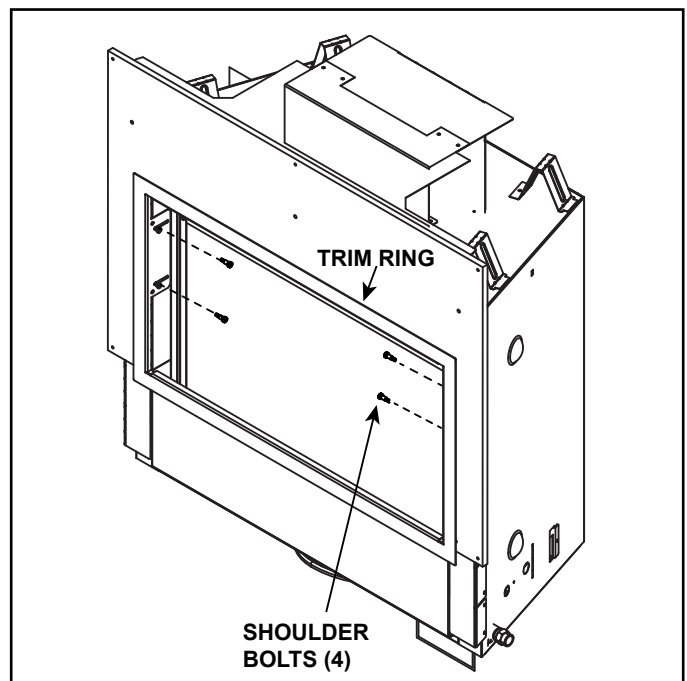


Figure 2. Install Shoulder Bolts

4. Bend left and right side tabs on vanity panel “back” until they are parallel with the vanity panel itself. See Figure 3.

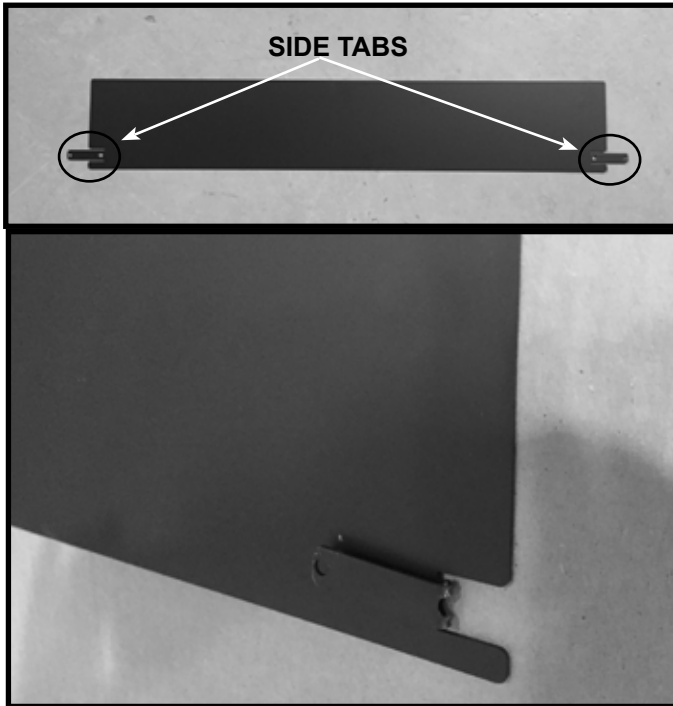


Figure 3. Bend Side Tabs on Vanity Panel

5. Position one side of vanity panel on a bottom corner of the glass assembly at an angle between the glass and the frame of the decorative front as shown in Figure 4 and Figure 5.

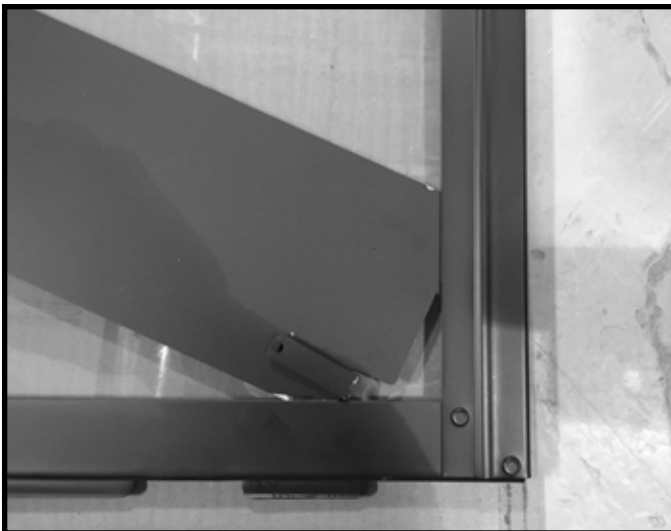


Figure 4. Insert Vanity Panel into Corner

6. Put the other side of the vanity panel between the glass and the frame on the other side of the glass assembly as shown in Figure 5. Slide that corner downward and into position. The bend on the side tabs will meet the bottom of the frame, as shown in Figure 6.

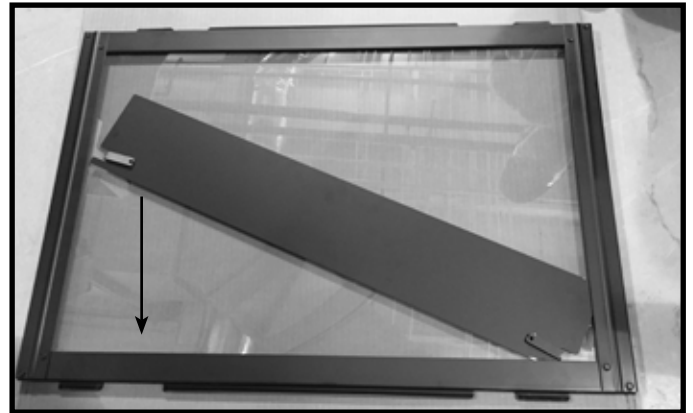


Figure 5. Install Vanity Panel



Figure 6. Vanity Panel Installed.

7. Hang the decorative front by aligning the slots on the bracket on the back of the decorative front with the four shoulder bolts now installed on the appliance. See Figure 7 and Figure 8. Push decorative front toward the appliance until it is flush with the installed trim ring.

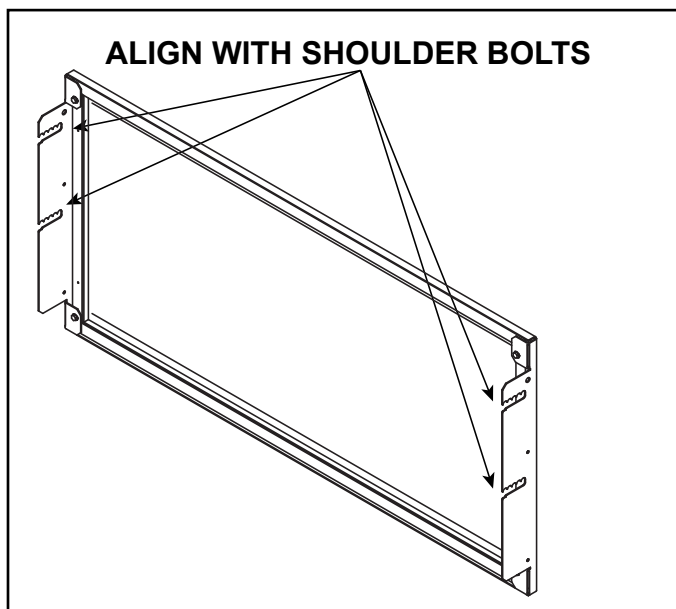


Figure 7. Align Slots with Shoulder Bolts



Figure 8.

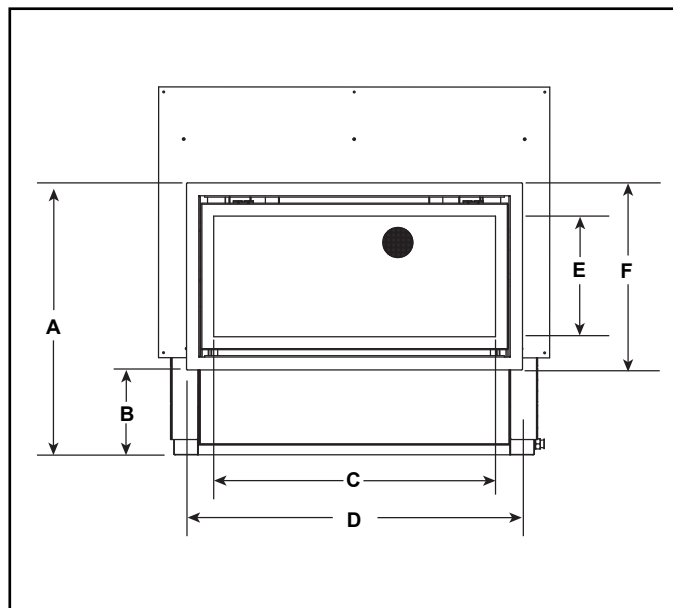


Figure 9. Dimensions of CF Decorative Front

Table 1. Dimensions of CF Decorative Fronts

DIMENSION		IN.	mm	
A	Top of decorative front to bottom of appli- ance.		26-7/8	683
B	Bottom of decorative front to bottom of appliance.		8-3/16	208
C	Inside dimension of decorative front (width).	CF-TON/DECO	28	711
		CF-ILL	27	686
D	Outside dimension of decorative front (width).		33-1/2	851
E	Inside dimension decorative front (height).	CF-TON/DECO	12	305
		CF-ILL	10-5/8	271
F	Outside dimension of decorative front (height).		18-3/4	476

Cleaning Instructions for Decorative fronts

Use a microfiber cloth and Windex® Original Glass Cleaner or 03M003 Stove Bright® Glass Cleaner to clean the decorative front immediately after installation to remove acids deposited by the installer or technician. Spray the cleaner onto the microfiber cloth and carefully wipe the entire surface. The decorative front should be cleaned in this manner annually by the homeowner to remove fingerprints or other contaminants. Once oxidation of the paint pigment has occurred, cleaning will not restore the original color.

Please contact your Hearth & Home Technologies dealer with any questions or concerns.

For the location of your nearest
Hearth & Home Technologies dealer,
please visit www.hearthnhome.com.

Hearth & Home Technologies
7571 215th Street West, Lakeville, MN 55044
www.hearthnhome.com