

Flame Adjustment Switch Installation Instructions for Bay Fronts

A. INTRODUCTION

Kit includes: Hi/Lo Switch, Solenoid, Wire Harness, Plug Wire, (2) Wire Clips. Do not install damaged components.


B. SOLENOID INSTALLATION

CAUTION: Turn all power off to the fireplace.

Step 1. Remove the screw holding the knob on the gas valve (See Figure 1). Remove knob and the nut behind it. Screw the solenoid into the variable regulator 1 1/2 turns. Tighten jam nut.

Step 2. Remove plug on lower left corner of Bay Front. Snap the Hi/Lo switch in its place.

Step 3. Snap one end of the wire harness onto the middle spade (labeled 2) on the Hi/Lo switch (See Figure 2). Take the other end of the wire harness and snap it on one of the wires on the solenoid.

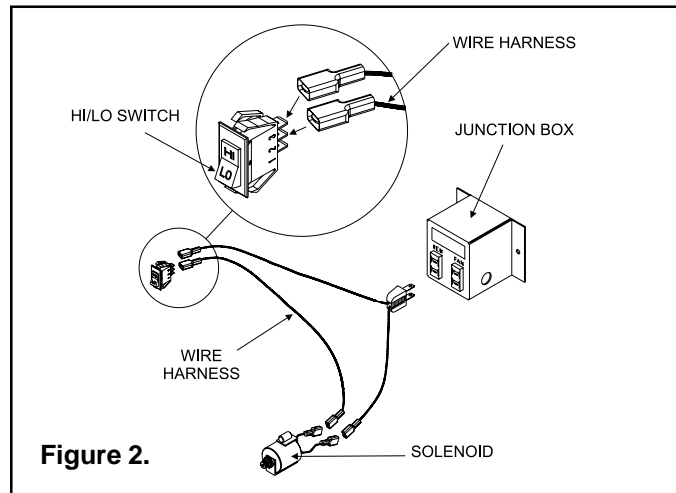

Step 4. Snap one of the ends of the plug wire onto either one of the remaining spades on the Hi/Lo switch, labeled either 1 or 3. Take the other end of the plug wire and snap it on the remaining wire on solenoid.

Step 5. Plug the plug wire into the junction box marked REM (Remote).

Step 6. Turn power back on to fireplace.

