

Models:

EL36, EL42, RH36, RH42, BE36, BE42, MEL36-BK, MEL42-BK,
ODVILLA-36, ODVILLA-42

Anti-Bang Kit for Firebox Sides and Back

CAUTION! Risk of Cuts, Abrasions or Flying Debris. Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

Installation

1. Remove the doors, screens and smoke shield.
2. Remove the sides and back refractory.
3. On the 42-inch unit, install (1) long "L" bracket angled in the center across the back with the self-tapping screws provided. See Figure 1.
5. On the sides (same for both sizes) install (1) short "L" bracket on each side, 8 inches up and centered with the self-tapping screws provided. See Figure 3.

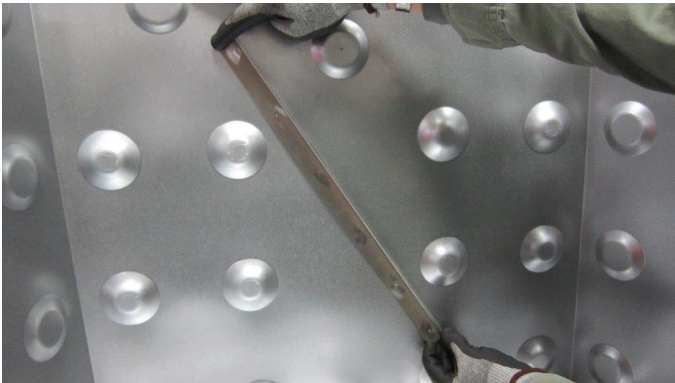


Figure 1 Installing Bracket on Back of a 42-Inch Unit

4. On the 36-inch unit, install (2) long "L" brackets straight up at each end with the self-tapping screws provided. See Figure 2.



Figure 2 Installing Bracket on Back of a 36-Inch Unit One at Each End



Figure 3 Installing Bracket on the Side