HEARTH & HOME technologies™

Installation Instructions

Models:
ASD-36, ASD-42, LSD-36, LSD-42, VOFBSD-36 and VOFBSD-42 Mesh Door Kits

Door Model Number	For Use on Models				
ASD-36	ACUF36-BD	ACUF36-GD	BUF36A	BUF36-T	BUF36-H
ASD-42	ACUF42-BD	ACUF42-GD	BUF42A	BUF42-T	BUF42-H
VOFBSD-36	VOFB36-T	VOFB36-H	VOFB36T-B	VOFB36H-B	
VOFBSD-42	VOFB42-T	VOFB42-H	VOFB42T-B	VOFB42H-B	
LSD-36	LCUF36CR-C	LCUF36CR-BT	LCUF36CR-GT	LCUF36CR-GH	
LSD-42	LCUF42CR-C	LCUF42CR-BT	LCUF42CR-GT	LCUF42CR-GH	

UL® LISTED

These mesh door kits have been tested for use with specific Hearth & Home Technologies products. Check with your local building code agency before you begin installation to ensure compliance with local codes, including the need for permits and follow-up inspections. If you encounter any problems regarding code approvals, or if you need clarification of any of the instructions contained here, contact your Hearth & Home Technologies Inc. dealer. For the dealer nearest you, please visit www.hearthnhome.com.

CAUTION! Risk of Cuts/Abrasions. *Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.*

⚠ WARNING

HOT SURFACES!

Screen/mesh, glass doors and other surfaces are hot during operation AND cool down.

Hot screen/mesh and glass doors will cause burns.

- Do not touch screen/mesh or glass doors until cooled
- NEVER allow children to touch screen/mesh or glass doors
- Keep children away
- CAREFULLY SUPERVISE children in same room as fireplace.
- Alert children and adults to hazards of high temperatures.

High temperatures may ignite clothing or other flammable materials.

- Keep clothing, furniture, draperies and other flammable materials away.

NOTICE: *All fingerprints and smudges must be wiped clean from the viewable surfaces of the door kit prior to the initial burning of the fireplace. If this is not done, these prints and smudges will be cured into the finish and set for the life of the fireplace. To keep the finish looking its best, gently wipe with a soft cloth and if desired, soap and water. Never use thinner or abrasive cleaners since these products will damage the finish.*

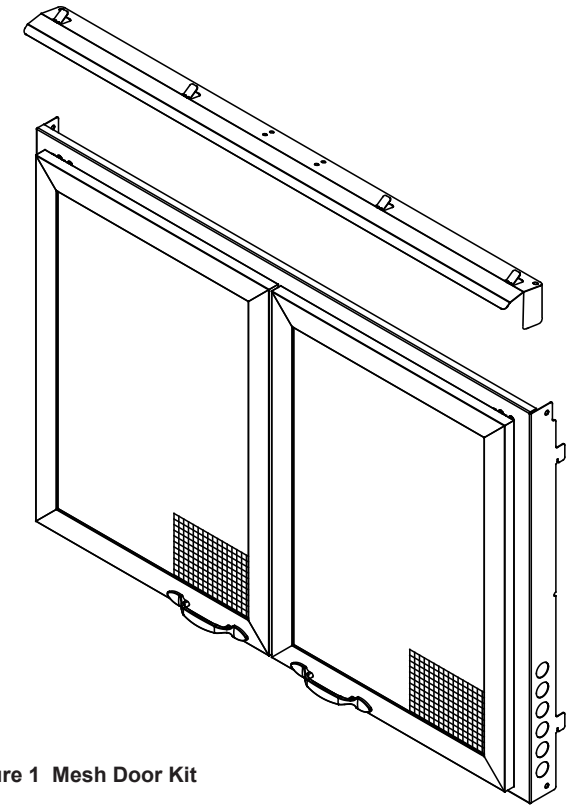

Figure 1 Mesh Door Kit

CAUTION! The door kit is heavy. *We recommend two installers to put the front assembly in place.*

Installation:

1. Remove the existing screens from the fireplace. See Figure 2:

    - Remove one screw in each of the screen rods behind the upper screen cover
    - Slide screen rods out of support holes.
    - Rods and screen will come out as an assembly.
    - Discard.

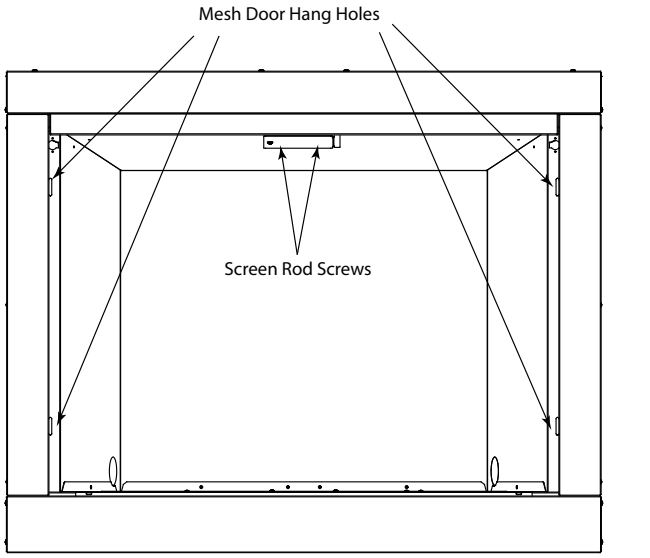

Figure 2 Remove Existing Screens

2. Install inner hood by using the (4) bend tabs to locate. Pry up hand band tabls slightly to locate. See Figure 3.
3. Use (2) screws provided to secure each end of the inner hood to the firebox column(s). See Figure 3.

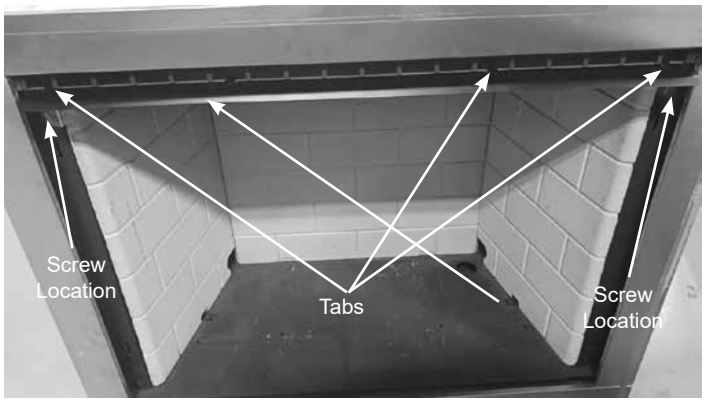

Figure 3 Bend Tabs & Screw Locations

4. Use the (2) screws from the screen rods to secure inner hood in place. See Figure 4.
5. Leave original hood in place.

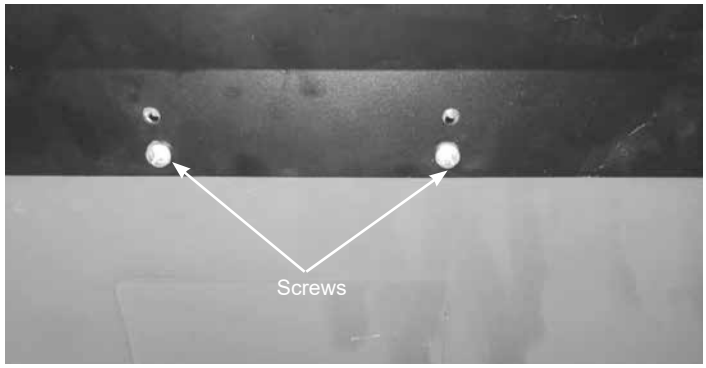

Figure 4 Screw Location

6. Hang door frame assembly into the (4) slots located on the firebox (see Figure 2) with the corresponding hooks on the door frame. See Figure 5.

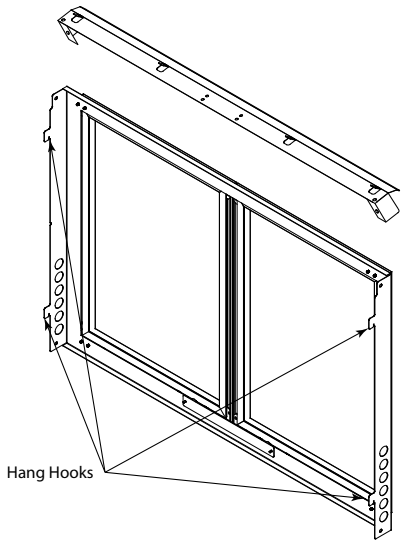

Figure 5 Frame Assembly

7. Be sure door is all the way down on the hooks. Door frame will have approximatley 1/2 inch gap on the bottom of frame. See Figure 6.

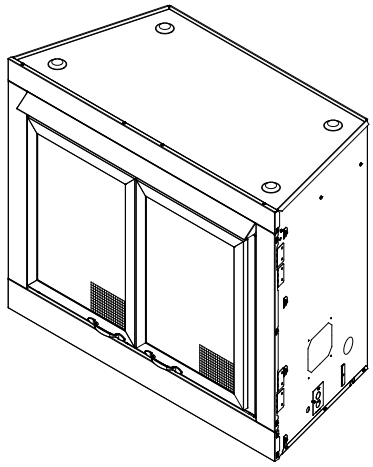

Figure 6 Completed Mesh Door Installation