


## Sherwood Wall Cabinet for SL-350, SL-550 or SL-750 Gas Fireplace

### Assembly / Installation Guide

#### PLEASE READ

These instructions apply only to the cabinetry and facing material that will surround the firebox. **PLEASE SEE THE FIRE-PLACE MANUFACTURER'S INSTALLATION INSTRUCTIONS TO ENSURE THAT ALL CLEARANCE AND INSTALLATION REQUIREMENTS ARE BEING MET.**

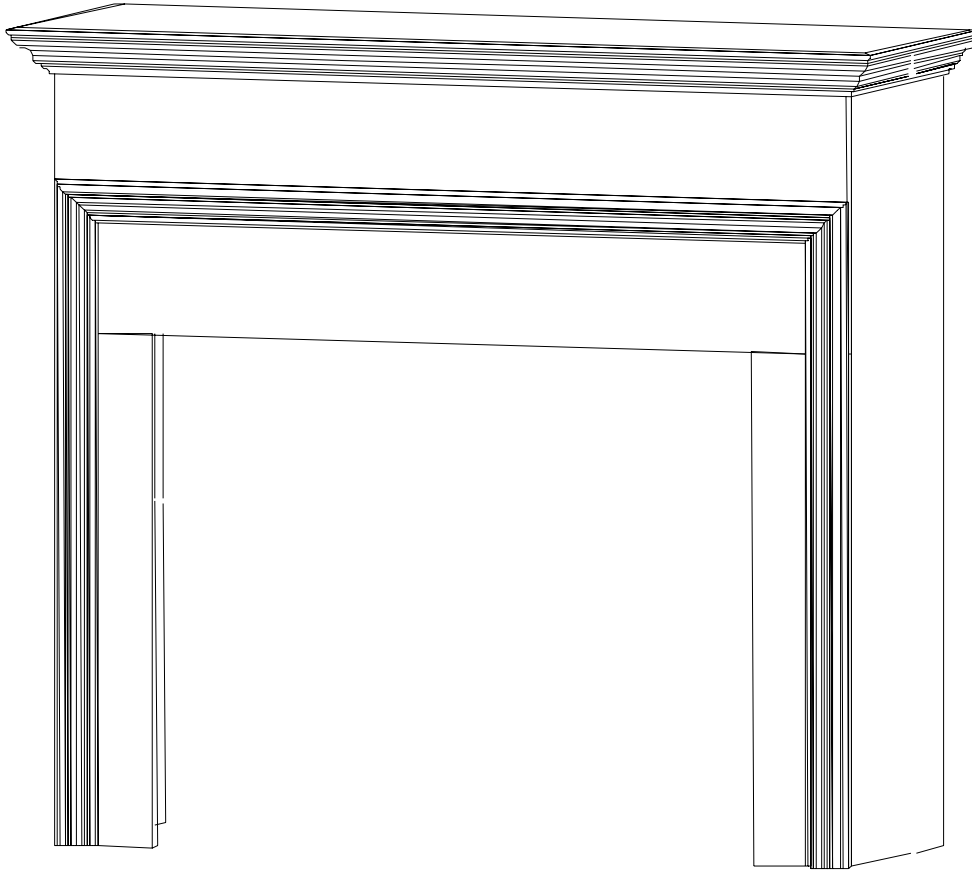

### CALL US FIRST

#### DO NOT RETURN TO THE STORE

For immediate help with assembly, or for additional product information, call our toll-free number:


**1.888.880.0192**

### Warning !!

- Improper installation, adjustment, can cause injury or property damage. For assistance or additional information, consult a qualified installer, service agency, or the gas supplier.
- Comply with all minimum clearances to combustibles as specified in firebox manual. Failure to comply may cause house fire.




The walls and floor in the area of the installation should be clean, plumb and level. Any major deviation should be remedied before installing the fireplace, marble or the mantel /cabinet.



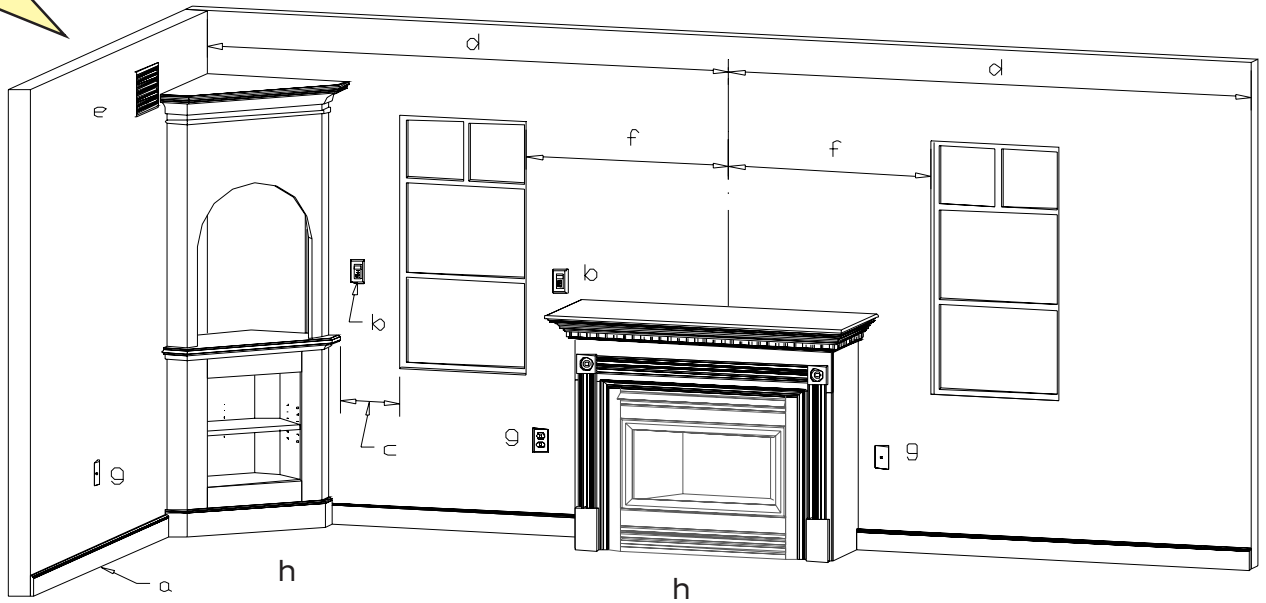


Above is a diagram of issues that may prevent an installation of wood products around a firebox:

- Is base molding already installed?
- Where are the electrical outlets or firebox switch?
- Is there enough distance between windows and edge of cabinet?
- Is the fireplace centered between walls (d) or (f) windows?
- Return air vent location?
- Is the fireplace centered between windows?
- Where are the electrical & cable outlets positioned?
- Is there hardwood or carpet going in?

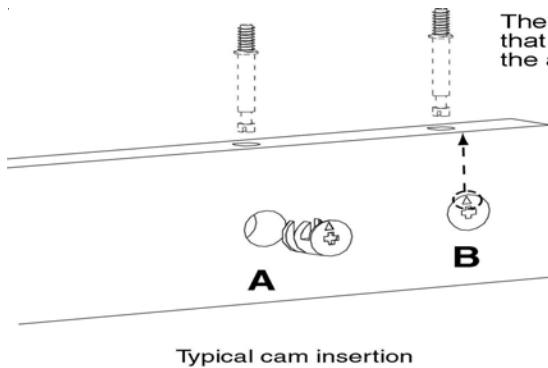


These four panels show operations that will be repeated throughout the assembly of the cabinet

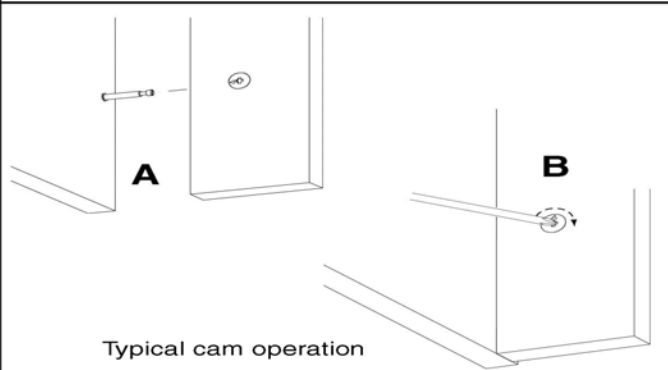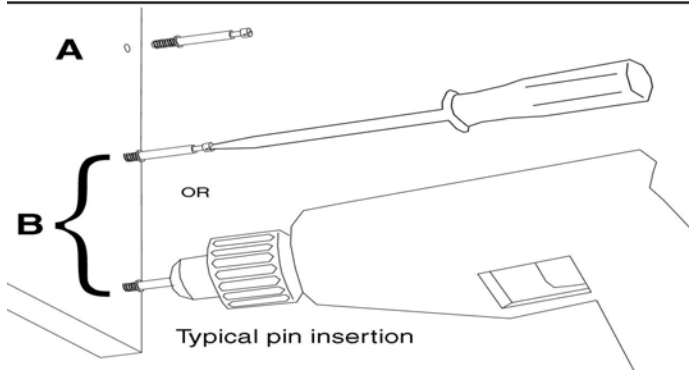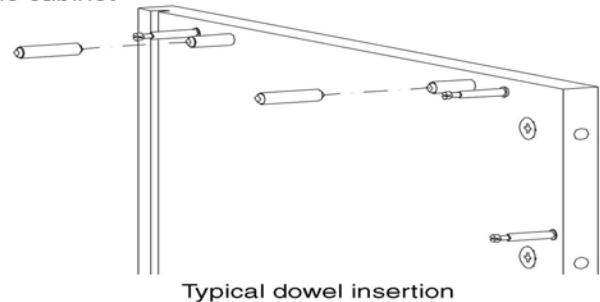

## Parts List and Diagram

### **CABINET PARTS:**

- 1 Top Assembly (a)
- 1 Breastboard Assembly (b)
- 1 Left leg (c)
- 1 Right leg (d)
- 1 Left return (e)
- 1 Right return (f)
- 1 Ledger board (g)
- 1 PBT - 350, PBT-550, PBT-750, brass trim kit (not included)

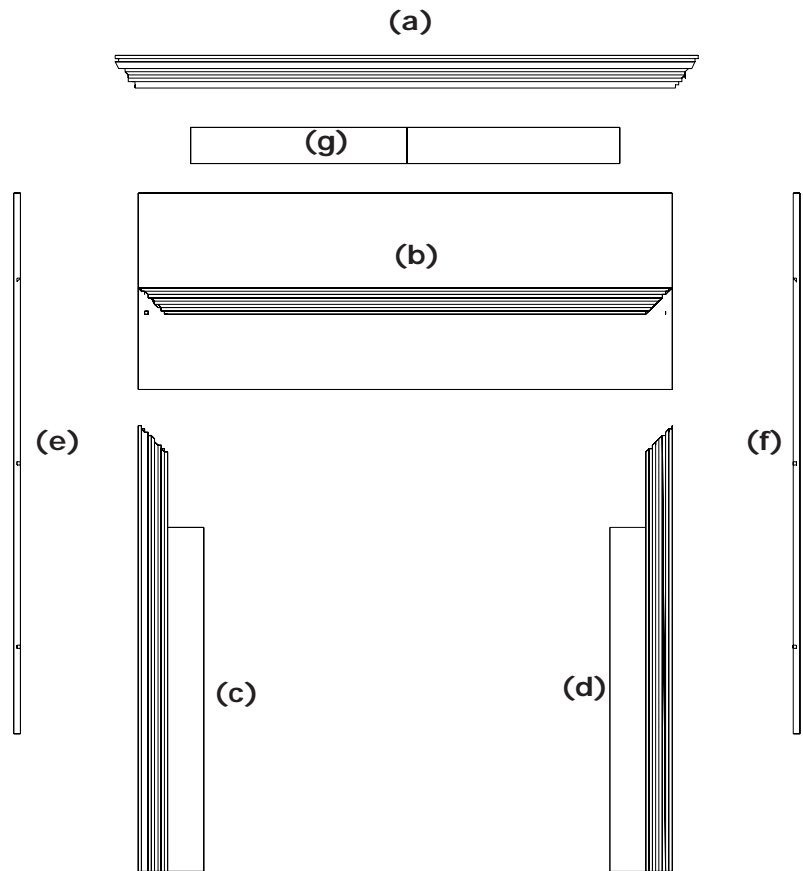

### **Hardware Kit Includes:**


- 10 Cams 
- 2 Double head minifix 
- 2 1 1/4" drywall screws 
- 4 Wooden dowel 
- 2 3" drywall screws 
- 6 Wood Thread Minifix 
- 2 L brackets 
- 4 #6 5/8 screws 

### **Tools and supplies needed:**


- #2 Philips screwdriver
- Portable Screw gun
- Medium straight bit screwdriver
- High temp. silicone adhesive

## Assembly steps


1.

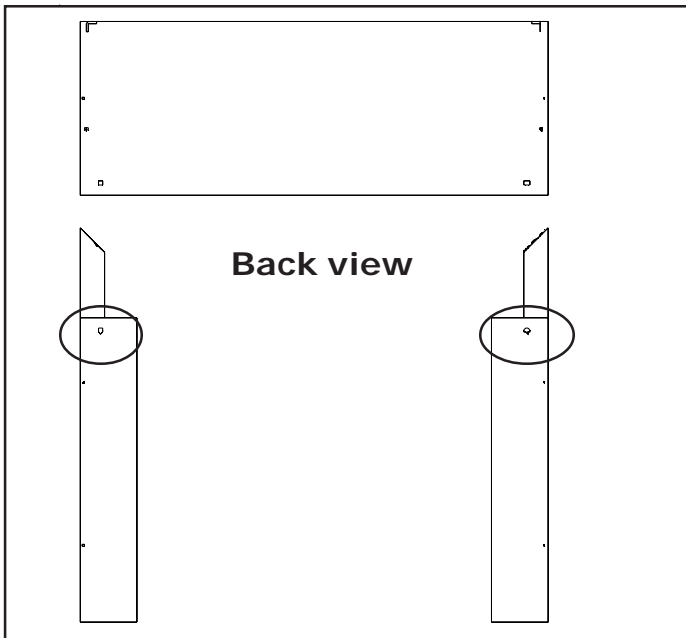


2.

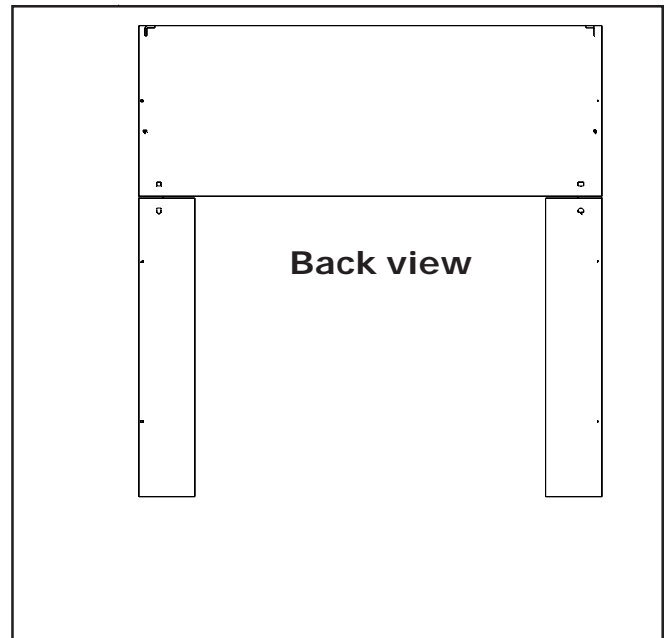

3.

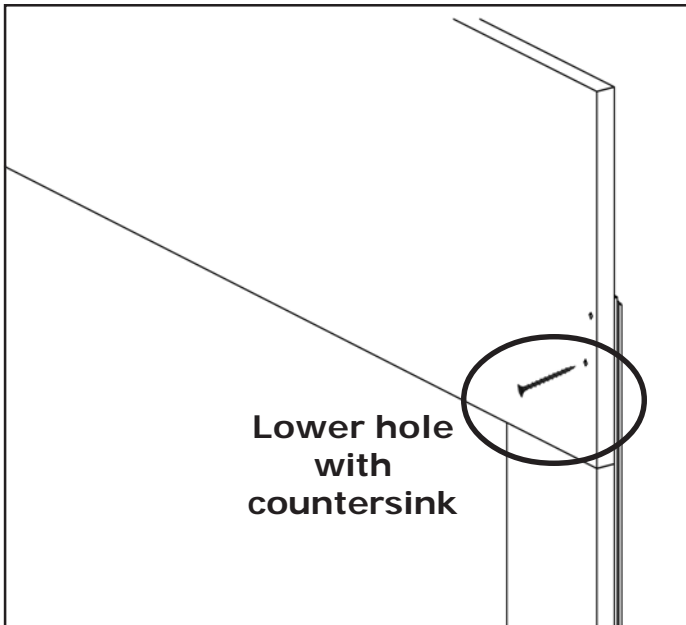

4.

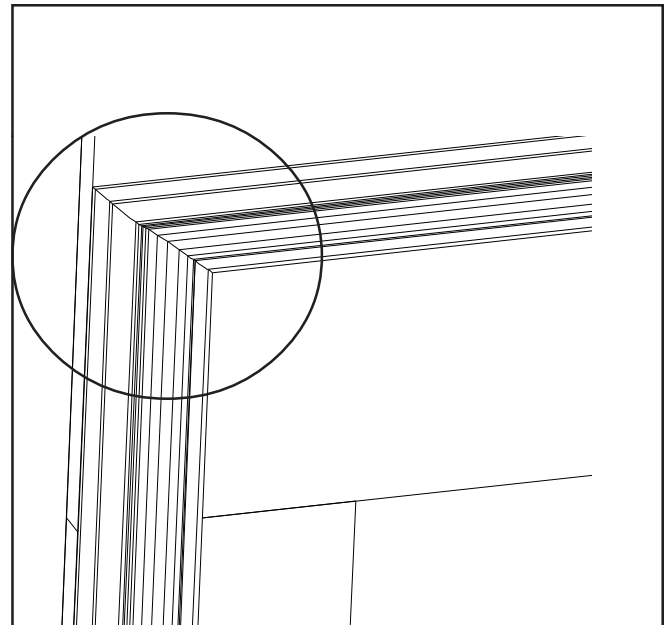


1. Lay out all parts.
2. Attach legs to breastboard and tighten cams.
3. Insert (1) 1 1/4" drywall screw in the lower pre-drilled hole of the breastboard, screwing into upper corner of molding.
4. Flip cabinet over and inspect miter joint. Make sure that it is tight.


Note: Lay cabinet face flat on a clean floor with the backside facing up.

## Assembly steps


5.

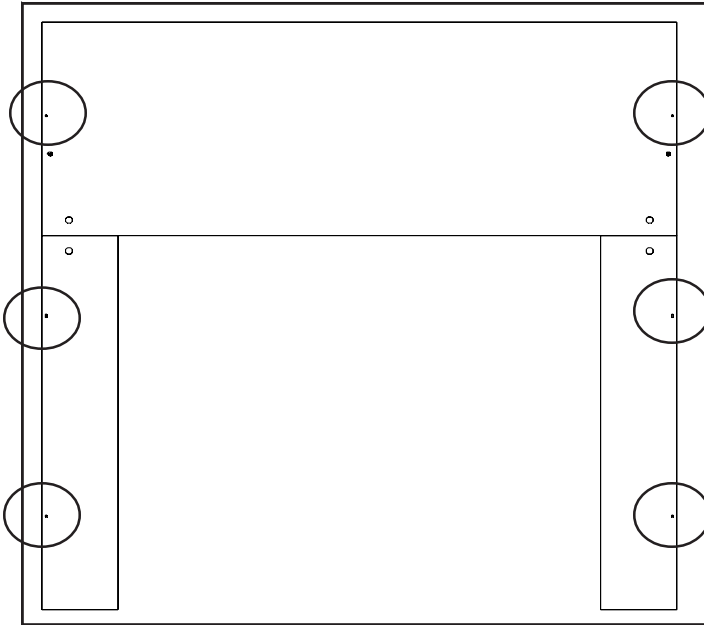


6.

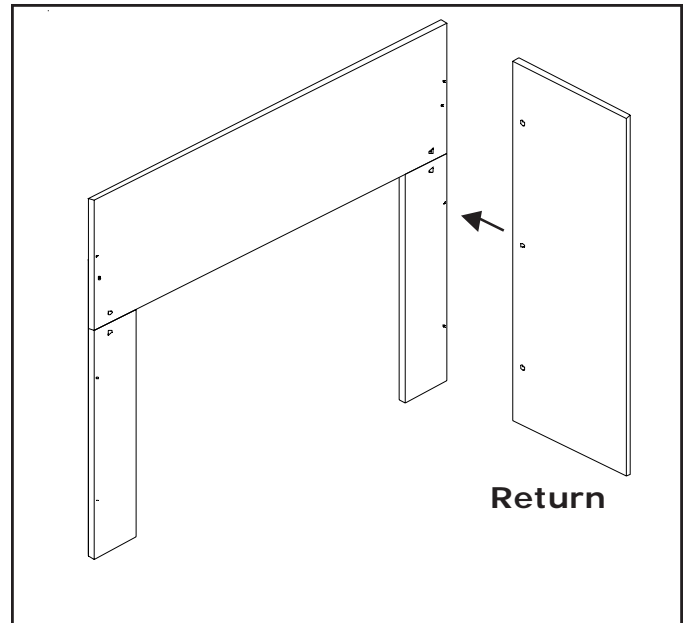

7.

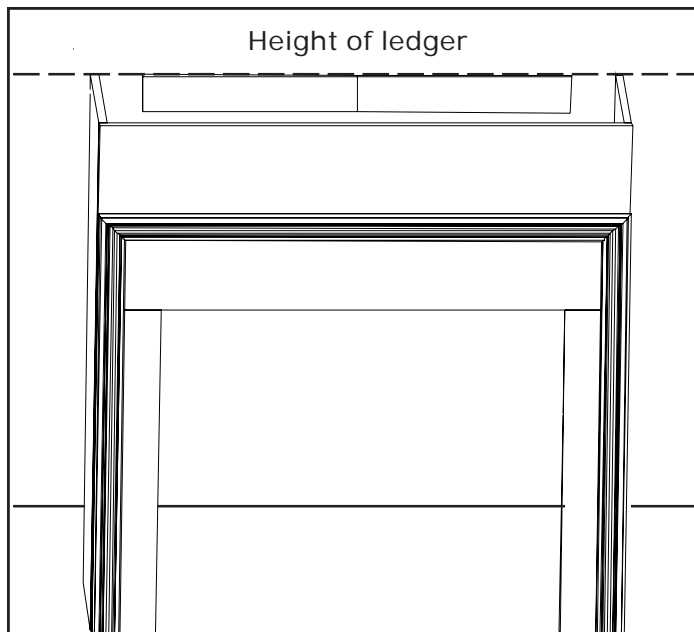


8.

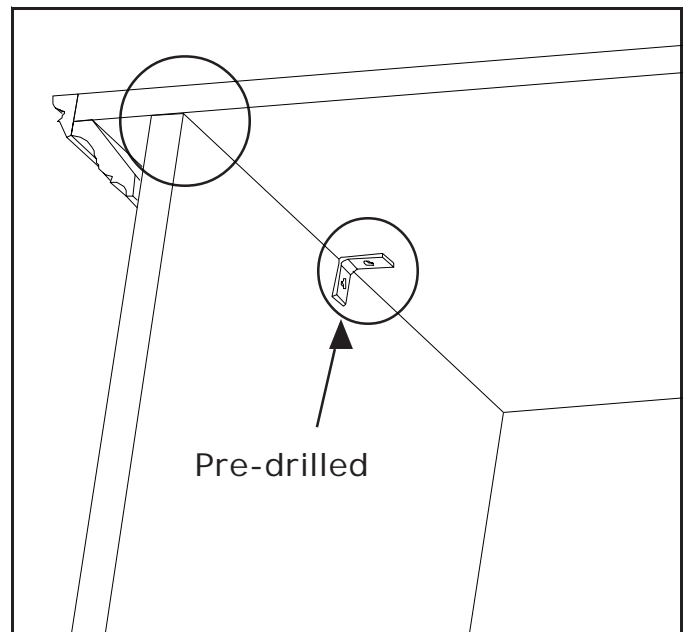

5. Insert (2) wood thread minifix into the back side of each leg and (1) wood thread minifix into the left and right side of the breastboard.
6. Insert (3) cams into each return. Attach returns to breastboard and legs and tighten cams on returns. (Do not over-tighten)
7. Using the height of the cabinet returns as a reference, install the ledger board into wall studs using (2) 3" drywall screws. Make sure it is level and flush.
8. Attach (1) L bracket on each interior side of the returns by screwing in (2) #6 5/8 screws into pre-drilled holes. Set top on cabinet and align rear edge of top with the rear edge of the cabinet. Screw (2) #6 5/8 screws into top. Do not overtighten.

## Assembly steps

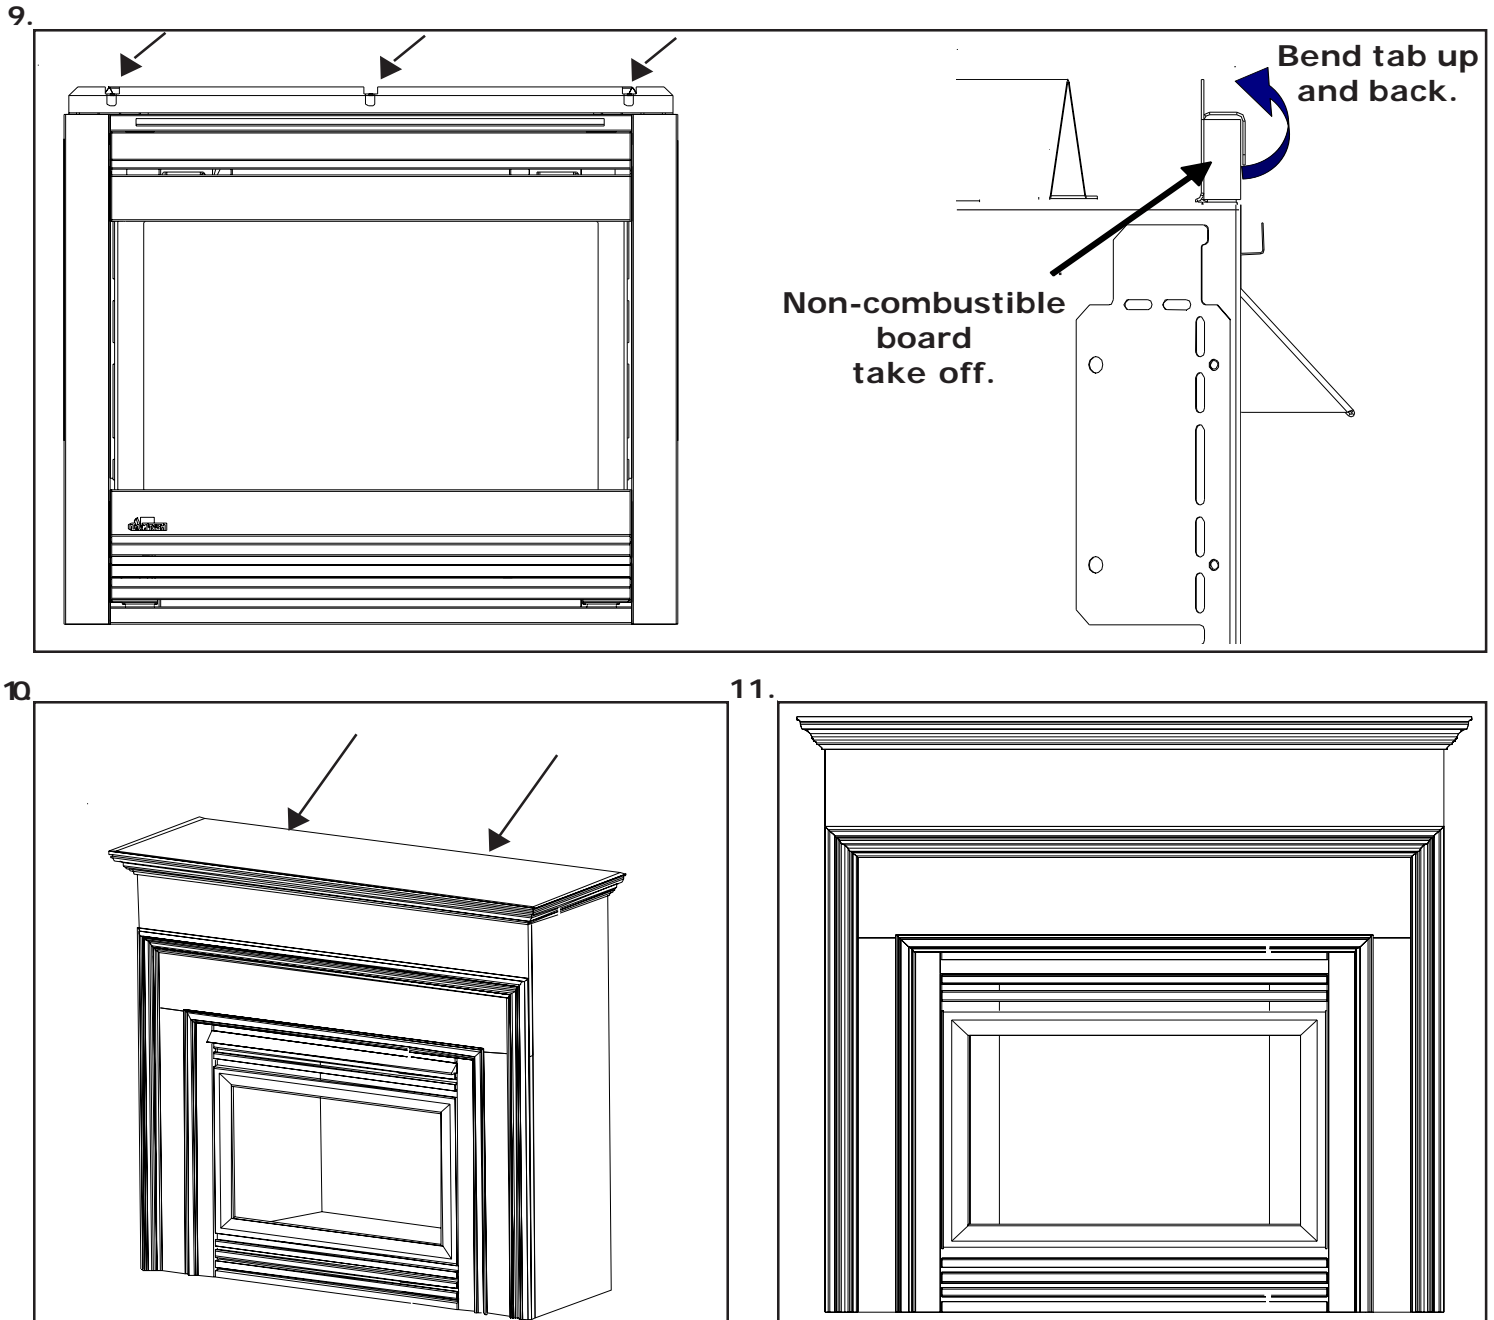

9. Before mounting cabinet over fireplace, remove the 1 inch non-combustible board on top of fireplace. To remove the board, bend back the 3 metal clips and metal bracket.
10. Place cabinet over fireplace making sure that the face of the fireplace and the face of the cabinet line up. There should be roughly 7/8" between the cabinet and the fireplace all the way around the opening. Attach the cabinet to the wall by nailing into the top 1/4" off the back edge of the top into the ledger strips or gluing the underside of the top to the ledger strips.
11. Assemble brass trim kit, PBT -350, according to manufacturer's instructions. Attach assembled brass trim to fireplace using high temperature silicone adhesive. Trim strip should fully cover gap between fireplace and cabinet at all points. (See following pages for trim kit information.)
12. Install is complete.

## Trim kit NOT included with cabinet.

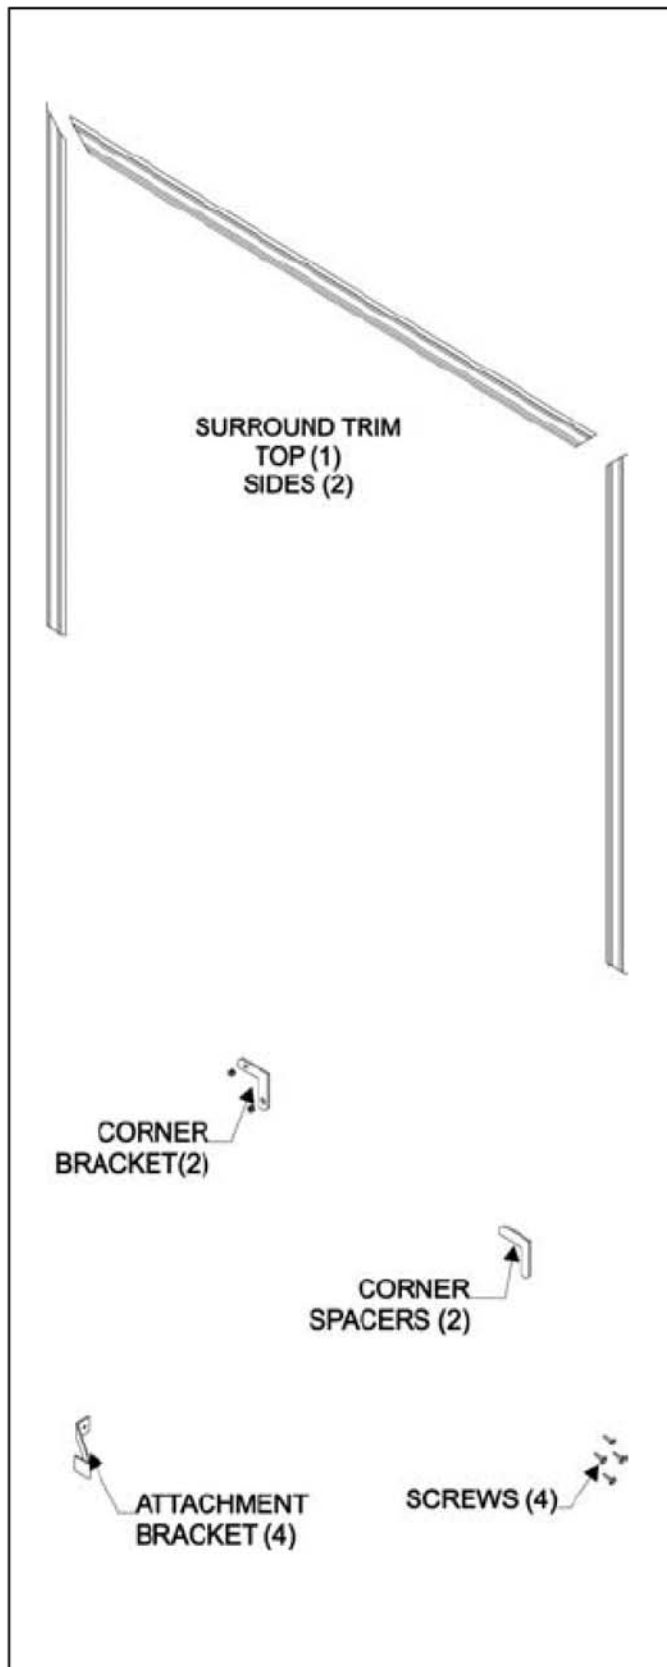


FIGURE 1

### CARTON CONTENTS

Carefully check the carton contents as shown in Figure 1. Do **NOT** install a damaged surround kit. If the contents are damaged, contact your dealer.

### INSTALLATION INSTRUCTIONS

1. Assemble the surround by aligning the 45-degree corners of the top trim piece with the 45-degree corners of the right and left side pieces. Slide the corner angle brackets inside the channel at the back of the trim pieces and tighten the set screws. See Figure 2.

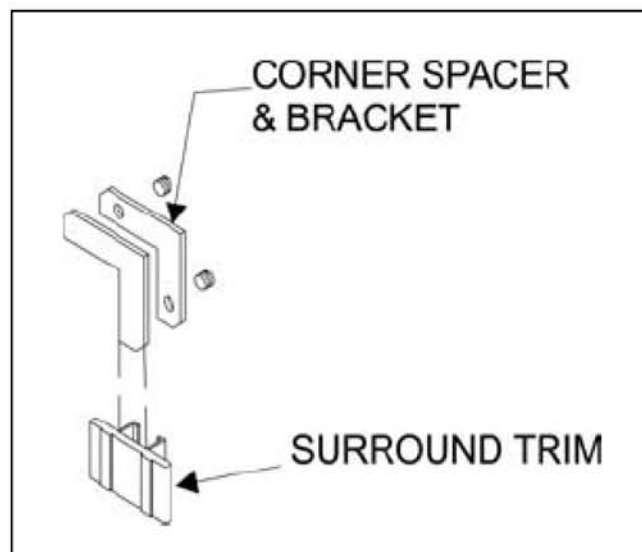


FIGURE 2

## Trim kit NOT included with cabinet.

### 2. FOR TRAPEZOID SHAPED FIREPLACES:


Slide two attachment brackets in the rear channel of both side trim pieces. Position one bracket 3-inches from the top and the second bracket 3-inches from the bottom.

### 3. FOR TRAPEZOID SHAPED FIREPLACES:

Position the surround trim against the face of the fireplace and secure the attachment brackets to the fireplace outer wrap with the screws provided. See Figure 3.


### 4. FOR OTHER FIREPLACE MODELS:

Apply a silicone adhesive every six-inches along the inside surface of the surround and position the surround against the face of the fireplace. Do not disturb until the adhesive dries. See Figure 3.

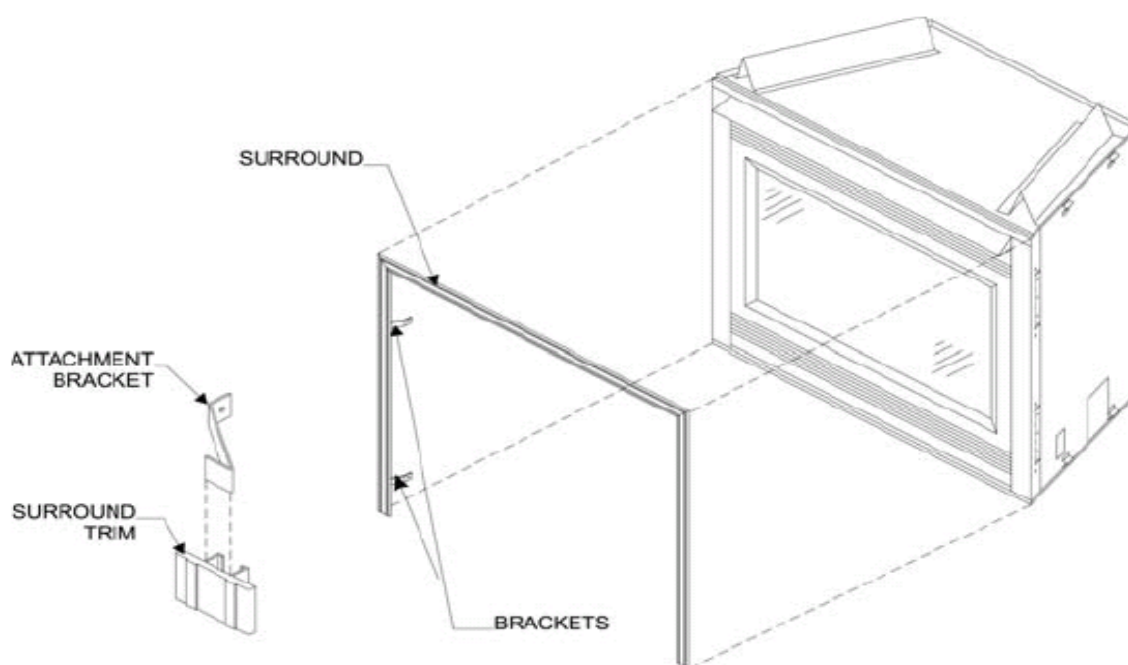

## TOP VIEW

### TRAPEZOID SHAPED FIREPLACES

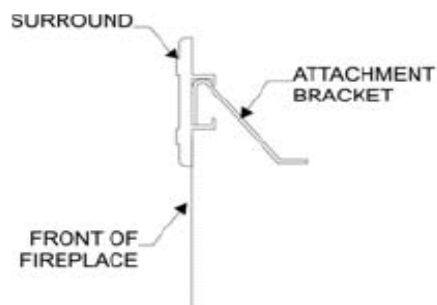

### OTHER FIREPLACES

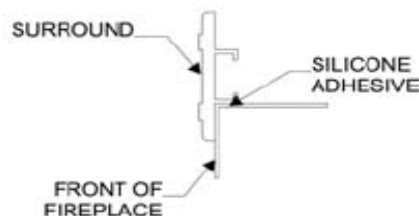


FIGURE 3



Packing List

PCSD__35W		Rev.Date 10/11.06	
SL-350	Sherwood wall cabinet		
<b>PART #</b>	<b>DESCRIPTION (NOTES)</b>	<b>QTY</b>	<b>INSPECTION    COMPLETE</b>
BB_04612-01305A	BREAST BOARD	1	
TP_05003-01805A	TOP	1	
LL_02914A00600A	LEFT LEG	1	
LR_02914A00600A	RIGHT LEG	1	
RN_04414A01514A	RETURN	2	
S0735	LEDGER BOARD	1	
H A R D W A R E   K I T   I N   T H E   B A G			
RAW80006	5mm x 34mm WOOD THREAD MINIFIX	6	
RAW80013	#8 x 1-1/4" SCREW DRYWALL	2	
RAW80014	#8 x 3" SCREW DRYWALL	2	
RAW80020	#6 x 5/8 SCREW	4	
UNLISTED	L - BRACKET	2	
H A R D W A R E   I N S T A L L E D   I N   T H E   C A B I N E T			
RAW80005	ZINC CAM	10	
RAW80009	8mm x 34mm DOUBLE HEAD MINIFIX	2	
RAW80018	8mm x 35mm WOODEN DOWEL	4	
ASSBY-SH-WALL-GAS-3	ASSEMBLY / INSTALLATION GUIDE	1	

Packed /Inspected by:\_\_\_\_\_ -

Packing List

PCSD\_\_55W

SL-550	Sherwood wall cabinet	Rev.Date 10/11/05		
<b><u>PART #</u></b>	<b><u>DESCRIPTION (NOTES)</u></b>	<b><u>QTY</u></b>	<b><u>INSPECTION</u></b>	<b><u>COMPLETE</u></b>
BB_04912-01305A	BREAST BOARD	1		
TP_05305-01805A	TOP	1		
LL_3200A00600A	LEFT LEG	1		
LR_03200A00600A	RIGHT LEG	1		
RN_05004A01514A	RETURN	2		
S0735	LEDGER BOARD	1		

HARDWARE INSTALLED IN THE CABINET

RAW80005	ZINC CAM	10
RAW80009	8mm x 34mm Double Head Minifix	2
RAW80018	8mm x 35mm WOODEN DOWEL	4

H A R D W A R E I N B A G

RAW80006	5mm x 34mm WOOD THREAD MINIFIX	6
RAW80013	#8 x 1-1/4" SCREW DRYWALL	2
RAW80014	#8 x 3" SCREW DRYWALL	2
RAW80020	#6 x 5/8 SCREW	4
UNLISTED	L - BRACKET	2
ASSBY-SH-WALL-GAS-3	ASSEMBLY / INSTALLATION GUIDE	1

Paced/Inspected by:\_\_\_\_\_

Packing List

PCSD__75W				
SL-750	Sherwood wall cabinet	Rev.Date 10/11/05		
PART #	DESCRIPTION (NOTES)	QTY	INSPECTION	COMPLTETE
BB_05412-01305A	BREAST BOARD	1		
TP_05803-01805A	TOP	1		
LL_03508A00600A	LEFT LEG	1		
LR_03508A00600A	RIGHT LEG	1		
RN_05312A01514A	RETURN	2		
S0735	LEDGER BOARD	1		
H A R D W A R E I N T H E C A B I N E T				
RAW80005	ZINC CAM	10		
RAW80009	8mm x 34mm DOUBLE HEAD MINIFIX	2		
RAW80018	8mm x 35mm WOODEN DOWEL	4		
H A R D W A R E I N B A G				
RAW80006	5mm x 34mm WOOD THREAD MINIFIX	6		
RAW80013	#8 x 1-1/4" SCREW DRYWALL	2		
RAW80014	#8 x 3" SCREW DRYWALL	2		
RAW80020	#6 x 5/8 SCREW	4		
UNLISTED	L - BRACKET	2		
ASSBY-SH-WALL-GAS-3	ASSEMBLY INSTALLATION GUIDE	1		

Packed /Inspected by:\_\_\_\_\_



Fireside Furnishings, a brand of Hearth & Home Technologies Inc.  
20802 Kensington Boulevard, lakeville, MN 55044  
[www.fireplaces.com](http://www.fireplaces.com)

**Please contact your Fireside Furnishings dealer with any questions or concerns. For the number of your nearest Fireside Furnishings dealer, please call 1-888-880-0192.**

-Notes-

---

---

---

---

---

---

---

### CAUTION

#### DO NOT DISCARD THIS MANUAL



- Important operating and maintenance instructions included.
- Read, understand and follow these instructions for safe installation and operation.
- Leave this manual with party responsible for use and operation.

