

Catalina Pier Cap for Peninsula Fireplace

Assembly/Installation Guide

These instructions apply only to the pier cap that will cover the top of the the firebox. PLEASE SEE THE FIREPLACE MANUFACTURER'S INSTALLATION INSTRUCTIONS TO ENSURE THAT ALL CLEARANCE AND INSTALLATION REQUIREMENTS ARE BEING MET. The walls and floor in the area of the installation should be clean, plumb, and level. Any major deviations from these conditions should be remedied before installing either the firebox or the Catalina. Any carpeting or other resilient material should be removed from the area prior to installation.

For fireplace installation instructions, refer to the fireplace manufacturer's instructions and recommendations that came with your unit. Be sure to investigate local building and fire codes before installing the fireplace. When you install the fireplace, be sure to follow manufacturer's instructions carefully in regard to locating, plumbing and wiring your new fireplace. You may be required to have this portion of the job performed by a licensed professional.

WARNING!! Improper installation, adjustment, alteration, service or maintenance of the fireplace can cause injury or property damage. For assistance or additional information, consult a qualified installer, service agency, or the gas supplier.

Please read and understand these general notes before beginning:

- 1. These instructions are as complete as possible, but cannot cover every local condition you may encounter during your installation. If, after reviewing these instructions, you have questions, call the number below or get the advice of a professional installer.
- 2. If you bought a primed or unfinished product, it is NOT ready for finishing. Some sanding and filling will be required before applying final finish. Inspect the surface of cabinet and sand or fill as necessary.
- 3. Marble or other stone surround should be installed before installing the pier cap. Regarding stone facing installation, these instructions apply only to Hearth Technologies marble or granite facings. If you are using other facing materials, it should be 3/4" thick.
- 4. For comments or questions about this cabinet, please call:1-888-880-0192, ext. 244 or 227. For ANY replacement parts or questions about fireplace, call the fireplace manufacturer.





Catalina Pier Cap for Peninsula Fireplace

Assembly/Installation Guide

Parts List and Diagram

Tools and assistance needed:

#2 Philips screwdriver or Battery driven screw gun Table saw or portable circular saw or jig saw Optional: High temp construction adhesive & applicator


You may need an assistant to help set cap in place.

Cabinet parts

A 1 Pier cap

B 4 Elevator blocks

C 1 Base platform

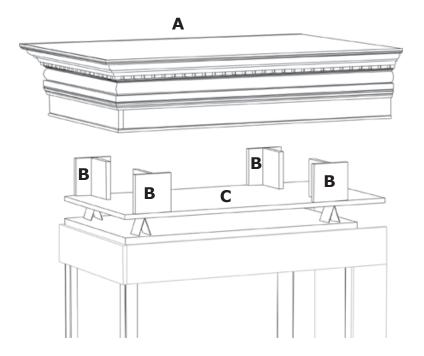




Catalina Pier Cap for Peninsula Fireplace

Assembly/Installation Guide

Assembly steps


1. Your Catalina pier cap has been sized to fit your fireplace. Check inside dimensions of cap against the outside dimensions of fireplace and stone before proceeding.

2.

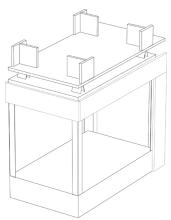


Locate base platform (C) and four elevator blocks (B). Place base on standoff legs on top of firebox. Place elevator blocks on base, each roughly over one of the standoffs as shown above.

3.

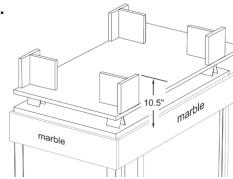

Measure 10.5" down side of fireplace from the top of one of the elevator blocks to determine where the bottom edge of Catalina will fall when installed. Determine if this position shows the amount of stone surround that you want. Typical stone reveal is 4" to 6".


4.

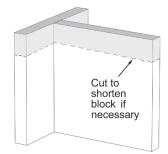

If the Catalina needs to be lower, cut the appropriate amount from the elevator blocks. You may need to take each block apart before cutting. Cut with a table saw or portable circular saw. Then re-assemble elevator blocks and place in their former positions on the base platform.

If the Catalina needs to be higher to reveal more stone, shim under each block with material of the proper thickness.

You may wish to use high temperature silicone to glue them to the platform and to the pier cap.

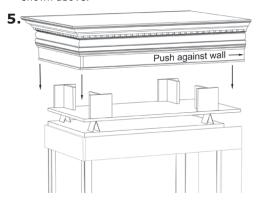

Now get someone to help you set the Catalina gently over the elevator blocks, lowering slowly until the blocks contact the underside of the Catalina top. Be especially careful as the scribe passes by the top edge of the stone surround. Make sure that the cap is pushed back against the wall and that everything is fitting properly.



Installation is complete.