

Assembly/Installation Guide


These instructions apply only to the cabinetry and facing material that will surround the firebox. **PLEASE SEE THE FIREPLACE MANUFACTURER'S INSTALLATION INSTRUCTIONS TO ENSURE THAT ALL CLEARANCE AND INSTALLATION REQUIREMENTS ARE BEING MET.** The walls and floor in the area of the installation should be clean, plumb, and level. Any major deviations from these conditions should be remedied before installing either the firebox or the cabinet.

For fireplace installation instructions, refer to the fireplace manufacturer's instructions that came with your unit. Be sure to investigate local building and fire codes before installing the fireplace. When you install the fireplace, be sure to follow manufacturer's instructions carefully in regard to locating and wiring your new fireplace. You may be required to have this portion of the job performed by a licensed professional.

WARNING!! Improper installation, adjustment, alteration, service or maintenance of the fireplace can cause injury or property damage. For assistance or additional information, consult a qualified installer, service agency, or the gas supplier.

Please read and understand these general notes before beginning:

1. These instructions are as complete as possible, but cannot cover every local condition you may encounter during your installation. If, after reviewing these instructions, you have questions, call the number below or get the advice of a professional installer.
2. If you bought a primed or unfinished product, it is NOT ready for finishing. Some sanding and filling will be required before applying final finish. Inspect the surface of cabinet and sand or fill as necessary. If this unit is to be painted, the preferred material is semi-gloss oil base paint.
3. Overview of main steps in assembly/installation:
 - A. Assemble cabinet.
 - B. Set fireplace, wire, or plug in to receptacle. Be sure to consult your local codes or building department regarding the location of the electrical outlet. Some areas require that the receptacle be accessible.
 - C. The fireplaces that fit these cabinets fall into four size categories--23" (CF230E), 26" (CF260E, SILH30E, QV26E), 31" (CF550E, SILH50E, QV32E), 36" (CF750E, SILH60E). At several points in the instructions there are slight differences in procedure between the two smaller and the two larger sizes.
4. For replacement parts, comments, questions about this cabinet, please call: 1-888-880-0192, ext. 243 or 244.

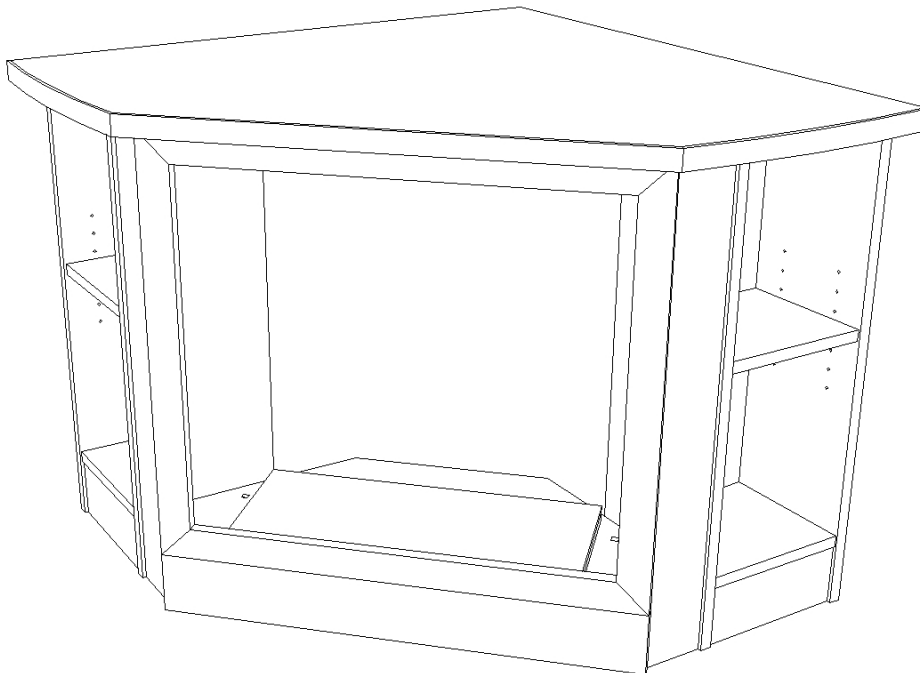

Please note:

The St. Michaels cabinet is for use with ELECTRIC fireplaces wired for 110/120 volts ONLY. This cabinet SHOULD NOT be used for 208/220/240 volt applications or with gas or woodburning fireplaces.

St. Michaels Corner Cabinet for CF230E, CF260E,
CF550E, CF750E, SILH30E, SILH50E, SILH60E,
QV26E, QV32E (110/120 VAC only)



Assembly/Installation Guide

Parts List and Diagram for cabinets
fitting all electric fireplaces listed
above


**Please note!! The
Alpine cabinet is for
use ONLY with
fireplaces wired for
110/120 volts AC.**

Tools and supplies needed:

#2 Philips screwdriver
or portable screw gun or electric drill (optional)
Medium straight bit screwdriver
Hammer


Hardware included:

- A 39 Cams, 15mm x 15mm
- B 39 Cam pins w/wood thread, 5mm x 34mm
- C 28 Wood dowels, 8mm x 35mm
- D 8 or 16 Shelf pins
- E 8 Hoffman dovetail keys
- F 8 Conformat bolts
- 4 3" utility screws (31" & 36" cabinets only)
(NOT SHOWN)

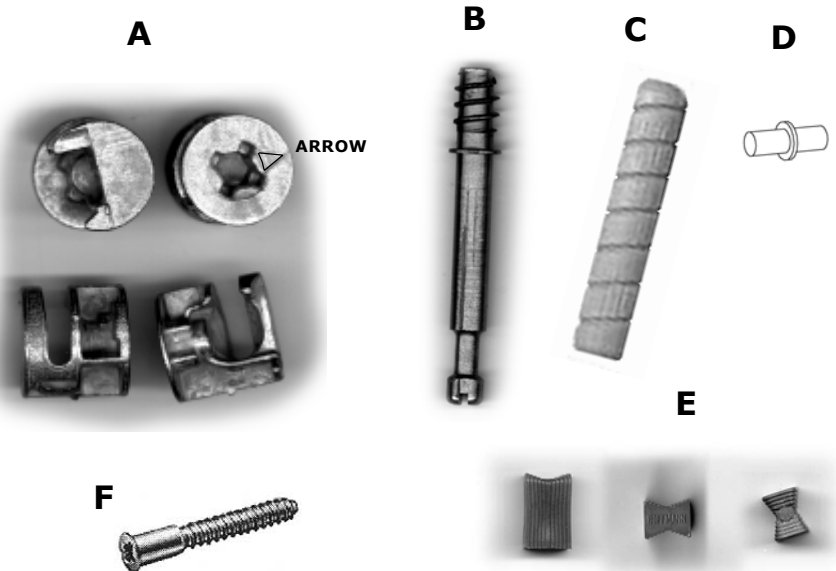


Main Cabinet:

- G 1 top
- H 2 outer sides, l & r
- I 2 inner sides, l & r
- J 2 bottoms, l & r
- K 1 center bottom
- L 2 backs
- M 1 bottom support
- N 2 side kicks
- O 1 center kick
- P 4 front frame members
- Q 2 or 4 adjustable shelves, l & r
- R 1 platform
- S 2 front panels, l & r

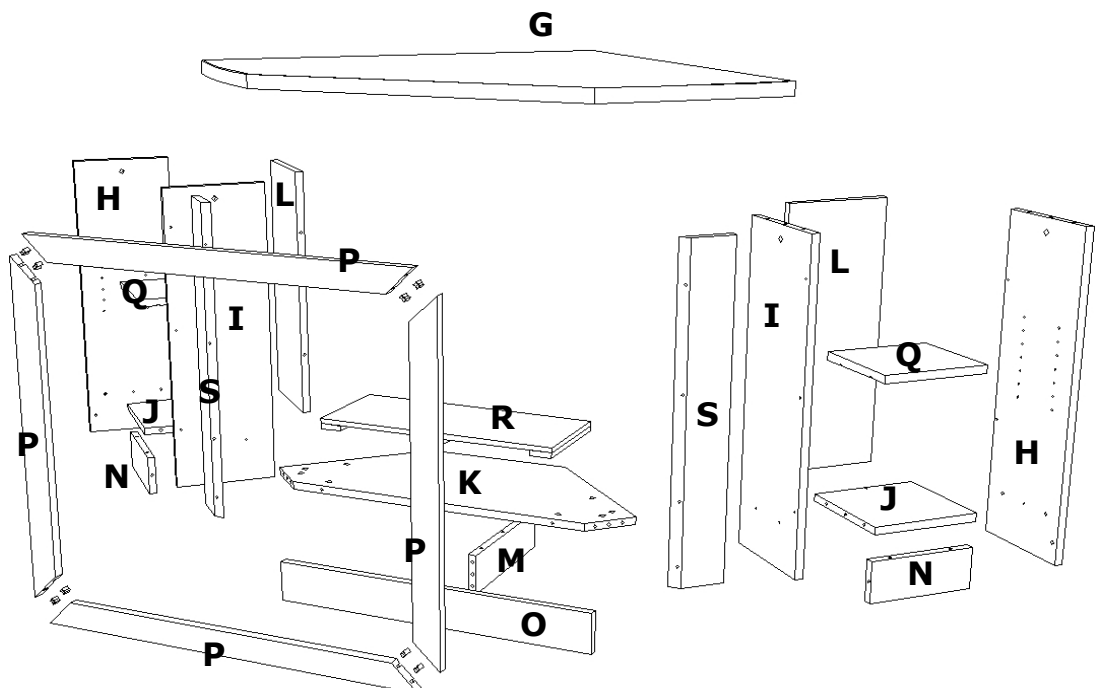


Assembly/Installation Guide


Please familiarize yourself with the four operations shown in these panels. They will be repeated throughout the assembly.

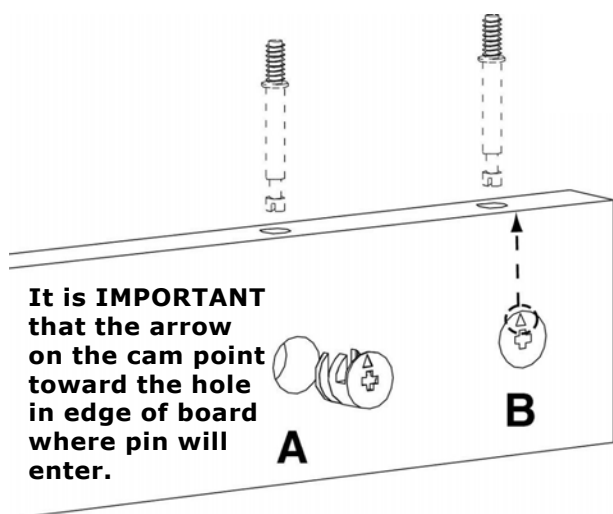


Typical cam insertion

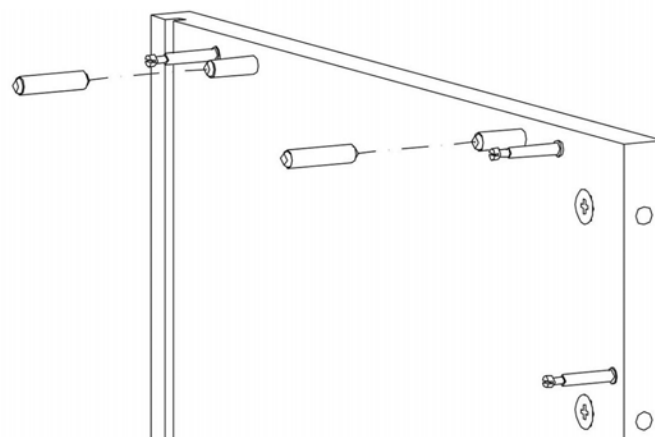

Typical dowel insertion

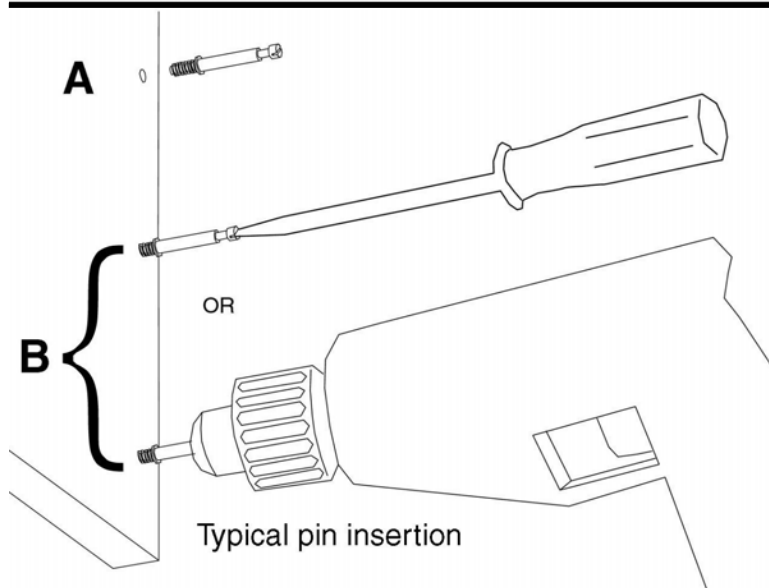

Typical pin insertion

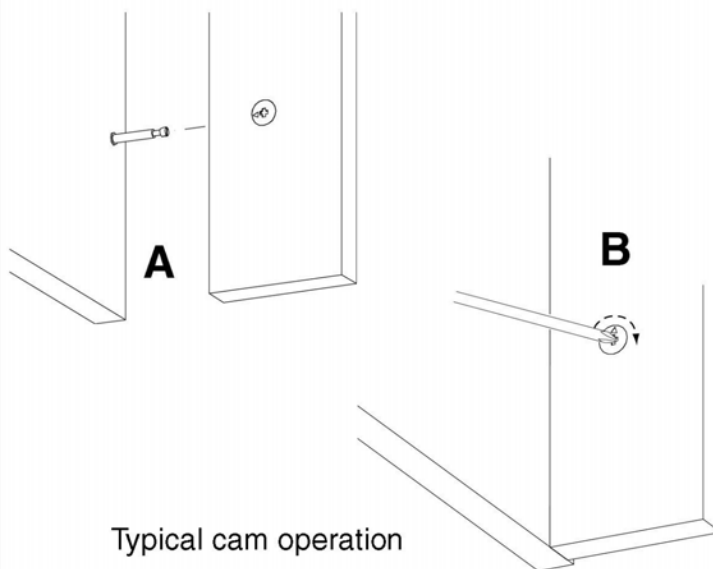


Typical cam operation

NOTE!! Be sure to align component edges as you tighten the cams.


Assembly/Installation Guide

Assembly steps


- 1.** Refer to previous page to see cam and pin insertion techniques. Assemble parts N, J, and L, bookcase back, bottom, and kick. Use three cams/pins for each unit. **Note that the parts are lettered so that you can find them in exploded diagram on page 2.**

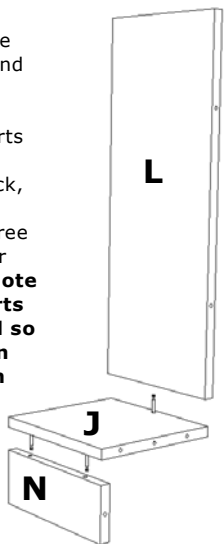


- 2.** Add sides, parts H and I. **Notice that 'I' has holes in BOTH sides.** Use six cams/pins and six dowels for each bookcase. See step 7 for overview.

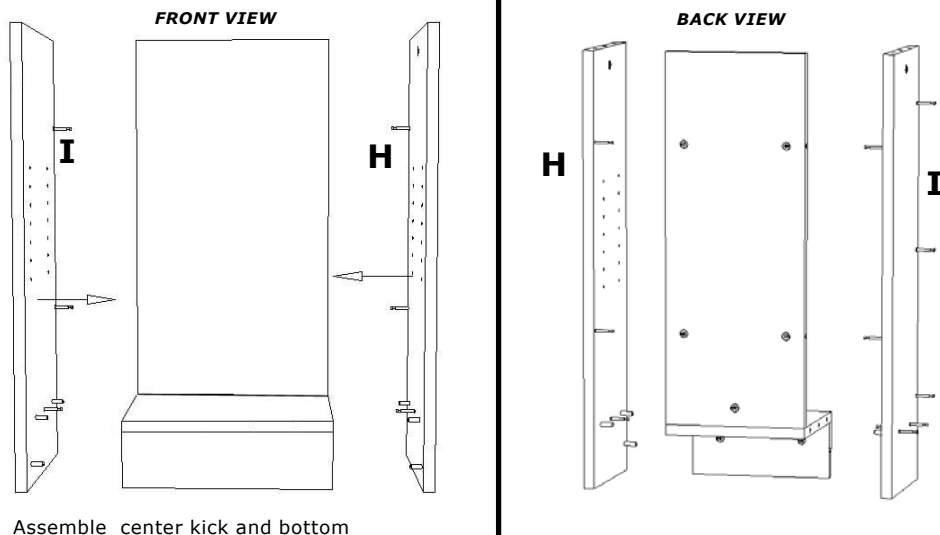


- 3.** Attach front panels, S, to center bottom shelf, K. Use one cam/pin and two dowels for each side.

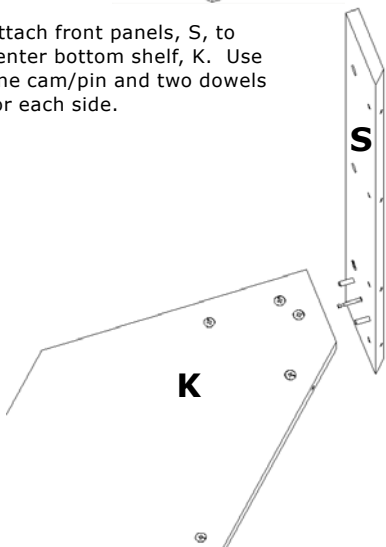


- 4.** Assemble center kick and bottom support, parts O and M. Use one cam/pin and two dowels.

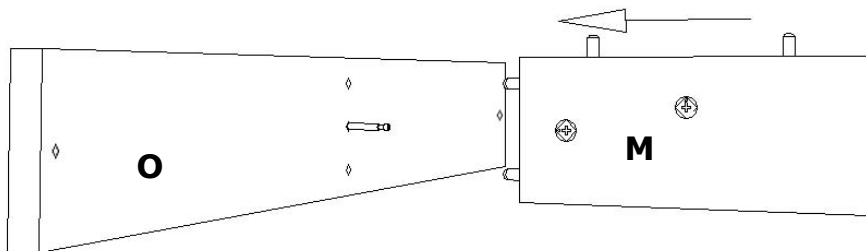

- 5.** Attach kick assembly from previous step to bottom of center shelf. Use one cam/pin and two dowels.

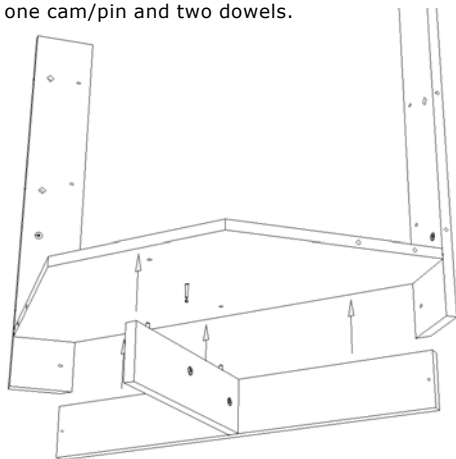



- 6.** Attach ends of center kick to bottom of front panels with two Conformat bolts, part F.

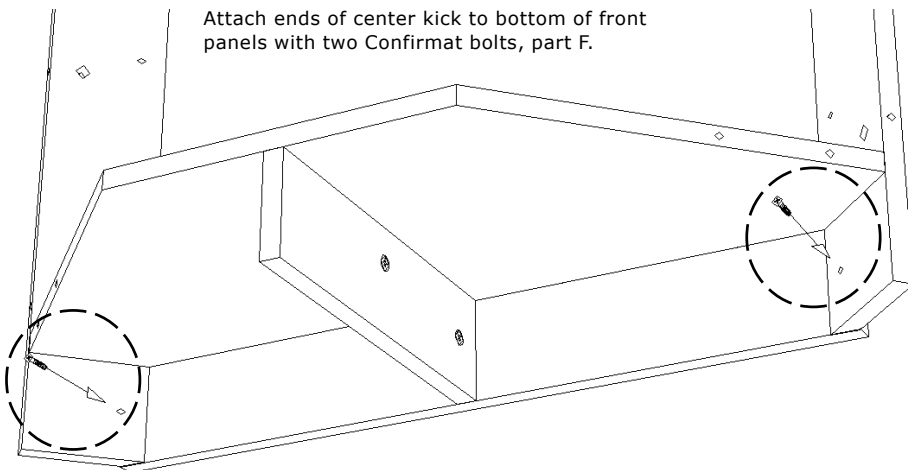


Assembly/Installation Guide

Assembly steps


- 7.** Attach bookcases to center assembly, using five cams/pins for each bookcase.

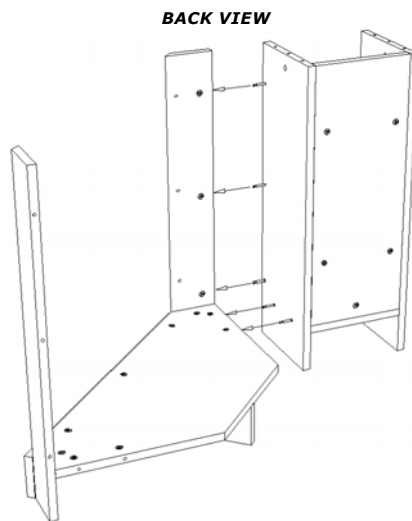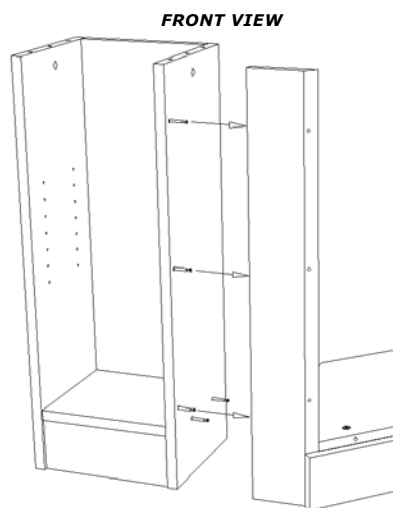

- 8.** Assemble front frame, eight dovetail keys.

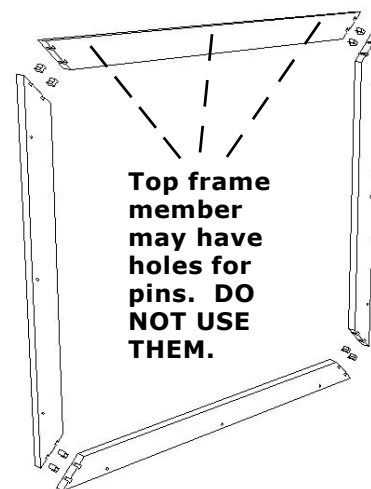

- 9.** Closeup of dovetail insertion. You may need a hammer to drive the keys home. Lay the frame face down on a flat, clean surface before driving the key.

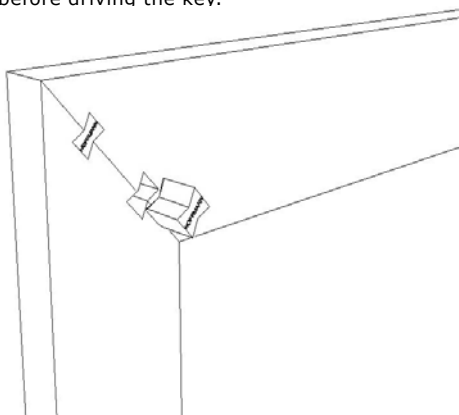


- 10.** Now set the cabinet near its final position. Place the platform, part R, on the bottom of center unit. If you have a CF550E, CF750E, SILH50E, SILH60E, QV32E, set fireplace in the cabinet on the platform before attaching the frame, or plan to lift fireplace over the top of the frame. (The other fireplaces (CF230E, CF260E, SILH30, QV26E) are inserted after frame is attached.)

Please note!! The Alpine cabinet is for use ONLY with 110 VOLT AC fireplaces.

WARNING!! Be sure to consult your local building codes regarding placement of the electrical receptacle. Some areas may require that the receptacle be accessible.



- 11.** The front frame is secured with three cams and pins at the bottom, as well as three Confirmat bolts each side, as shown in panels 12 and 13.

If you have set your fireplace inside the cabinet, slide it and the platform to the rear so that you have access to the cams that secure the bottom member of the front frame.

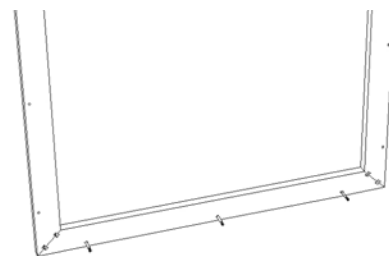

- 12.** **FRONT VIEW**

- 13.** **BACK VIEW**

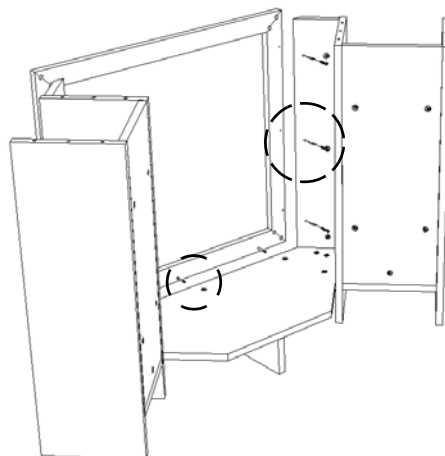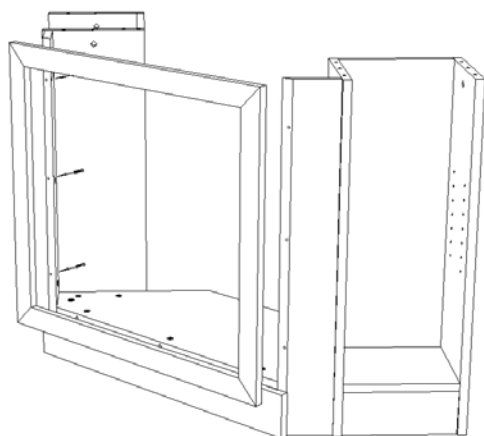

- 14.** Install shelf pins, part 'D', at the desired height in bookcases, and put in adjustable shelves. Smaller cabinets have two adj. shelves, larger ones have four.


Remember to plug fireplace in to electrical power supply.

Please note!! The St. Michaels cabinet is for use ONLY with 110 VOLT AC fireplaces.


St. Michaels Corner Cabinet for CF230E, CF260E, CF550E, CF750E, SILH30E, SILH50E, SILH60E, QV26E, QV32E (110/120 VAC only)

Assembly/Installation Guide

- 15.** The cabinets for CF550E, CF750E, SILH50E, SILH60E, QV32E fireplaces require ledger strips attached to the wall to support the rear portion of the top. Ledgers should be positioned with their top edges 1/2" higher than the height of the bookcase units.

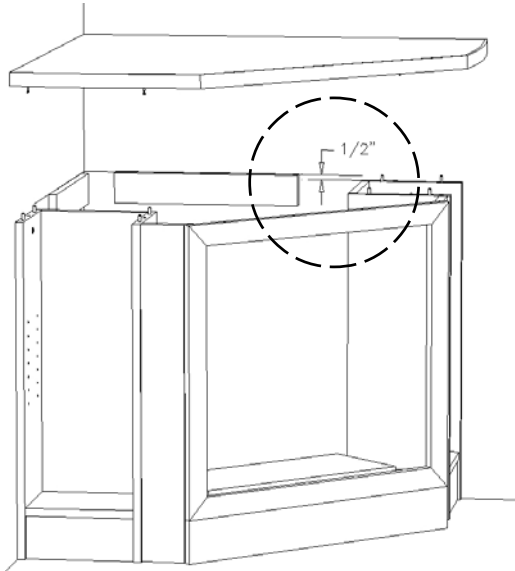

- 16.** Attach top with four cams and eight dowels. You can nail or glue the top to the ledger strips if you wish. If you have one of the smaller cabinets, insert the fireplace and plug it in.

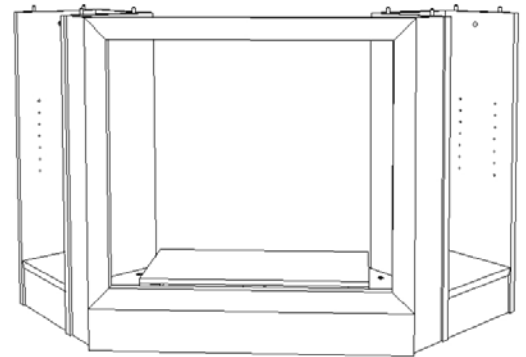

- 17.** Installation is complete.

