

QUADRA-FIRE®

TOP VENT ADAPTER INSTALLATION INSTRUCTIONS



Vertical adapter with heat shield and clean-out.

Part: TPVNT-2

For Free Standing Pellet Appliances:

Castile
Santa Fe

Included in Kit:

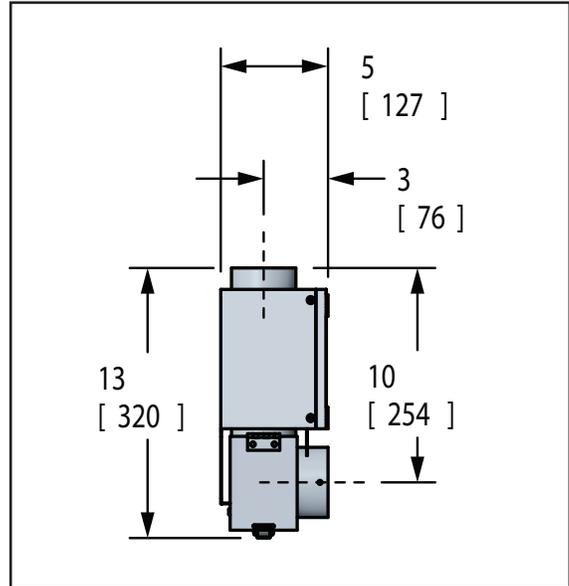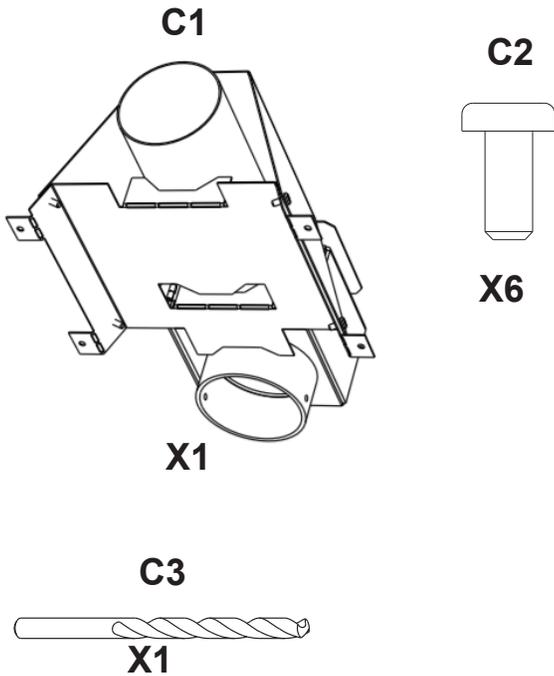

Tools Required:

Electric drill, #26 drill bit (included), #2 Phillips screwdriver, and high temp silicone (500° F).

Note:

Images of the appliance are just for reference. Actual appliance may vary.

1. Put a 1/4 inch bead of silicone on the outer edge of the appliance exhaust outlet (**Figure 1**).

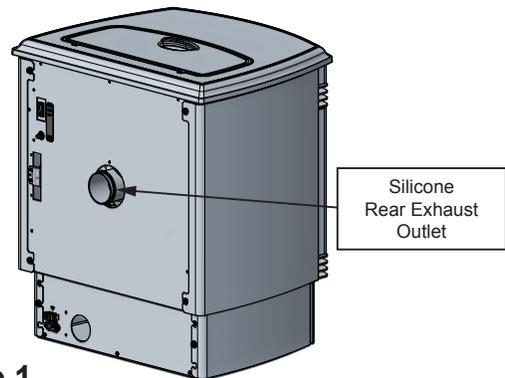


Figure 1

- Slide the Top Vent Adapter (C1) onto the exhaust outlet over bead of silicone making sure the adapter is in the vertical position (Figure 2).

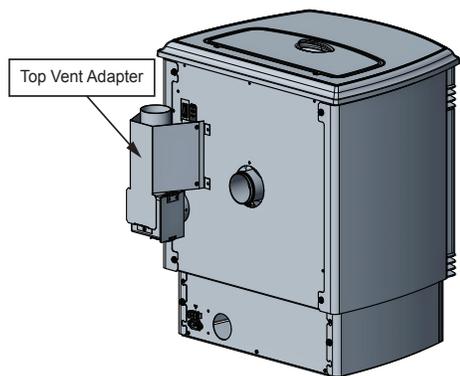


Figure 2

- Ensuring the adapter is in the vertical position. Drill 4 holes with #26 drill bit (C3) into the back of the stove using the outer shield on the adapter (C1) as a guide. Secure using four mounting screws (C2) (Figure 3).

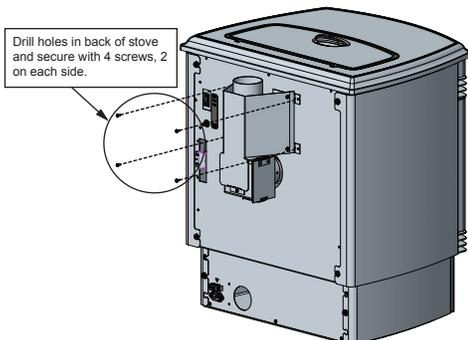


Figure 3

- Drill 2 holes with #26 drill bit (C3) through the Exhaust Outlet using the 2 holes already in the short horizontal pipe in the Top Vent Adapter as a guide. Secure using two mounting screws (C2) (Figure 4).

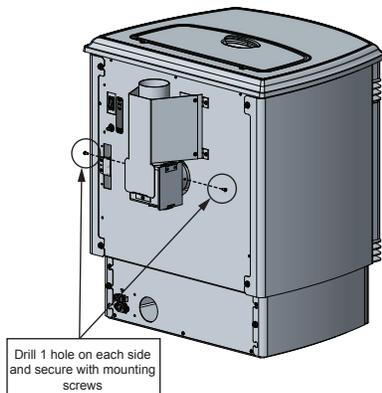


Figure 4

- Put a 1/4 inch bead of silicone on the outer edge of the Top Vent Adapter (C1) exhaust outlet (Figure 5). Following venting manufacturing instructions, install stove pipe to Top Vent Adapter (C1). (NOTE: Appliance adapter from venting manufacture may be required.) Do not apply silicone inside appliance exhaust outlet.

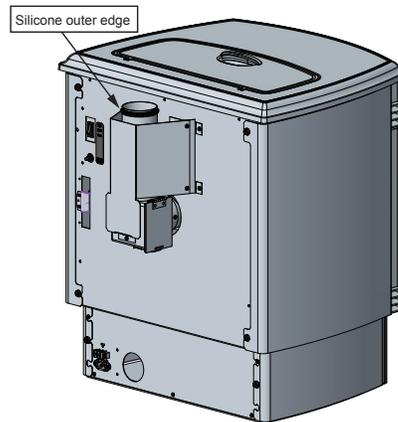


Figure 5

- After performing regular cleaning of venting, open the clean-out cover and vacuum out debris; close when complete (Figure 6).

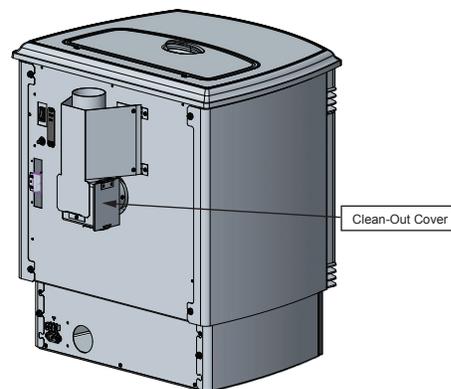


Figure 6