

BRICK-SI30

Models: Supreme-I30, Supreme I30-SP, Supreme-I30-NZ
- Refractory Installation Instructions -



Leave this manual with party responsible for use and operation.

CAUTION! Risk of Cuts or Abrasions. Wear protective gloves and safety glasses during installation.

NOTICE: Handle refractory panels with care. Refractory may chip or crack if dropped or impacted.

KIT COMPONENTS (Refractory shown in Figure 1)

- (1) Left Refractory
- (1) Right Refractory
- (1) Back Refractory

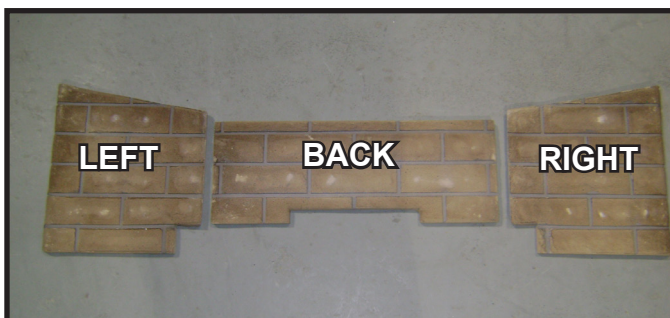


Figure 1. Refractory Kit Components

INSTALLATION

1. Install back refractory as shown in Figure 2. The back refractory panel should rest against the back of the firebox. To avoid damage, hold the back refractory in place until a side refractory panel is installed.



Figure 2. Install Back Refractory Panel



Figure 3. Install Side Refractory Panel

2. Install the right refractory panel as shown in Figure 3. Bend the refractory tab down to support and hold the refractory in place.
3. Repeat procedure for installing the left refractory panel.



Figure 4. Refractory Panels Installed

Please contact your Heat & Glo dealer with any questions or concerns.
For the location of your nearest Heat & Glo dealer, please visit www.heatnglo.com.

Heat & Glo, a brand of Hearth & Home Technologies Inc.
7571 215th Street West, Lakeville, MN 55044
www.heatnglo.com