

For Model:
ODCOUG-36
ODCOUG-42
Overlay Kits
4608-010 (36 inch)
4609-010 (42 inch)

These kits have been tested for use with specific Hearth & Home Technologies products. Check with your local building code agency before you begin installation to ensure compliance with local codes, including the need for permits and follow-up inspections. If you encounter any problems regarding code approvals, or if you need clarification of any of the instructions contained here, contact your Hearth & Home Technologies dealer. For the dealer nearest you, please visit www.hearthnhome.com.

CAUTION! Risk of Cuts, Abrasions or Flying Debris. Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

A. Overlay Kit Includes

- (1) Left Overlay
- (1) Right Overlay
- (1) 36 inch Rear Overlay or 42 inch Rear Overlay
- (1) Hardware Pack
- (2) Front Brackets
- (3) Top Brackets

B. Installation Instructions

1. Remove cap covers (if installed) from gas and electric lines. See Figure 1.



Figure 1

2. Remove logs if installed.
3. Move lava rock away from sides and rear of firebox if applicable. See Figure 2.



Figure 2

4. Remove protective coating off overlays.
5. Angle rear overlay and install behind burner assembly. Secure with upper refractory bracket. See Figure 3.

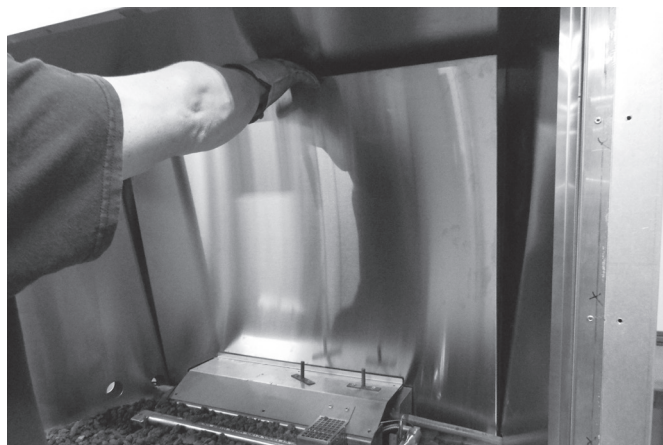


Figure 3

6. Install left side overlay tight against rear overlay. Secure with upper refractory bracket. See Figure 4.

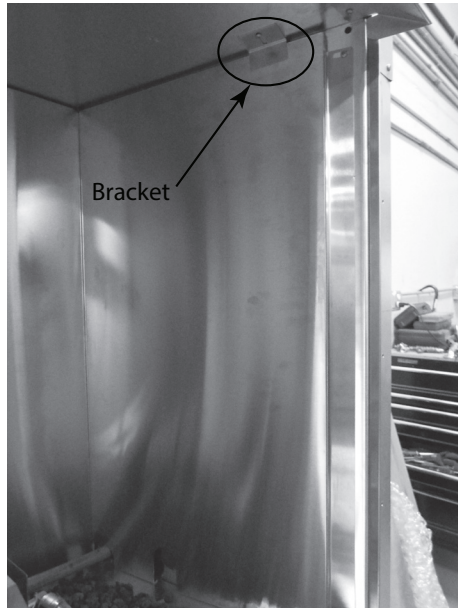


Figure 4

7. Repeat on opposite side.
8. Install front refractory bracket with two (2) screws. Slide back against side overlay. See Figure 5 and 6.



Figure 5



Figure 6

9. Replace lava rock if needed.
10. Replace logs if needed.
11. Replace cap covers.