

# Courtyard Standard Definition Log Set

MODEL: SDLOGS-ODCOUG

*Installation Instructions*

## For use with the Courtyard Outdoor Gas Appliance



Leave this manual with party responsible for use and operation.

**CAUTION! Risk of Injury.** Wear protective gloves and safety glasses during installation. Loose log fibers could cause skin irritation.

**CAUTION:** Logs are fragile, handle with care.

**NOTICE:** To simplify the installation process, positively identify each individual log before beginning installation.

**NOTE:** Before beginning the log installation the grate must be positioned correctly. It must be placed behind the grate retainer tabs on the left and right side of the burner assembly. The rear grate legs slide into the gaps on the left and right side of the burner assembly and must be forced down into place. Once the rear grate legs are in place, the grate should be pulled forward until fully engaged with the grate retainers on both sides. Failure to place grate correctly will result in diminished flame appearance and sooting. See Figure 1.

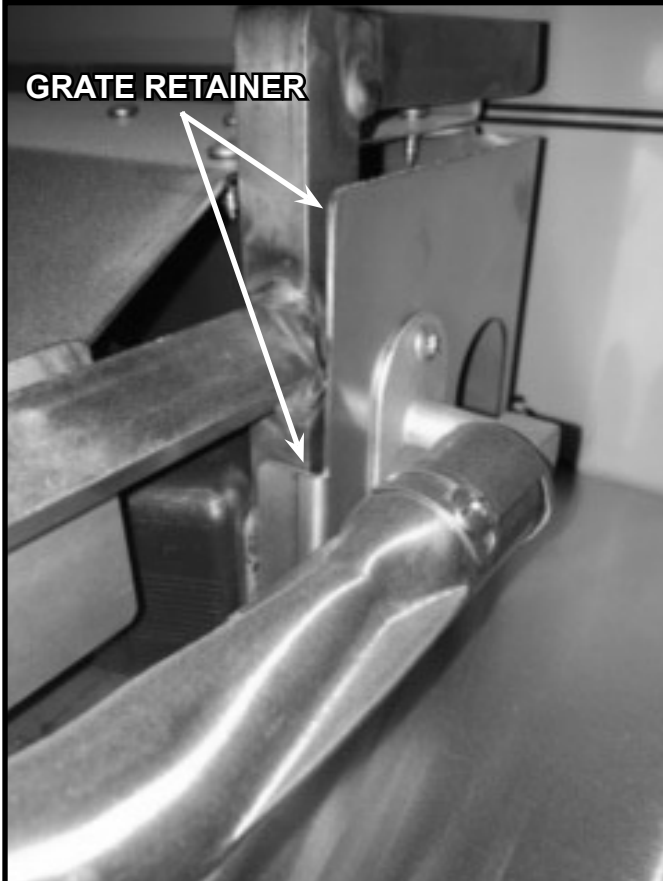


Figure 1. Position the Grate

**Note:** The supplied log pins located in the homeowner's manual will NOT be used with this log set. The log pins are for the HDLOGS-ODCOUG logs only.

1. Place Log #1 across the front of the grate making sure to engage the notch on the log with the grate tines. Slide the log completely forward until the log comes into contact with the angled tines. See Figure 2.
2. Logs #2 and #3 are to be placed on the grate at the same time. Log #3 has a pin at the top end and Log #2 has a hole at the top end. Place the pin into the hole to connect Log #2 and Log #4. The opposite end of each log will have a notch that will locate both on the grate bar directly behind the front log (Log #1).
3. Slide the Log #2/Log #3 assembly down closely behind the front log. Both logs will then lean back toward the rear of the firebox until coming to rest on the liner as shown in Figure 3.

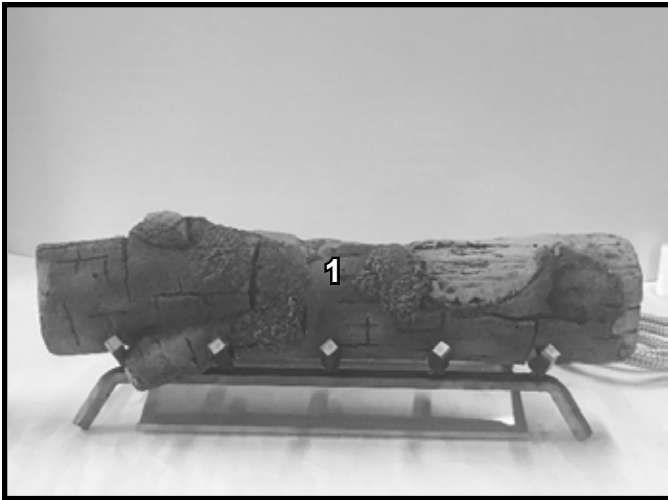


Figure 2.

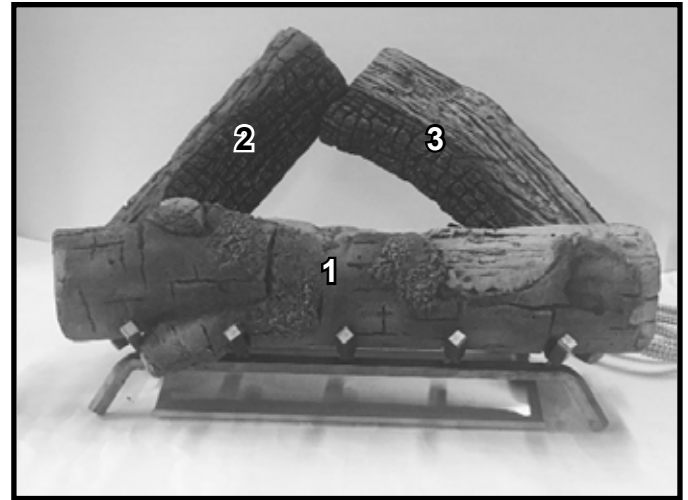


Figure 3.

4. Place log #4 over the two pins located on the right rear and right side of the front log. See Figure 4. The two rear logs may need to be pulled slightly forward to align the holes on Log #4.
5. Place log #5 in the same method as log #4. Locate the pins on the left rear and left front logs. Engage the holes on Log #5 with the pins on Log #2 and Log #1. See Figure 5.

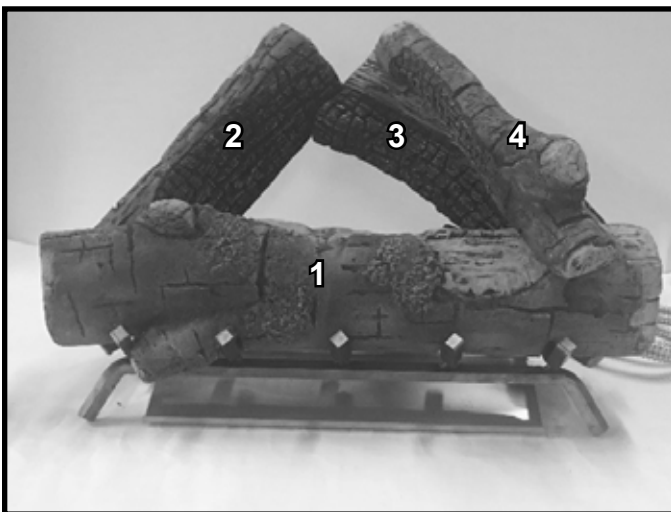


Figure 4.

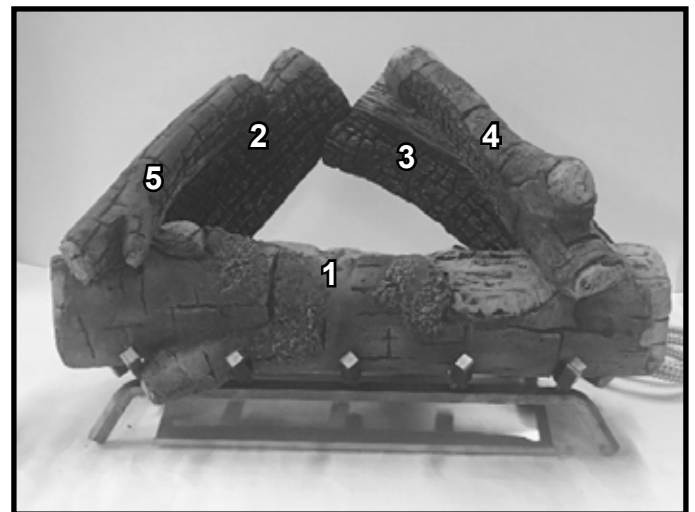


Figure 5.

<b>Standard Definition Log Service Parts</b>	
<b>Description</b>	<b>Part Number</b>
SD LOG #1	SRV4608-349
SD LOG #2	SRV4608-350
SD LOG #3	SRV4608-351
SD LOG #4	SRV4608-352
SD LOG #5	SRV4608-353

Outdoor Lifestyles, a brand of Hearth & Home  
Technologies  
7571 215<sup>th</sup> Street West, Lakeville, MN 55044  
[www.hearthnhome.com](http://www.hearthnhome.com)

Please contact your Outdoor Lifestyles  
dealer with any questions or concerns.  
For the location of your nearest Outdoor Lifestyles  
dealer, please visit [www.hearthnhome.com](http://www.hearthnhome.com).